

# SigenStor Home Maintenance Guide

Version: 03

Release date: 2024-09-27





### **Copyright Notice**

Copyright© 2024 Sigenergy Technology Co., Ltd. All Rights Reserved.

Description in this document may contain predictive statements regarding financial and operating results, product portfolio, new technology, configurations and features of product. Several factors could cause difference between actual results and those expressed or implied in the predictive statements. Therefore, description in this document is provided for reference purpose only and constitutes neither an offer nor an acceptance. Sigenergy Technology Co., Ltd. may change the information at any time without notice.

Sigenergy Technology Co., Ltd.

All trademarks and registered trademarks in this document belong to their owners.



www.sigenergy.com

#### **Contents**

Revision History	
Overview	5
Chapter 1 Safety Precautions	
1.1 Tool preparation	7
1.2 Label Description	
Chapter 2 Parts replacement	9
2.1 System power off	9
2.2 Cooling fan replacement	10
2.2.1 Cooling fan removal	10
2.2.2 Cooling fan installation	11
2.3 System power on	12



# **Revision History**

Version	Date	Description
03	2024.09.27	Updated 2.2 Cooling fan replacement
02	2024.05.31	Updated Chapter 1 Safety Precautions
01	2024.01.30	First official release.



### **Overview**

#### Introduction

This document mainly introduces the maintenance of the devices in the SigenStor Home system.

#### **Readers**

This document is suitable for professionals.

#### **Sign Definition**

The following signs may be used in the document to indicate security precautions or key information. Before installation, operation, and maintenance of the equipment, familiarize yourself with signs and their definitions.

Signs	Definition
<b>A</b> Danger	Danger. Failure to comply will result in death or serious personal injury.
<b>Marning</b>	Warning. Failure to comply will result in serious personal injury or property damage.
<b>A</b> Caution	Caution. Failure to comply will result in property damage.
Tips	Important or key information, and supplementary operation tips.



### **Chapter 1 Safety Precautions**

#### **Basic Information**

Before installation, operation, and maintenance of the equipment, familiarize yourself with this document.

The "Danger", "Warning", "Caution" items described in this manual are only supplementary to all precautions.



#### Danger

Do not perform operations on the equipment with power on. Before operation, please make sure all power supplies to the equipment have been disconnected, including but not limited to the grid side, inverter and diesel generator power switches.

#### Caution

- Trained or experienced electrical personnel are required to operate the equipment.
- Operators should be familiar with national/regional laws, regulations and standards, the structure and working principle of relevant systems.
- Please read carefully the operating requirements and precautions in this document and "Important Notice" before operating. Failure to do so may result in damage to the equipment that is not covered by the warranty.
- According to the packing list, check whether the components are complete and in good appearance. If any abnormality occurs, contact your sales agent in time.
- Check personal protective equipment and installation tools to ensure that they are complete; If not, please make them up.
- Please read the label instructions on the equipment carefully before operation.



### 1.1 Tool preparation

### **Protective equipment**







Safety glasses



Dust mask



Protective gloves



Insulating gloves



Insulating

shoes

#### **Installation tool**



Scissors



Cable tie



Tape measure



Insulation



Insulation sleeve

screwdriver set

set



Torque socket

wrench




## 1.2 Label Description

Symbols	Definition
4	Danger! High Voltage
	High voltage exists inside the equipment when powered on. Do
	not open the casing when the equipment is running. Any
	maintenance or servicing operations must be performed by
	trained and skilled electrical engineers.
	Warning! Life at risk.
	The equipment has potential hazards after running. Take proper
	protection when operating the equipment.
<b>A</b> (2)	After the equipment is powered off, the discharge of internal
	components is delayed. Wait 10 minutes until the equipment is
	fully discharged according to the label time.
	Warning! Risk of burns.
<u> </u>	The surface of the heat dissipation area is hot when the
	equipment is running. Do not touch it to avoid burns.
	Please refer to the instructions to operate the equipment.
	Earthing mark



## **Chapter 2 Parts replacement**


## 2.1 System power off

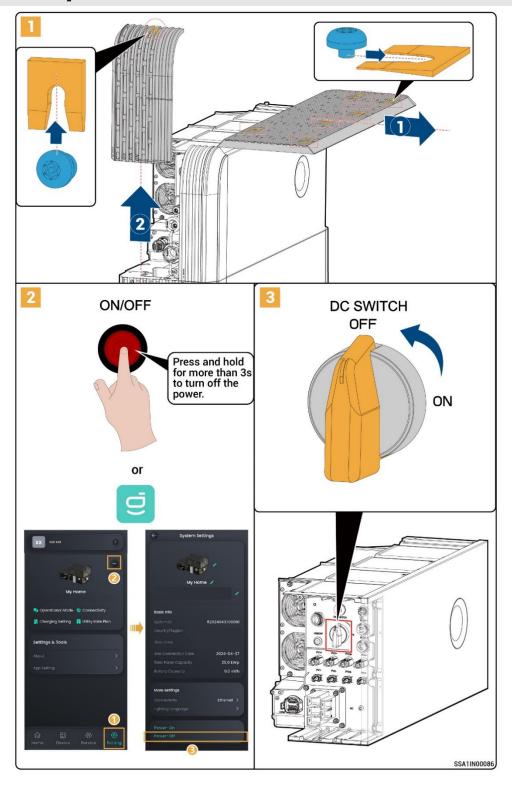




## 2.2 Cooling fan replacement

### 2.2.1 Cooling fan removal

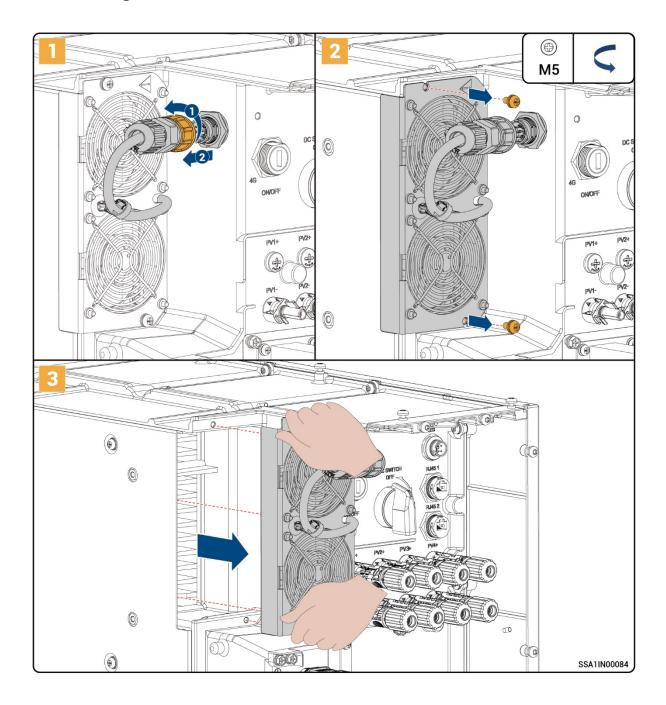



### 2.2.2 Cooling fan installation

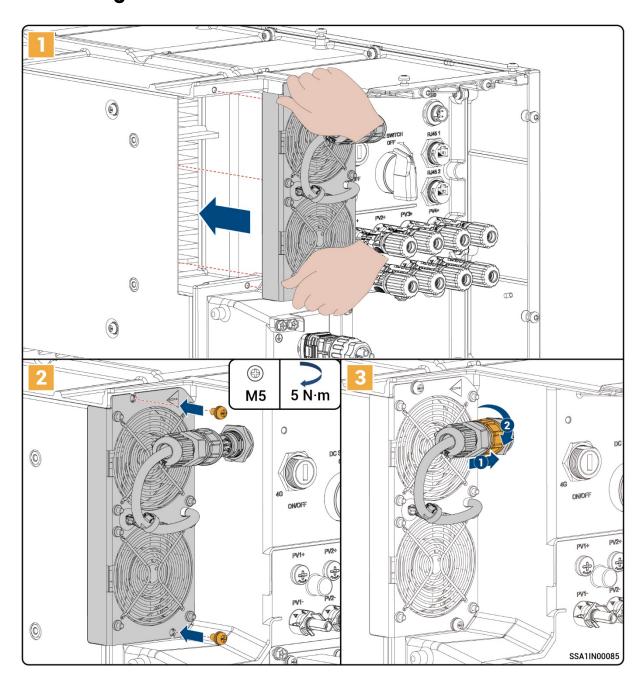



## 2.3 System power on

