



# Operating Instructions

---

## Fronius Verto

15.0 208-240 / 18.0 208-240

25.0 / 27.0

30.0 / 33.3

36.0 480



EN | Operating Instructions



42,0426,0490,EA

015-15012026



# Table of contents

<b>General information</b>	<b>7</b>
Safety information.....	9
Explanation of warnings and safety instructions.....	9
Safety instructions and important information.....	9
Environmental conditions.....	10
Electromagnetic fields.....	10
Data on noise emission values.....	11
EMC measures.....	11
Ground conductor.....	11
Protection of people and equipment.....	12
Central grid and system protection.....	12
WSD (wired shutdown).....	12
RCMU.....	12
Insulation monitoring.....	12
AFCI - Arc Fault Circuit Interrupter (Arc Guard).....	12
Safe state.....	13
General.....	14
Information on the device.....	14
How information is presented in the document.....	15
Target group.....	15
Data security.....	15
Copyright.....	16
Fronius Verto.....	17
Device concept.....	17
Scope of supply.....	17
Backup Power Boost.....	17
Thermal concept.....	18
Fronius Solar.web.....	18
Local communication.....	19
Utilization in accordance with "intended purpose".....	20
Intended use.....	20
Foreseeable misuse.....	20
Provisions for the photovoltaic system.....	20
Surge protection device (SPD).....	21
Surge protection device SPD.....	21
Operating controls and connections.....	22
Connection area.....	22
PV connections.....	23
Ground electrode bolt.....	23
Mounting option for third-party components.....	23
DC disconnect.....	24
Data communication area.....	24
Button functions and LED status indicator.....	25
Schematic internal wiring of IOs.....	27
<b>Installation</b>	<b>29</b>
General.....	31
Tools required.....	31
Quick-fastener system.....	31
System component compatibility.....	32
Installation location and position.....	33
Choosing the location of the inverter.....	33
Installation position of inverter.....	34
Installing the mounting bracket and attaching the inverter.....	35
Selecting the mounting material.....	35
Properties of the mounting bracket.....	35

Do not deform the mounting bracket.....	35
Fitting the mounting bracket to a wall.....	35
Attaching the inverter to the mounting bracket.....	36
Requirements for connecting the inverter.....	37
Connecting aluminum cables.....	37
Different cable types.....	37
Permitted cables for the electrical grid connection.....	37
Permitted cables for the electrical DC connection.....	38
Permitted cables for the data communication connection.....	38
Cable diameter of the AC cable.....	38
Maximum alternating current fuse protection.....	39
Connecting the inverter to the public grid (AC side).....	40
Safety.....	40
Connecting the inverter to the public grid (AC side).....	40
Connecting the inverter to the public grid with the PEN conductor (AC side).....	43
Replacing the PG screw joint.....	45
Connecting solar module strings to the inverter.....	46
General information about PV modules.....	46
Safety.....	46
PV Generator, general.....	47
Connecting solar module strings to the inverter.....	47
Connecting the data communication cables.....	49
Modbus participants.....	49
Routing data communication cables.....	49
Installing the WSD (wired shutdown).....	51
Closing and commissioning the inverter.....	53
Closing the inverter's connection area/housing cover, and commissioning.....	53
Starting the inverter for the first time.....	53
Installation with the app.....	54
Installation with the browser.....	54
De-energizing the inverter and switching it back on.....	56
Risk of rupture.....	56
De-energizing the inverter and switching it back on.....	56

**Settings – User interface of the inverter 57**

User settings.....	59
User login.....	59
Selecting languages.....	59
Device configuration.....	60
Components.....	60
Functions and I/Os.....	60
Demand Response Modes (DRM).....	61
Inverter.....	61
System.....	65
General.....	65
Update.....	65
Setup wizard.....	65
Restoring factory settings.....	65
Event log.....	65
Information.....	65
License Manager.....	65
Licensing.....	66
Support.....	66
Communication.....	68
Network.....	68
Modbus.....	69
Cloud control.....	71
Solar API.....	71
Fronius Solar.web.....	71
Safety and grid requirements.....	73
Country setup.....	73

Requesting inverter codes in Solar.SOS .....	73
Absolute Generation Limit .....	74
Import limitation .....	74
Export limitation .....	74
Feed-in limit – examples.....	76
Dynamic feed-in limit with multiple inverters.....	77
I/O Power Management .....	80
Connection diagram - 4 relays.....	81
I/O power management settings - 4 relays .....	83
Connection diagram - 3 relays.....	83
I/O power management settings - 3 relays .....	85
Connection diagram - 2 relays.....	85
I/O power management settings - 2 relays .....	87
Connection diagram - 1 relay.....	87
I/O power management settings - 1 relay .....	89
Connecting the ripple control receiver with several inverters.....	89

**Appendix** **91**

Service, maintenance and disposal .....	93
General.....	93
Maintenance.....	93
Cleaning.....	93
Operation in dusty environments .....	93
Safety .....	94
Disposal.....	94
Warranty provisions .....	95
Fronius manufacturer's warranty.....	95
Status codes and remedy .....	96
Display.....	96
Status codes.....	96
Technical data.....	97
Verto 15.0 208-240 .....	97
Verto 18.0 208-240 .....	98
Verto 25.0 .....	100
Verto 27.0 .....	102
Verto 30.0.....	103
Verto 33.3 .....	105
Verto 36.0 480 .....	107
Protection devices.....	108
WLAN .....	109
Surge protection device DC Verto 25.0–27.0 SPD type 1+2 .....	109
Surge protection device DC Verto 25.0 - 27.0 SPD type 2.....	109
Surge protection device DC Verto 30.0 - 33.3 SPD type 1+2.....	110
Surge protection device DC Verto 30.0 - 33.3 SPD type 2.....	110
Explanation of footnotes .....	111
Integrated DC disconnect .....	111



# **General information**



# Safety information

---

## Explanation of warnings and safety instructions

The warnings and safety instructions in these instructions are intended to protect people from possible injury and the product from damage.

### **DANGER!**

#### **Indicates an immediately dangerous situation**

Serious injury or death will result if appropriate precautions are not taken.

- ▶ Action step to escape the situation

### **WARNING!**

#### **Indicates a potentially dangerous situation**

Death or serious injury may result if appropriate precautions are not taken.

- ▶ Action step to escape the situation

### **CAUTION!**

#### **Indicates a potentially dangerous situation**

Minor or moderate injury may result if appropriate precautions are not taken.

- ▶ Action step to escape the situation

### **NOTE!**

**Indicates impaired work results and/or damage to the device and components**

The warnings and safety instructions are an integral part of these instructions and must always be observed to ensure the safe and proper use of the product.

---

## Safety instructions and important information

The device has been manufactured in line with the state of the art and according to recognized safety standards.

### **WARNING!**

#### **Incorrect operation or misuse**

Serious to fatal injuries to the operator or third parties as well as damage to the device and other property of the operator may result.

- ▶ All persons involved in the commissioning, maintenance, and servicing of the device must be appropriately qualified and have knowledge of working with electrical installations.
- ▶ Read these operating instructions in full and follow them carefully and precisely.
- ▶ The operating instructions must always be kept to hand wherever the device is being used.

**IMPORTANT!**

In addition to the operating instructions, observe the following general and local rules:

- Accident prevention
- Fire protection
- Environmental protection

**IMPORTANT!**

Labels, warning notices, and safety symbols are located on the device. A description can be found in these operating instructions.

**IMPORTANT!**

All safety and danger notices on the device:

- Must be kept in a legible state
- Must not be damaged/marked
- Must not be removed
- Must not be covered, have anything stuck on them, or painted over

**WARNING!****Tampered-with and non-functioning protection devices**

Serious to fatal injuries as well as damage to the device and other property of the operator may result.

- ▶ Never bypass or disable protection devices.
- ▶ Any protection devices that are not fully functional must be repaired by an authorized specialist before the device is switched on.

**WARNING!****Loose, damaged, or under-dimensioned cables**

An electric shock can be fatal.

- ▶ Use undamaged, insulated, and adequately dimensioned cables.
- ▶ Fasten the cables according to the specifications in the operating instructions.
- ▶ Loose, damaged, or under-dimensioned cables must be repaired or replaced immediately by an authorized specialist.

**NOTE!****Installations or modifications to the device**

The device may be damaged

- ▶ Do not carry out any alterations, installations, or modifications to the device without first obtaining the manufacturer's permission.
- ▶ Damaged components must be replaced.
- ▶ Only use original spare parts.

---

**Environmental conditions**

Operation or storage of the device outside the stipulated area will be deemed as not in accordance with the intended purpose.

---

**Electromagnetic fields**

During operation, due to the high electrical voltages and currents, local electromagnetic fields (EMF) occur in the environment around the inverter and the Fronius system components as well as in the area of the PV modules including the supply lines.

In the case of exposure to humans, the required limit values are observed when the products are used in line with the intended use and the recommended distance of at least 20 cm is observed.

If these limit values are complied with, according to current scientific knowledge, no health-endangering effects from EMF exposure are to be expected. If wearers of prostheses (implants, metal parts in and on the body) as well as active physical aids (pacemakers, insulin pumps, hearing aids, etc.) are in the vicinity of components of the PV system, they must consult with the responsible doctor regarding possible health risks.

---

**Data on noise emission values**

The sound pressure level of the inverter is indicated in the [Technical data](#).

---

The cooling of the device takes place via an electronic temperature control system at the lowest possible noise level and depends on the power used, ambient temperature, and the soiling level of the device, etc.

---

It is not possible to provide a workplace-related emission value for this device, because the actual sound pressure level is heavily influenced by the installation situation, the power quality, the surrounding walls, and the properties of the room in general.

---

**EMC measures**

In certain cases, even though a device complies with the standard limit values for emissions, it may affect the application area for which it was designed (e.g., when there is equipment that is susceptible to interference at the same location or if the site where the device is installed is close to either radio or television receivers). If this is the case, the operator is obliged to take action to rectify the situation.

---

**Ground conductor**

Connection of a point in the device, system, or installation to ground to protect against electric shock in the event of a fault. When installing an inverter from safety class 1 (see [Technical data](#)), a ground conductor connection is required.

When connecting the ground conductor, ensure that it is secured to prevent unintentional disconnection. All of the points listed in the chapter headed [Connecting the inverter to the public grid \(AC side\)](#) on page 40 must be observed. When using cable glands, ensure that the ground conductor is last to be subjected to a load in the event of a failure of the cable gland. The respective national standards and regulations and requirements for minimum cross-section must be observed when connecting the ground conductor.

# Protection of people and equipment

---

## Central grid and system protection

The inverter offers the option to use the integrated AC relays as section switches in conjunction with a central grid and system protection unit (in accordance with VDE-AR-N 4105:2018:11 §6.4.1). For this purpose, the central trigger device (switch) must be integrated into the WSD chain as described in chapter [WSD \(wired shutdown\)](#) on page [12](#).

---

## WSD (wired shutdown)

The wired shutdown (WSD) interrupts the inverter's grid power feed if the trigger device (switch, e.g., Emergency Stop or fire alarm contact) has been activated.

If an inverter (slave) fails, it is bypassed and the other inverters continue operating. If a second inverter (slave) or the inverter (master) fails, the operation of the entire WSD chain is interrupted.

For installation, see [Installing the WSD \(wired shutdown\)](#) on page [51](#).

---

## RCMU

The inverter is equipped with an RCMU (RCMU = residual current monitoring unit) according to IEC 62109-2 and IEC63112. It monitors residual currents from the PV module up to the AC output and disconnects the inverter from the grid when an improper residual current is detected.

---

## Insulation monitoring

In the case of photovoltaic systems with ungrounded PV modules, the inverter checks the resistance between the positive or negative pole of the photovoltaic system and the ground potential before starting grid power feed operation. In the event of a short circuit between the DC+ or DC- cable and ground (e.g., due to inadequately insulated DC cables or defective PV modules), feeding into the public grid is prevented.

---

## AFCI - Arc Fault Circuit Interrupter (Arc Guard)

An AFCI (Arc Fault Circuit Interrupter) protects against arc faults and, in the narrower sense, is a protection device in the event of contact errors. The AFCI evaluates faults that occur in the current and voltage flow on the DC side using an electronic circuit and shuts down the circuit if a contact error is detected. This prevents overheating at poor contact points and, ideally, possible fires.

### CAUTION!

#### **Danger from faulty or incorrect DC installation.**

This may result in a risk of damage and, as a consequence, risk of fire in the PV system due to prohibited thermal loads that occur during an arc.

- ▶ Check the plug connections to ensure that they are correct.
- ▶ Repair faulty insulation correctly.
- ▶ Perform connection work in line with the instructions.

### **IMPORTANT!**

Fronius will not bear any costs that may arise due to a detected electric arc and its consequences. Fronius accepts no liability for damage which may occur des-

pite the integrated Arc Fault Circuit Interrupter/interruption (e.g., due to a parallel arc).

**IMPORTANT!**

Active PV module electronics (e.g., power optimizers) can impair the function of the Arc Fault Circuit Interrupter. Fronius cannot guarantee the correct function of the Arc Fault Circuit Interrupter in combination with active PV module electronics.

**Reconnection behavior**

Grid power feed operation is interrupted for at least 5 minutes after an arc has been detected. Depending on the configuration, grid power feed operation is then automatically resumed. If several arcs are detected within a period of 24 hours, grid power feed operation can also be permanently interrupted until a manual reconnection has been performed.

---

**Safe state**


In the safe state, the inverter infeed is deactivated and is disconnected from the grid by the AC relay opening. The inverter switches to the safe state when the following events occur:

1. One of the following safety devices triggers:
  - WSD
  - Insulation monitoring
  - RCMU
  - AFCI
2. The diagnostic function of the inverter detects a malfunction of these safety devices.

# General

## Information on the device

Technical data, warning notices, labels, and safety symbols are located on and in the inverter. This information must be kept in a legible condition and must not be removed, covered, pasted over, or painted over. They warn against incorrect operation, which may result in serious injury and property damage.

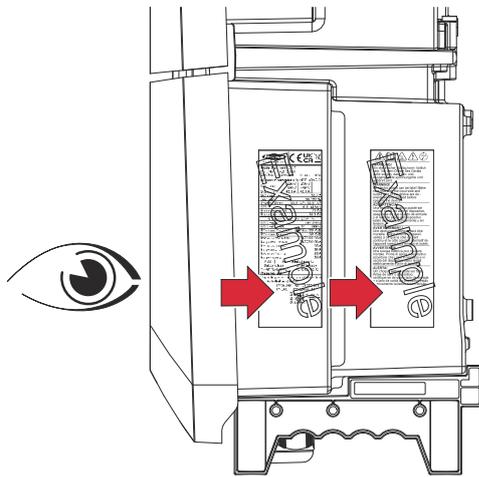

### Symbols on the rating plate:



CE label – confirms compliance with applicable EU directives and regulations.



WEEE marking – waste electrical and electronic equipment must be collected separately and recycled in an environmentally sound manner in accordance with the European Directive and national law.

### Safety symbols:



Integrated switch disconnect on the input side of the inverter with switch-on, switch-off, and isolating function according to IEC 60947-3 and AS 60947.3. The values required by the applicable standard for  $I_{th}$  solar +60°C are given.



#### General warning sign

Observe the danger shown on the additional sign(s).



#### Observe instructions

Do not use the functions described here until you have fully read and understood the following documents:

- These operating instructions, especially the safety rules.
- Read and understand all operating instructions for the system components of the photovoltaic system, especially the safety rules.



#### Warning of hot surface

Take care not to come into contact with hot surfaces.



#### Warning of electrical voltage

Take care not to come into contact with electrical voltage.



Allow the capacitors of the inverter to discharge (2 minutes).

### Warning notice text:

#### WARNING!

An electric shock can be fatal. Before opening the device, ensure that the input and output sides are de-energized and disconnected.

---

**How information is presented in the document**

The conventions regarding how information is presented in the document, which are set out below, have been defined in order to increase the readability and comprehensibility of the document.

**Application notes**

**IMPORTANT!** Indicates application notes and other useful information. It does not indicate a harmful or dangerous situation.

**Software**

Software functions and elements of a graphical user interface (e.g., buttons, menu items) are highlighted in the text with this **mark up**.

Example: Click **Save**.

**Instructions for action**

**1** Action steps are displayed with consecutive numbering.

- ✓ *This symbol indicates the result of the action step or the entire instruction.*

---

**Target group**

This document provides detailed information and instructions to ensure that all users can use the device safely and efficiently.

- The information is intended for the following groups of people:
  - **Technical specialists:** People with appropriate qualifications and fundamental electronic and mechanical knowledge, who are responsible for the installation, operation, and maintenance of the device.
  - **End users:** People that use the device in daily operation and want to understand its basic functions.
- Regardless of any qualifications, only perform the activities listed in this document.
- All persons involved in the commissioning, maintenance, and servicing of the device must be appropriately qualified and have knowledge of working with electrical installations.
- The definition of professional qualifications and their applicability are subject to national law.

---

**Data security**

With regard to data security, the user is responsible for:

- Backing up any changes made to the factory settings
- Saving and storing personal settings

## NOTE!

### Data security for network and Internet connection

Unsecured networks and a lack of safeguards can result in data loss and unauthorized access. Observe the following points for safe operation:

- ▶ Operate inverters and system components on a private, secure network. A WiFi network is considered secure if security standard WPA 2 is satisfied as a minimum.
- ▶ Keep the network devices (e.g., WiFi routers) up to date with the latest technology.
- ▶ Keep the software and/or firmware updated.
- ▶ Use a wired network to ensure a stable data connection.
- ▶ For security reasons, do not make inverters and system components accessible from the Internet via port forwarding or Port Address Translation (PAT).
- ▶ Use the solutions provided by Fronius for monitoring and remote configuration.
- ▶ The optional communication protocol Modbus TCP/IP<sup>1)</sup> is an unsecured interface. Only use Modbus TCP/IP if no other secured data communication protocol (MQTT<sup>2)</sup> is possible (e.g., compatibility with older Smart Meters).

1) TCP/IP - Transmission Control Protocol/Internet Protocol

2) MQTT - Message Queuing Telemetry Protocol

---

## Copyright

Copyright of these operating instructions remains with the manufacturer.

Text and illustrations were accurate at the time of printing, subject to change. We are grateful for suggestions for improvement and information on any discrepancies in the operating instructions.

# Fronius Verto

---

## Device concept

The inverter transforms the direct current generated by the solar modules into alternating current. This alternating current is fed into the public grid and synchronized with the mains voltage in use.

The inverter is intended for use in grid-connected photovoltaic systems.

The inverter automatically monitors the public grid. Whenever conditions in the electric grid are inconsistent with standard conditions (for example, grid switch-off, interruption), the inverter will immediately stop producing power and interrupt the supply of power into the grid.

The grid is monitored by monitoring the voltage, frequency, and islanding conditions.

After installation and commissioning, the inverter's operation is fully automatic; the inverter draws the maximum possible power from the PV modules.


Depending on the operating point, this power is used in the home or fed into the grid.

When its temperature gets too high, the inverter automatically reduces the output power or switches off completely, in order to protect itself.

Reasons for the temperature being too high include a high ambient temperature or insufficient heat dissipation (for example, inadequate heat dissipation when installed in switch cabinets).

---


## Scope of supply

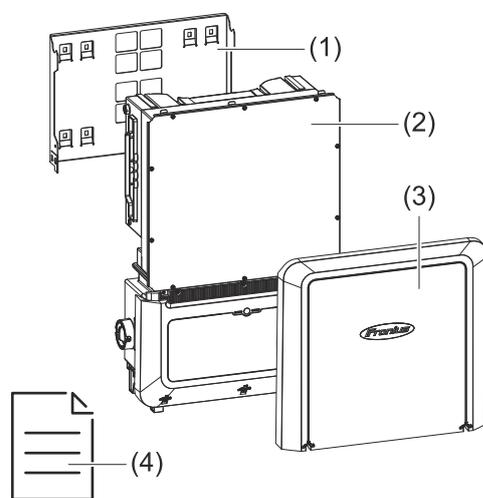

- (1) Mounting bracket (mounted on inverter on delivery)
- (2) Inverter
- (3) Housing cover
- (4) Quick Start Guide

## Backup Power Boost


With the "Backup Power Boost" function, the inverter can provide increased power for a short time in backup power mode in order to reliably supply even power-intensive loads.

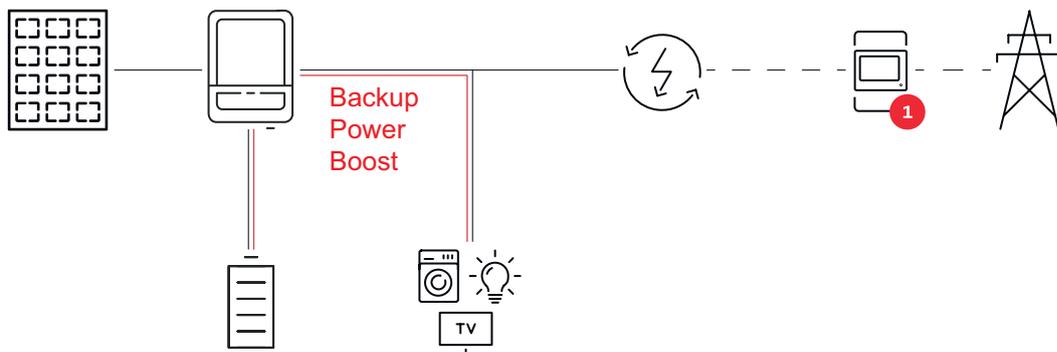

Power category	Max. DC power *	Max. output current / phase *
15.0	30 kVA	43.5 A (3 phases) / 32 A (1 phase)
17.5	30 kVA	43.5 A (3 phases) / 32 A (1 phase)
20.0	30 kVA	43.5 A (3 phases) / 32 A (1 phase)
25.0	50 kVA	72.5 A (3 phases) / 72.5 A (1 phase)
30.0	50 kVA	72.5 A (3 phases) / 72.5 A (1 phase)
33.3	50 kVA	72.5 A (3 phases) / 72.5 A (1 phase)

\* Sufficient PV and battery power required. Duration max. 5–10 seconds, 400 V AC symmetrical, depending on the environmental conditions.

### Thermal concept

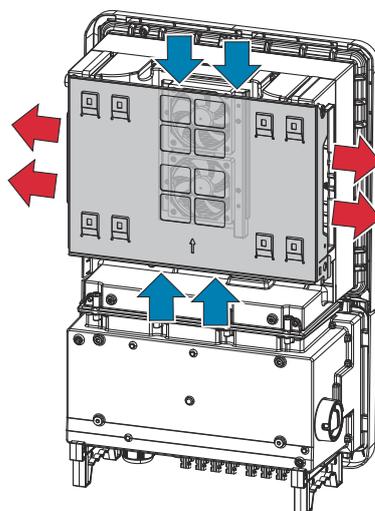

Ambient air is drawn in by the fan on the top and bottom and blown out at the device sides. The even heat dissipation allows several inverters to be installed next to each other.

#### NOTE!

##### Risk due to insufficient cooling of the inverter.

This may result in a loss of power in the inverter.

- ▶ Do not block the fan (for example, with objects that protrude through the touch guard).
- ▶ Do not cover the ventilation slots, even partially.
- ▶ Make sure that the ambient air can always flow through the inverter's ventilation slots unimpeded.

ation, the inverter transmits data such as power, yield, load, and energy balance to Fronius Solar.web. More detailed information can be found at [Solar.web - Monitoring & analysis](#).

Configuration is carried out using the Setup wizard; see the chapter headed [Installation with the app](#) on page 54 or [Installation with the browser](#) on page 54.

**Requirements for configuration:**

- Internet connection (download: min. 512 kbit/s, upload: min. 256 kbit/s)\*.
- User account at [solarweb.com](#).
- Completed configuration using the Setup wizard.

\* These specifications do not provide an absolute guarantee of flawless operation. High error rates in the transmission, fluctuating receptions or misfires can have an adverse effect on data transfer. Fronius recommends on-site testing to ensure that the connections meet the minimum requirements.

---

**Local communication**

The inverter can be found via the Multicast DNS (mDNS) protocol. We recommend searching for the inverter using the assigned host name.

The following data can be called up via mDNS:

- NominalPower
- Systemname
- DeviceSerialNumber
- SoftwareBundleVersion

# Utilization in accordance with "intended purpose"

---

**Intended use** The inverter is designed to convert direct current from PV modules into alternating current and feed this power into the public grid.

Intended use also means:

- Carefully reading and following all the instructions as well as complying with the safety and danger notices in the operating instructions
- Installation in accordance with the chapter headed "[Installation](#)", from page [29](#)

Follow all grid operator regulations regarding energy fed into the grid and connection methods.

---

**Foreseeable misuse** The following circumstances are considered to be reasonably foreseeable misuse:

- Any use that is not the intended use or goes beyond the intended use.
- Alterations to the inverter that are not expressly recommended by Fronius.
- Installation of components that are not expressly recommended or sold by Fronius.

---


**Provisions for the photovoltaic system** The inverter is designed exclusively to be connected and used with PV modules. Use with other DC generators (e.g., wind generators) is not permitted.

When configuring the photovoltaic system, make sure that all photovoltaic system components are operating exclusively within their permitted operating range.

All measures recommended by the PV module manufacturer for maintaining the PV module properties must be followed.

# Surge protection device (SPD)

## Surge protection device SPD



The surge protection device (SPD) protects against temporary over-voltages and diverts surge currents (e.g., lightning strike). Based on an overall lightning protection concept, the SPD contributes to the protection of the photovoltaic system components.

If the surge protection device is triggered, the color of the indicator changes from green to red (mechanical display).

A triggered SPD must be replaced with a fully functional SPD immediately by an authorized specialist company in order to maintain the full protective function of the device.

It is possible to enable the option of digitally displaying the triggering of an SPD. If you wish to set this function, refer to the PDF "SPD Triggering / Temporary SPD Triggering" in the Service & Support area at [www.fronius.com](http://www.fronius.com)

### **IMPORTANT!**

After setting the function described above, the inverter also responds if the 2-pole signal cable of the surge protection device is damaged or is subject to an interruption.


The following components can be used to replace existing AC SPDs with type 1+2 products:

- CITELE - DAC1-13S-31-275 (for mains voltages of 380–400 V)
- CITELE - DAC1-13S-31-320 (for mains voltages of 440–480 V)

Note: Replacing a device does not automatically result in replacement of the existing SPDs.


# Operating controls and connections

## Connection area

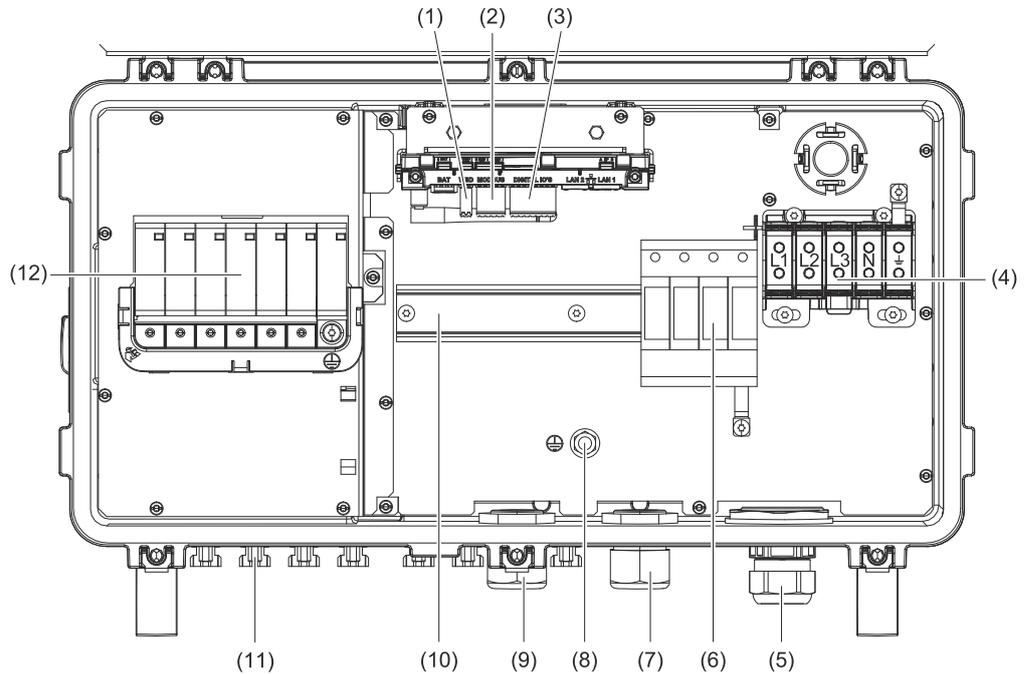


- (1) Push-in WSD (wired shutdown) terminal
- (2) Push-in terminals in the data communication area (Modbus)
- (3) Push-in terminals in the data communication area (digital inputs and outputs)
- (4) 5-pin AC terminal  
⊕ = ⊖
- (5) Cable bushing/cable gland AC
- (6) AC SPD (surge protection device)
- (7) Optional cable bushing
- (8) Grounding clamping bolts
- (9) Cable bushing/cable gland in the data communication area
- (10) DIN rail (mounting option for third-party components)
- (11) DC connections MC4
- (12) DC SPD (surge protection device)

**PV connections**

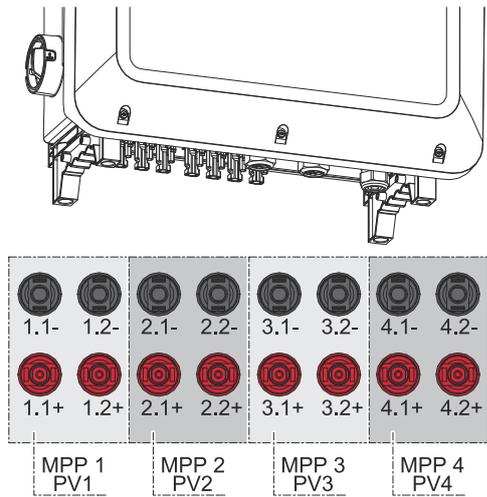

**Ground electrode bolt**

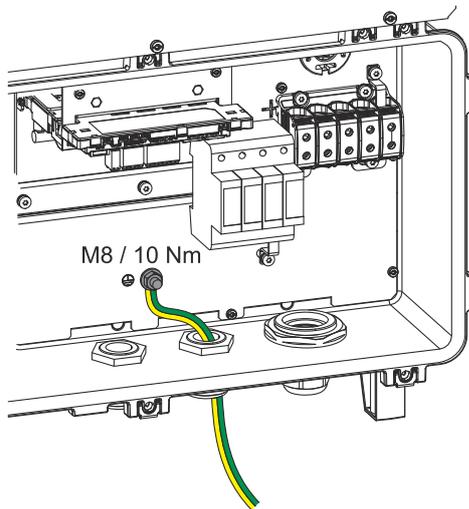


The ground electrode bolt  $\oplus$  allows additional components to be grounded, such as:

- AC cable
- Module mounting system
- Ground rod


If further grounding options are required, suitable terminals can be fitted to the DIN rail.

**Mounting option for third-party components**

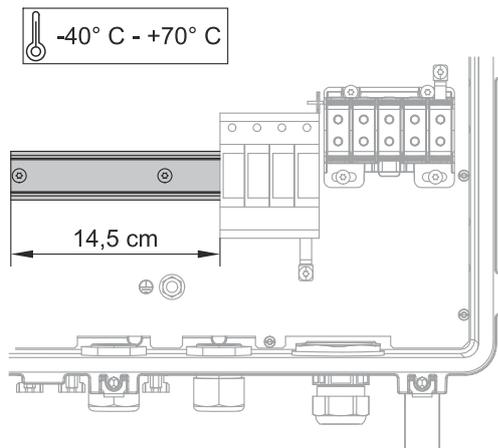

In the connection area there is space for mounting third-party components. Components up to a maximum width of 14.5 cm (8 DU) can be mounted on the DIN rail. The components must have a temperature resistance of -40 °C to +70 °C.

## DC disconnect

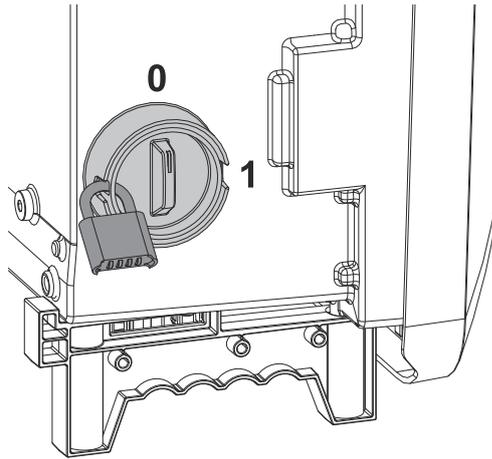

The DC disconnect has 2 switch settings: On / Off.


### IMPORTANT!

When the switch is in the 'Off' position, a conventional padlock can be used to secure the inverter against being switched on. The national guidelines must be complied with in this respect.

Padlock minimum requirement:

- Shackle diameter min. 6 mm
- Housing size min. 40 mm


## Data communication area

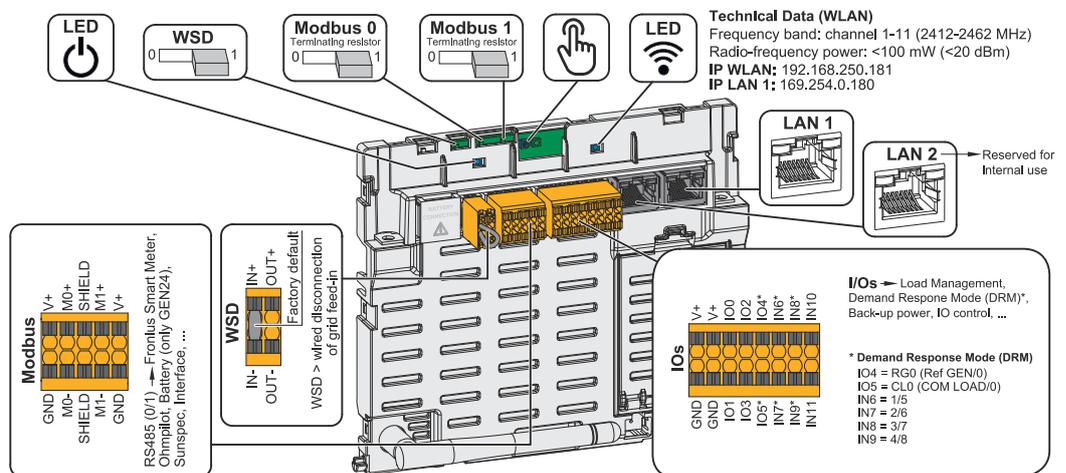

<b>Operating LED</b>	Indicates the inverter operating status.
<b>WSD (wired shutdown) switch</b>	Defines the inverter as the WSD master or WSD slave.  <b>Position 1:</b> WSD master <b>Position 0:</b> WSD slave
<b>Modbus 0 (MBO) switch</b>	Switches the terminating resistor for Modbus 0 (MBO) on/off.  <b>Position 1:</b> Terminating resistor on (factory setting) <b>Position 0:</b> Terminating resistor off
<b>Modbus 1 (MB1) switch</b>	Switches the terminating resistor for Modbus 1 (MB1) on/off.  <b>Position 1:</b> Terminating resistor on (factory setting) <b>Position 0:</b> Terminating resistor off

 <b>Optical sensor</b>	For operating the inverter. See chapter <a href="#">Button functions and LED status indicator</a> on page 25.
 <b>Communications LED</b>	Indicates the inverter connection status.
<b>LAN 1</b>	Ethernet connection for data communication (e.g., WiFi router, home network or, for commissioning with a laptop, see chapter <a href="#">Installation with the browser</a> on page 54).
<b>LAN 2</b>	Reserved for future functions. To avoid malfunctions, only use LAN 1.
<b>I/O terminal</b>	Push-in terminal for digital inputs/ outputs. See chapter <a href="#">Permitted cables for the data communication connection</a> on page 38. The designations (RGO, CLO, 1/5, 2/6, 3/7, 4/8) relate to the Demand Response Mode function, see chapter <a href="#">Demand Response Modes (DRM)</a> on page 61.
<b>WSD terminal</b>	Push-in terminal for the WSD installation. See chapter <a href="#">WSD (wired shut-down)</a> on page 12.
<b>Modbus terminal</b>	Push-in terminal for the installation of Modbus 0, Modbus 1, 12 V, and GND (ground).  The data connection to the connected components is established via the Modbus terminal. <b>The inputs M0 and M1 can be freely selected.</b> Max. 4 Modbus participants per input; see chapter <a href="#">Modbus participants</a> on page 49.

### Button functions and LED status indicator

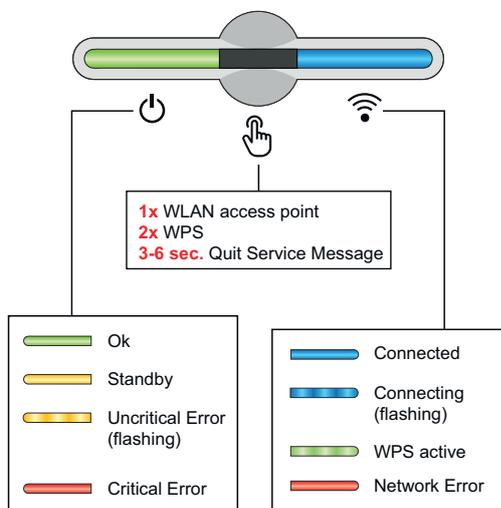


 The operating status LED displays the status of the inverter. In case of faults, follow the individual steps in the Fronius Solar.web live app.

 The optical sensor is actuated by touching it with a finger.


 The communications LED displays the connection status. To establish a connection, follow the individual steps in the Fronius Solar.web live app.

## Sensor functions




1x = WLAN access point (AP) is opened.

Flashes blue



2x = WLAN protected setup (WPS) is activated.


Flashes green



3 seconds (max. 6 seconds) = The service message disappears.


Flashes white (quickly)

## LED status indicator




The inverter is operating correctly.

Lights up green




The inverter is starting.

Flashes green




The inverter is on standby, is not operating (e.g., no energy fed into the grid at night), or is not configured.

Lights up yellow




The inverter displays a non-critical status.

Flashes yellow




The inverter displays a critical status and no energy is fed into the grid.

Lights up red



The network connection is being established via WPS.  
2x = WPS search mode.


Flashes green



The network connection is being established via WLAN AP.


1x = WLAN AP search mode (active for 30 minutes).

Flashes blue



The network connection is not configured.


Lights up yellow



A network error is displayed, the inverter is operating correctly.


Lights up red

## LED status indicator



The inverter is performing an update.

⏻ / 📶 Flash blue



There is a service message.

☞ Lights up white

## Schematic internal wiring of IOs

The V+/ GND pin provides the possibility of feeding in a voltage in the range of 12.5 to 24 V (+ max. 20%) using an external power supply unit. Outputs IO 0 - 5 can then be operated using the external voltage that has been fed in. A maximum of 1 A may be drawn per output, whereby a total of max. 3 A is permitted. The fuse protection must take place externally.

### ⚠ CAUTION!


**Danger from polarity reversal at the terminals due to improper connection of external power supply units.**

This may result in severe damage to the inverter.

- ▶ Check the polarity of the external power supply unit with a suitable measuring device before connecting it.
- ▶ Connect the cables to the V+/GND outputs while ensuring the correct polarity.

### IMPORTANT!

If the total output (6 W) is exceeded, the inverter switches off the entire external power supply.

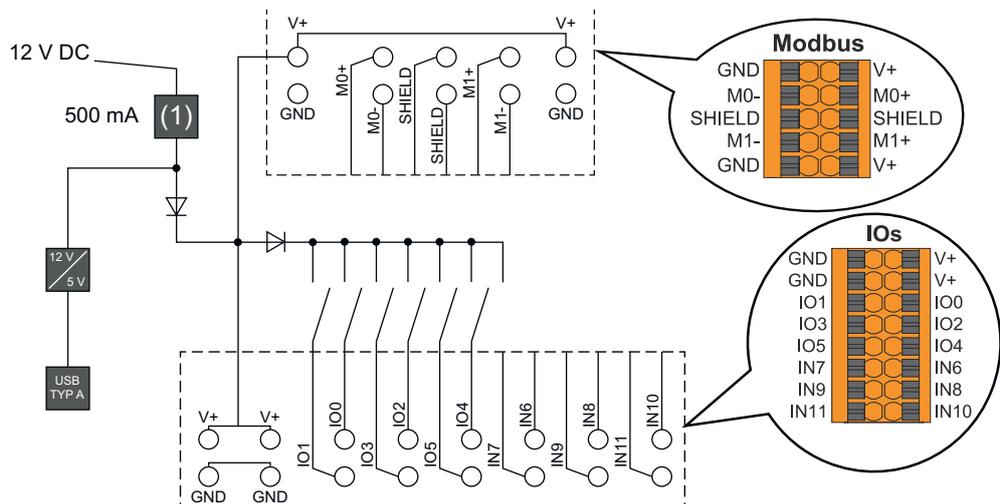

(1) Current limitation




# Installation



# General

## Tools required

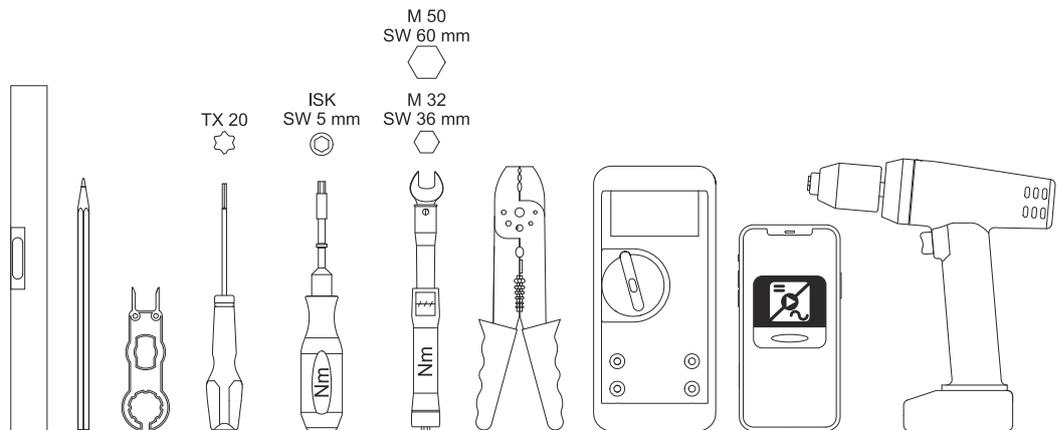

- Spirit level
- Pencil
- TX20 screwdriver
- Hex socket torque wrench 5 mm
- Torque wrench M32, M50
- Wire stripper for cables and wires
- Multimeter for measuring voltage
- Smartphone, tablet, or PC for setting up the inverter
- Drill driver


## Quick-fastener system

### NOTE!

#### Danger when using a drill driver.


This may result in the destruction of the quick-fastener system due to over-torque.

- ▶ Use a screwdriver (TX20).
- ▶ Do not turn the screws more than 180°.

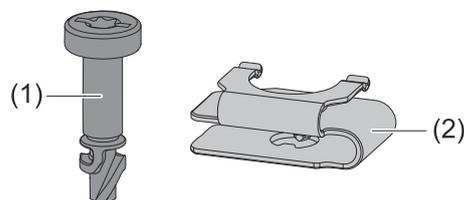

A quick-fastener system (3) is used to mount the connection area cover and front cover. The system is opened and closed with a half-rotation (180°) of the captive screw (1) into the quick-fastener spring (2).

The system is independent of torque.

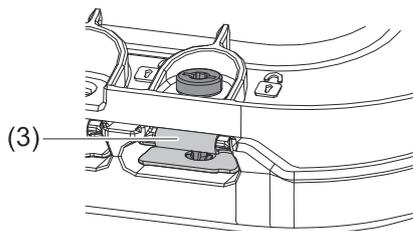

---

**System component compatibility**

All installed components in the PV system must be compatible with each other and have the necessary configuration options. The installed components must not restrict or negatively affect the functioning of the PV system.

**NOTE!****Risk due to components in the PV system that are not and/or only partially compatible.**


Incompatible components can restrict and/or negatively affect the operation and/or functioning of the PV system.

- ▶ Only install components recommended by the manufacturer in the PV system.
- ▶ Before installation, check the compatibility of components that have not been expressly recommended with the manufacturer.

# Installation location and position

## Choosing the location of the inverter

Please observe the following criteria when choosing a location for the inverter:

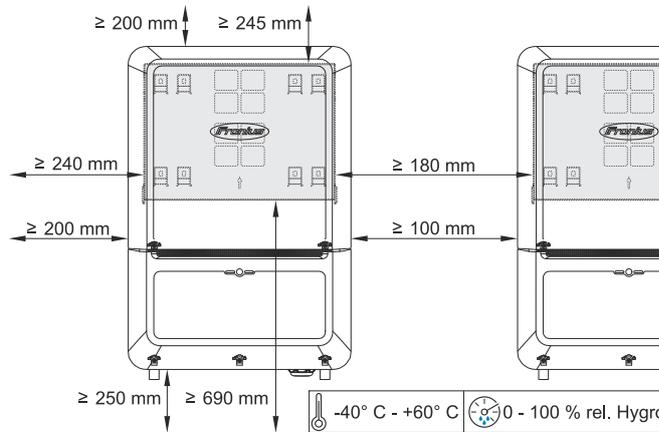

Only install on a solid, non-flammable surface.

When installing the inverter in a switch cabinet or similar closed environment, ensure adequate heat dissipation by forced-air ventilation.

When installing the inverter on the outer walls of cattle sheds, it is important to maintain a minimum clearance of 2 m between all sides of the inverter and the ventilation and building openings.

The following substrates are allowed:

- Wall installation: Corrugated sheet metal (mounting rails), brick, concrete, or other non-flammable surfaces sufficiently capable of bearing loads
- Mast or beam: Mounting rails, behind the PV modules directly on the PV mounting system
- Flat roof (if this is for a film roof, make sure that the films comply with the fire protection requirements and are not highly flammable. Ensure compliance with the national provisions.)
- Covered parking lot roof (no overhead installation)



The inverter is suitable for indoor installation.



The inverter is suitable for outdoor installation.


Due to its IP 66 protection class, the inverter is not susceptible to water spray from any direction.



Do not expose the inverter to direct sunlight in order to keep inverter heating as low as possible.



The inverter should be installed in a protected location, e.g., near the PV modules or under an overhanging roof.

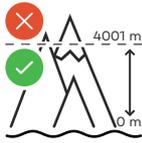

The inverter must not be installed or operated at more than 4 000 m above sea level.

The voltage  $U_{DCmax}$  must not exceed the following values:

- between 0 and 3000 m: 1000 V
- between 3001 and 3500 m: 959 V
- between 3501 and 4000 m: 909 V
- over 4001: not allowed



Do not install the inverter:

- Where it may be exposed to ammonia, corrosive gases, acids or salts (e.g., fertilizer storage areas, vent openings for livestock stables, chemical plants, tanneries, etc.)



During certain operating phases the inverter may produce a slight noise. For this reason it should not be installed in an occupied living area.



Do not install the inverter in:

- Areas where there is an increased risk of accidents from farm animals (horses, cattle, sheep, pigs, etc.)
- Stables or adjoining areas
- Storage areas for hay, straw, chaff, animal feed, fertilizers, etc.



The inverter is designed to be dust-proof (IP 66). In areas of high dust accumulation, dust deposits may collect on the cooling surfaces, and thus impair the thermal performance. In this case, cleaning is required regularly. We therefore recommend not installing the inverter in areas and environments with high dust accumulation.



Do not install the inverter in:

- Greenhouses
- Storage or processing areas for fruit, vegetables, or viticulture products
- Areas used in the preparation of grain, green fodder, or animal feeds

## Installation position of inverter



The inverter is suitable for vertical installation on a vertical wall or column.

Do not install the inverter:

- At an angle
- In the horizontal position
- With the connection sockets facing upwards
- On a base



The inverter is suitable for a horizontal installation position or for installation on a sloping surface.

Do not install the inverter:


- On a sloping surface with the connection sockets facing upwards
- Overhanging with the connection sockets facing down
- On the ceiling

# Installing the mounting bracket and attaching the inverter

## Selecting the mounting material

Use the corresponding fixing materials depending on the subsurface and observe the screw dimension recommendations for the mounting bracket. The installer is responsible for selecting the right type of fixing.

## Properties of the mounting bracket

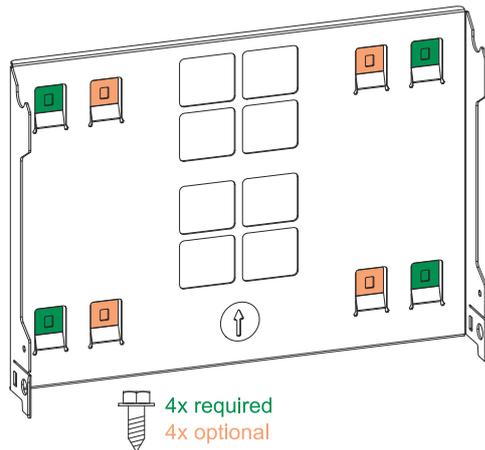

The mounting bracket (illustration) can also be used as a guide.

The pre-drilled holes on the mounting bracket are intended for screws with a thread diameter of 6-8 mm (0.24-0.32 inches).

Unevenness on the installation surface (for example, coarse-grained plaster) is largely counterbalanced by the mounting bracket.

The mounting bracket must be fixed to the four outer tabs (marked in green). The four inner tabs (marked in orange) can be used in addition if required.

## Do not deform the mounting bracket

### NOTE!


**When attaching the mounting bracket to the wall or to a column, make sure that the mounting bracket is not deformed.**

A deformed mounting bracket may make it difficult to clip/swivel the inverter into position.


## Fitting the mounting bracket to a wall

### IMPORTANT!


When installing the mounting bracket, make sure that it is installed with the arrow pointing upwards.

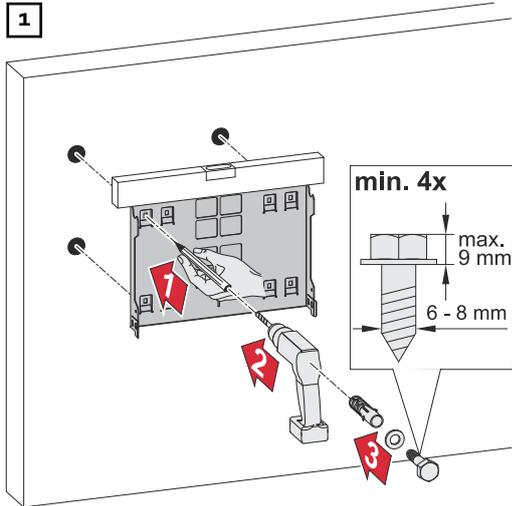

**Attaching the inverter to the mounting bracket**

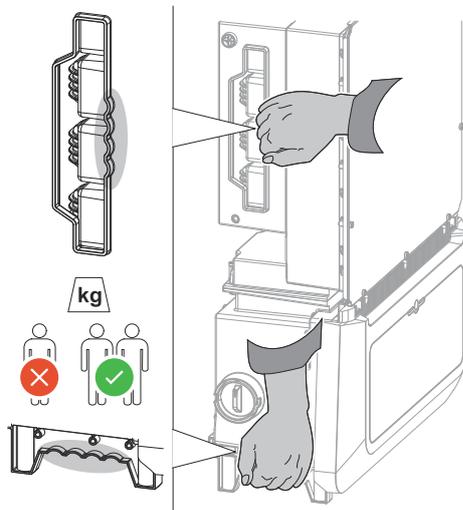

There are integrated grips on the side of the inverter which facilitate lifting/ attaching.

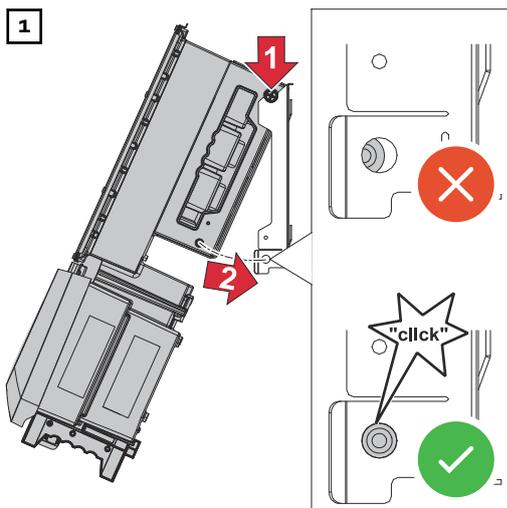

Clip the inverter into the mounting bracket from above. The connections must point downwards.

Push the lower part of the inverter into the snap-in tabs of the mounting bracket until the inverter audibly clicks into place on both sides.

Check that the inverter is correctly positioned on both sides.

# Requirements for connecting the inverter

## Connecting aluminum cables






Aluminum cables can also be connected to the AC connections.

### NOTE!

#### When using aluminum cables:

- ▶ Follow all national and international guidelines regarding the connection of aluminum cables.
- ▶ Grease aluminum wires with appropriate grease to protect them from oxidation.
- ▶ Follow the instructions of the cable manufacturer.




## Different cable types

Solid	Fine-stranded	Fine-stranded with ferrule and collar	Fine-stranded with ferrule without collar	Sectoral
				

## Permitted cables for the electrical grid connection

Round copper or aluminum conductors with a cross-section of 4 to 35 mm<sup>2</sup> can be connected to the terminals of the inverter as described below.

The torques according to the following table must be observed:

Cross-section	Copper		Aluminum	
				
35 mm <sup>2</sup>	10 Nm	10 Nm	14 Nm	14 Nm
25 mm <sup>2</sup>	8 Nm	8 Nm	12 Nm	10 Nm
16 mm <sup>2</sup>			10 Nm	
10 mm <sup>2</sup>	6 Nm	6 Nm		
6 mm <sup>2</sup>				
4 mm <sup>2</sup>				

SPD type 2: The grounding must be established with a 6 mm<sup>2</sup> copper or 16 mm<sup>2</sup> aluminum cable as a minimum requirement.

SPD type 1+2: The grounding must be established with a 16 mm<sup>2</sup> copper or aluminum cable as a minimum requirement.

**Permitted cables for the electrical DC connection**

Round copper conductors with a cross section of **4-10 mm<sup>2</sup>** can be connected to the MC4 plugs of the inverter.

Select a sufficiently large cable cross-section based on the actual device output and the installation situation! Observe the data sheet for the plug!




**Permitted cables for the data communication connection**





Cables with the following design can be connected to the terminals of the inverter:





- Copper: round, solid
- Copper: round, fine-stranded

**IMPORTANT!**

If several single conductors are connected to an input of the push-in terminal, connect the single conductors with a corresponding ferrule.

WSD connections with push-in terminal						
Distance	Stripping length					Cable recommendation
100 m 109 yd	10 mm 0.39 inch	0.14-1.5 mm <sup>2</sup> AWG 26-16	0.14-1.5 mm <sup>2</sup> AWG 26-16	0.14-1 mm <sup>2</sup> AWG 26-18	0.14-1.5 mm <sup>2</sup> AWG 26-16	Min. CAT 5 UTP (unshielded twisted pair)

Modbus connections with push-in terminal						
Distance	Stripping length					Cable recommendation
300 m 328 yd	10 mm 0.39 inch	0.14-1.5 mm <sup>2</sup> AWG 26-16	0.14-1.5 mm <sup>2</sup> AWG 26-16	0.14-1 mm <sup>2</sup> AWG 26-18	0.14-1.5 mm <sup>2</sup> AWG 26-16	Min. CAT 5 STP (shielded twisted pair)

IO connections with push-in terminal						
Distance	Stripping length					Cable recommendation
30 m 32 yd	10 mm 0.39 inch	0.14-1.5 mm <sup>2</sup> AWG 26-16	0.14-1.5 mm <sup>2</sup> AWG 26-16	0.14-1 mm <sup>2</sup> AWG 26-18	0.14-1.5 mm <sup>2</sup> AWG 26-16	Single conductors possible

LAN connections
Fronius recommends using at least CAT 5 STP (shielded twisted pair) cables and a maximum distance of 100 m (109 yd).

**Cable diameter of the AC cable**


For a standard M32 cable gland **with a large reducer (green)**:  
Cable diameter from **12-14 mm**

For a standard M32 cable gland **with a small reducer (red)**:  
Cable diameter from **17-19 mm**

For a standard M32 cable gland **without a reducer**:  
Cable diameter from **20.5-24.5 mm**

For an M50 cable gland:  
Cable diameter from **≤35 mm**

### Maximum alternating current fuse protection

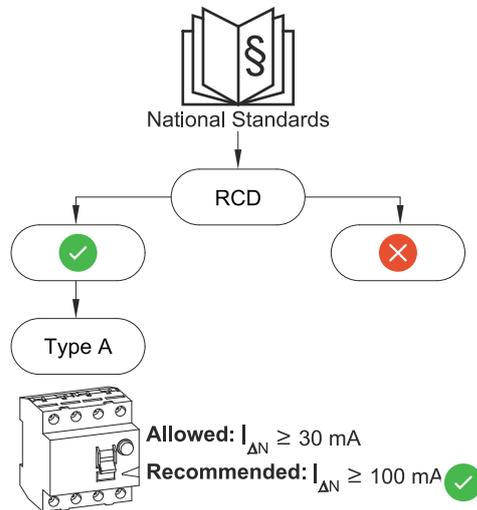

### NOTE!

**A residual current circuit breaker for the AC connecting cable may be required depending on national regulations, the grid operator, and other conditions.**

A type A residual current circuit breaker is generally sufficient in this case. Nevertheless, false alarms can be triggered for the type A residual current circuit breaker in individual cases and depending on local conditions. For this reason, Fronius recommends using a residual current circuit breaker suitable for frequency inverters with a release current of at least 100 mA, taking into account national provisions.

Verto	AC power	Recommended fuse protection	Max. fuse protection
15.0 208-240	15 kW	63 A	63 A
18.0 208-240	18 kW	63 A	63 A
25.0	25 kW	63 A	63 A
27.0	27 kW	63 A	63 A
30.0	29.9 kW	63 A	63 A
33.3	33.3 kW	63 A	63 A
36.0 480	36 kW	63 A	63 A

# Connecting the inverter to the public grid (AC side)

---

## Safety

### **WARNING!**

#### **Danger from incorrect operation and work that is not carried out properly.**

This can result in severe personal injury and damage to property.

- ▶ Read the Installation Instructions and Operating Instructions before installing and commissioning the equipment.
- ▶ Only qualified personnel are authorized to commission the inverter and only within the scope of the respective technical regulations.

### **WARNING!**

#### **Danger from grid voltage and DC voltage from PV modules that are exposed to light.**

An electric shock can be fatal.

- ▶ Prior to any connection work, ensure that the inverter is de-energized on the AC side and the DC side.
- ▶ Only an authorized electrical engineer is permitted to connect this equipment to the public grid.

### **WARNING!**

#### **Danger from damaged and/or contaminated terminals.**

This can result in severe personal injury and damage to property.

- ▶ Prior to connection work, check the terminals for damage and contamination.
- ▶ Remove any contamination while the equipment is de-energized.
- ▶ Have defective terminals replaced by an authorized specialist.


---

## Connecting the inverter to the public grid (AC side)

It is not possible to operate the inverter in ungrounded grids, e.g., IT grids (insulated grids without ground conductor).


In certain system configurations, it is not necessary to connect the neutral conductor. In this system configuration, the **neutral conductor status** parameter must be set to **Not connected** on the web interface of the inverter in the **Device configuration > Inverter > AC grid** menu.

1

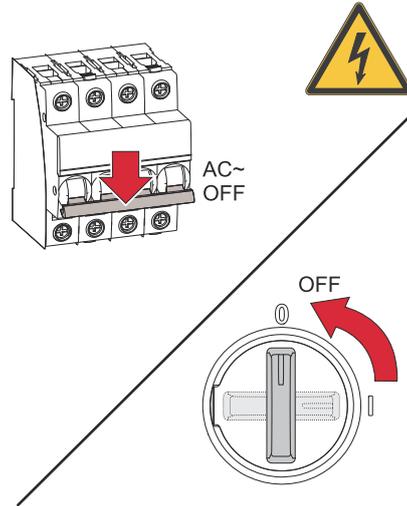


Turn off the automatic circuit breaker. Make sure that the DC disconnecter is set to the "Off" switch setting.

2

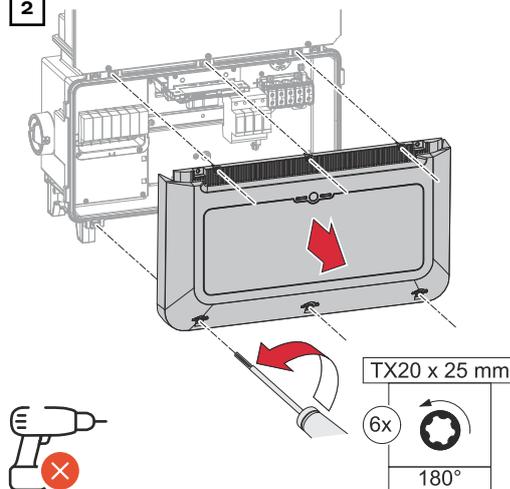

Loosen the 6 screws of the connection area cover by rotating them 180° to the left using a screwdriver (TX20). Remove the connection area cover from the device.


3

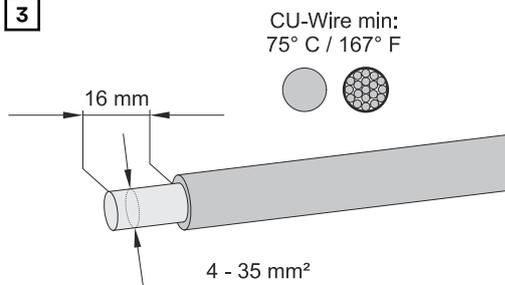


Strip the insulation of the single conductors by 16 mm. Select the cable cross-section in accordance with the instructions in [Permitted cables for the electrical grid connection](#) from page 37.

**IMPORTANT!**

Only one conductor may be connected to each pin. With a twin ferrule, two conductors can be connected to one pin.

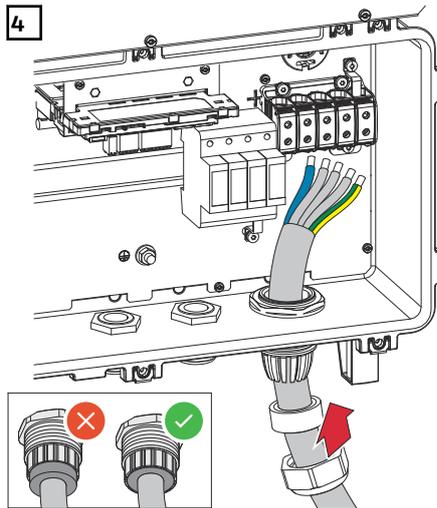


Connection with neutral conductor

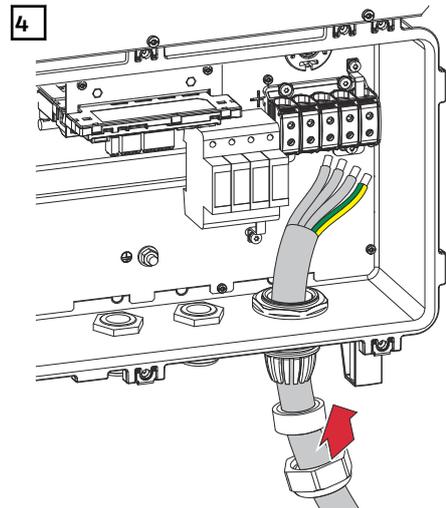


Connection without neutral conductor

For more information about the cable gland, see chapter [Cable diameter of the AC cable](#) on page 38.

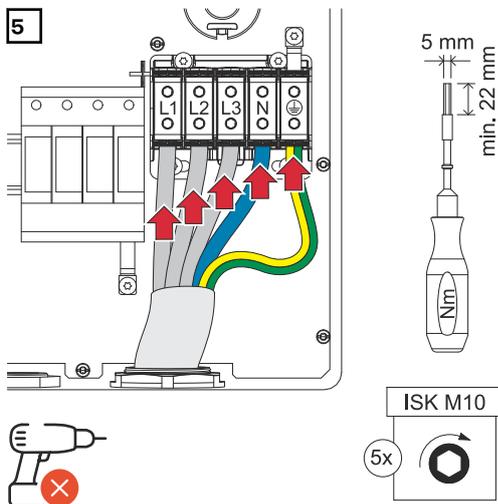

Connection with neutral conductor

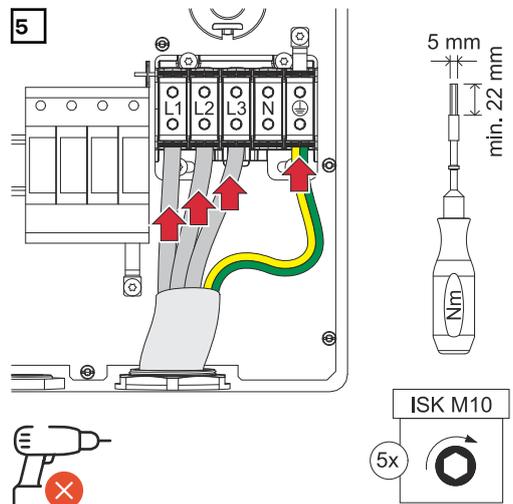

Connection without neutral conductor


**IMPORTANT!** Observe torques – see [Permitted cables for the electrical grid connection](#) on page 37.

**IMPORTANT!**

The ground conductor must be dimensioned longer and laid with a movement loop so that it is last loaded in the event of a failure of the cable gland.

- L1 Phase conductor
- L2 Phase conductor
- L3 Phase conductor
- N Neutral conductor (optional)
- PE Ground conductor

6

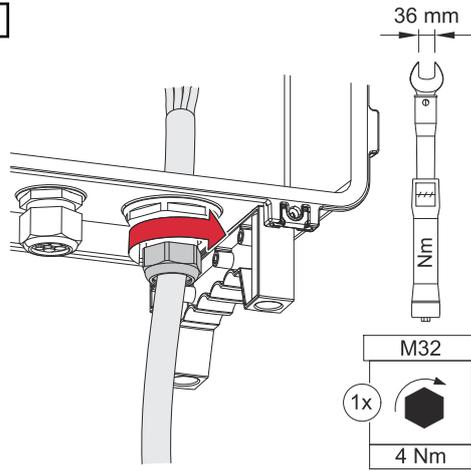


Fasten the union nut of the cable gland with a torque of 4 Nm.

**Connecting the inverter to the public grid with the PEN conductor (AC side)**


It is not possible to operate the inverter in ungrounded grids, e.g., IT grids (insulated grids without ground conductor).

1

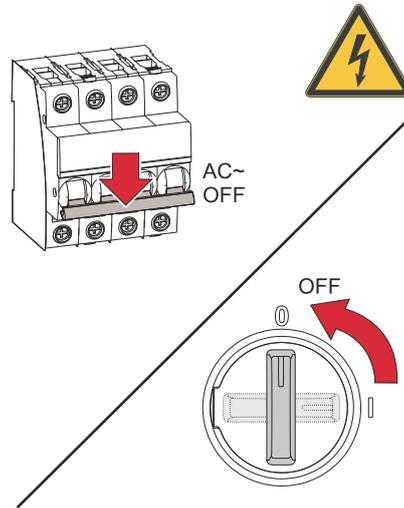


Turn off the automatic circuit breaker. Make sure that the DC disconnecter is set to the "Off" switch setting.

2

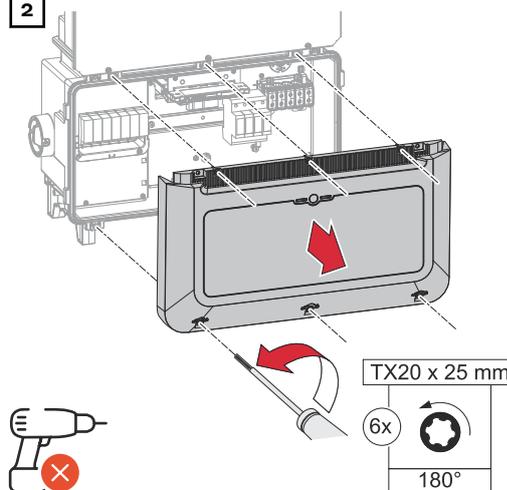


Loosen the 6 screws of the connection area cover by rotating them 180° to the left using a screwdriver (TX20). Remove the connection area cover from the device.

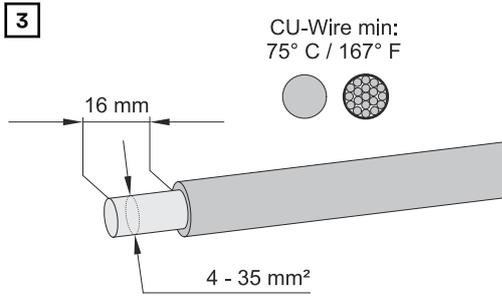

Strip the insulation of the single conductors by 16 mm.  
Select the cable cross-section in accordance with the instructions in [Permitted cables for the electrical grid connection](#) from page 37.

**IMPORTANT!**

Only one conductor may be connected to each pin. With a twin ferrule, two conductors can be connected to one pin.

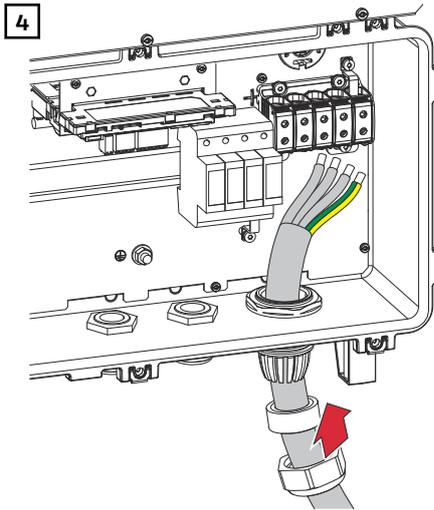

For more information about the cable gland, see chapter [Cable diameter of the AC cable](#) on page 38.

**NOTE!**



The PEN conductor must have ends that are permanently marked blue, according to the national regulations.

**IMPORTANT!**


The ground conductor must be dimensioned longer and laid with a movement loop so that it is last loaded in the event of a failure of the cable gland.

**IMPORTANT!**

Observe torques - see [Permitted cables for the electrical grid connection](#) on page 37.

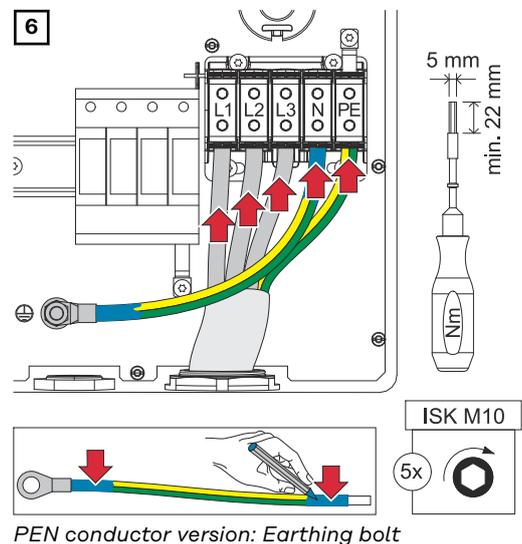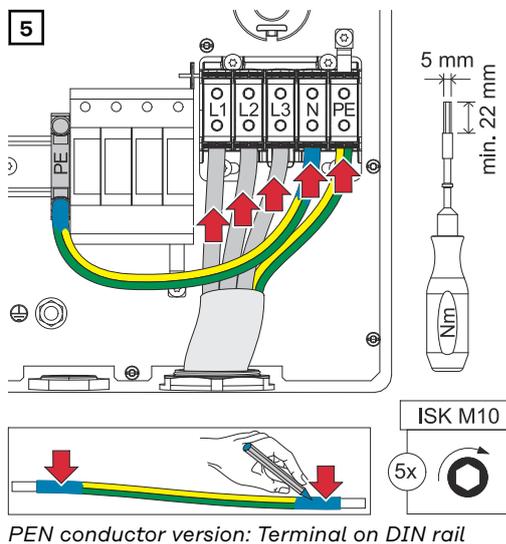


7

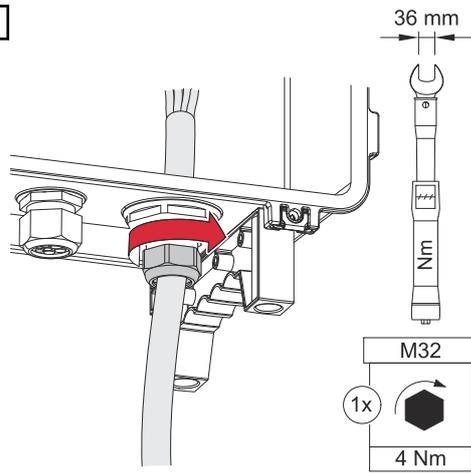

Fasten the union nut of the cable gland with a torque of 4 Nm.

### Replacing the PG screw joint

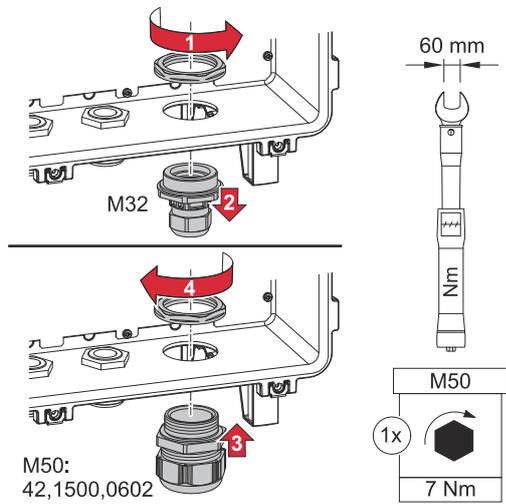

# Connecting solar module strings to the inverter


## General information about PV modules

To enable suitable PV modules to be chosen and to use the inverter as efficiently as possible, it is important to bear the following points in mind:

- If insolation is constant and the temperature is falling, the open circuit voltage of the PV modules will increase. The open circuit voltage must not exceed the max. permissible system voltage. An open circuit voltage above the indicated values will damage the inverter, and all warranty rights will become null and void.
- The temperature coefficients on the data sheet of the PV modules must be observed.
- Exact values for sizing the PV modules can be obtained using suitable calculation tools, such as the [Fronius Solar.creator](#).

### IMPORTANT!

Before connecting up the PV modules, check that the voltage for the PV modules specified by the manufacturer corresponds to the actual measured voltage.

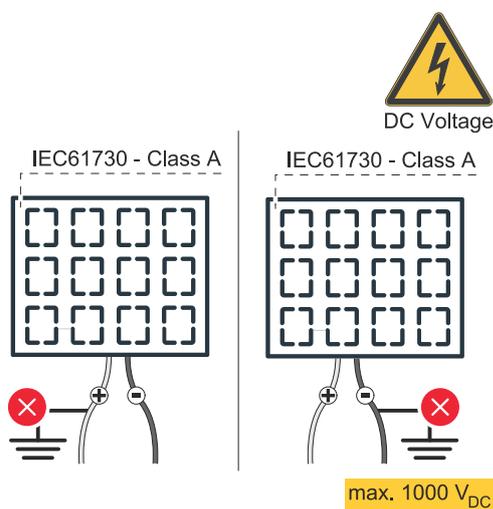

### IMPORTANT!

The PV modules connected to the inverter must comply with the IEC 61730 Class A standard.

### IMPORTANT!

Solar module strings must not be grounded.

## Safety



### WARNING!

#### **Danger from incorrect operation and work that is not carried out properly.**

This can result in severe personal injury and damage to property.

- ▶ The commissioning, maintenance, and service work in the inverter's power stage set may only be carried out by Fronius-trained service personnel in accordance with the technical specifications.
- ▶ Read the installation instructions and operating instructions before installing and commissioning the equipment.

**⚠ WARNING!**

**Danger from mains voltage and DC voltage from PV modules that are exposed to light.**

This can result in severe personal injury and damage to property.

- ▶ All connection, maintenance, and service work should only be carried out when the AC and DC sides have been disconnected from the inverter and are de-energized.
- ▶ Only an authorized electrical engineer is permitted to connect this equipment to the public grid.

**⚠ WARNING!**

**Danger of an electric shock due to improperly connected terminals/PV plug connectors.**

An electric shock can be fatal.

- ▶ When connecting, ensure that each pole of a string is routed via the same PV input, e.g.:  
**+ pole string 1** to the input **PV 1.1+** and **- pole string 1** to the input **PV 1.1-**

**⚠ WARNING!**

**Danger from damaged and/or contaminated terminals.**

This can result in severe personal injury and damage to property.


- ▶ Prior to connection work, check the terminals for damage and contamination.
- ▶ Remove any contamination while the equipment is de-energized.
- ▶ Have defective terminals replaced by an authorized specialist company.

**PV Generator, general**


Several independent PV inputs are available. These inputs can be connected to a number of different modules.

When starting for the first time, set up the PV Generator in accordance with the respective configuration (can also be carried out at a later date in the **System configuration** menu field under menu item **Components**).

**Connecting solar module strings to the inverter**

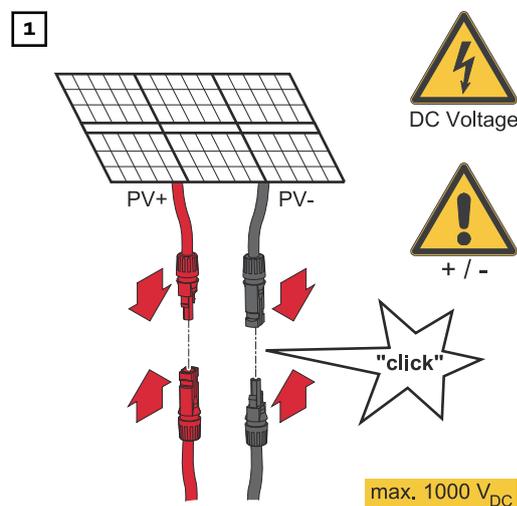

2

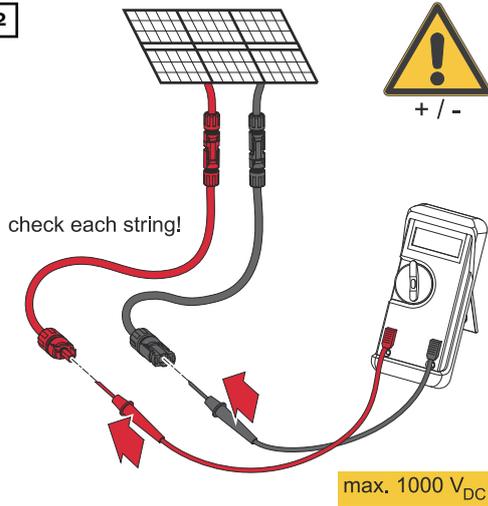

Use a suitable measuring instrument to check the voltage and polarity of the DC cabling.

**CAUTION!**

**Danger due to polarity reversal at the terminals.**

This may result in severe damage to the inverter.

- ▶ Use a suitable measuring instrument to check the polarity of the DC cabling.
- ▶ Use a suitable measuring instrument to check the voltage (**max. 1 000 V<sub>DC</sub>**)


**CAUTION!**

**Risk of damage due to incompatible plug connectors.**

Incompatible plug connectors can cause thermal damage and may cause a fire.

- ▶ Only use the original plug connectors (MC4) from Stäubli (formerly Multi-Contact).

3

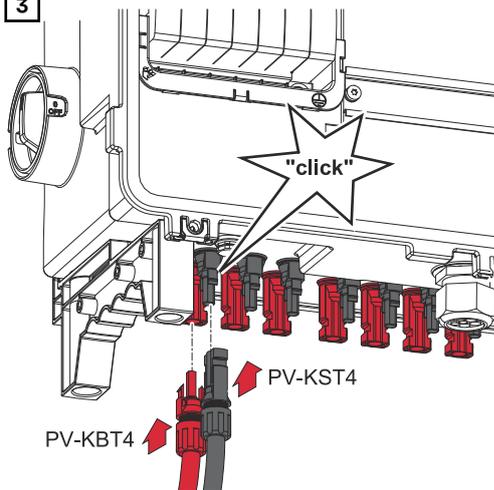

Connect PV cables from the solar modules to the MC4 plugs according to the label

Unused MC4 plugs on the inverter must be closed by the cover caps supplied with the inverter.

# Connecting the data communication cables

## Modbus participants

The inputs M0 and M1 can be freely selected. A maximum of four Modbus participants can be connected to the Modbus terminal at inputs M0 and M1.

### IMPORTANT!

Only one primary meter, one battery, and one Ohmpilot can be connected per inverter. Due to the high data transfer of the battery, the battery occupies two subscribers. If the **Inverter Control via Modbus** function is activated in the **Communication > Modbus** menu area, no Modbus participants are possible. It is not possible to send and receive data at the same time.

### Example 1:

Input	Battery	Fronius Ohmpilot	Number of primary meters	Number of secondary meters
Modbus 0 (M0)	✗	✗	0	4
	✓	✗	0	2
	✓	✓	0	1
Modbus 1 (M1)	✗	✗	1	3

### Example 2:

Input	Battery	Fronius Ohmpilot	Number of primary meters	Number of secondary meters
Modbus 0 (M0)	✗	✗	1	3
Modbus 1 (M1)	✗	✗	0	4
	✓	✗	0	2
	✓	✓	0	1

## Routing data communication cables


### IMPORTANT!

If data communication cables are wired into the inverter, observe the following points:


- Depending on the number and cross-section of the wired data communication cables, remove the corresponding blanking plugs from the sealing insert and insert the data communication cables.
- Make sure that you insert the corresponding blanking plugs into any free openings on the sealing insert.

**IMPORTANT!**

Safety class IP 66 cannot be ensured if blanking plugs are missing or incorrectly inserted.

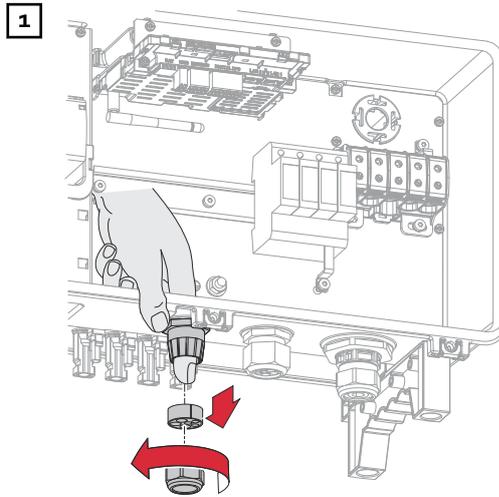


Remove the union nut on the cable gland and press the sealing ring with the blanking plugs out from the inside of the device.

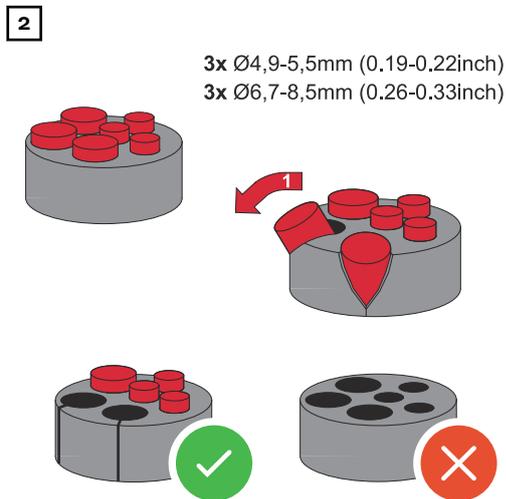


Open up the sealing ring at the location where the blanking plugs are to be removed.


\* Remove the blanking plugs with a sideways motion.

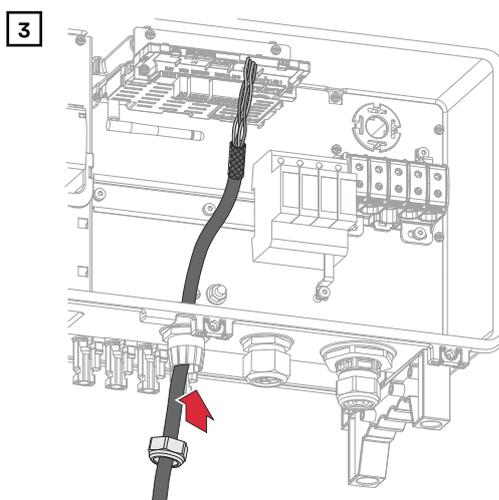

First, guide the data cables through the union nut of the cable gland and then through the housing opening.

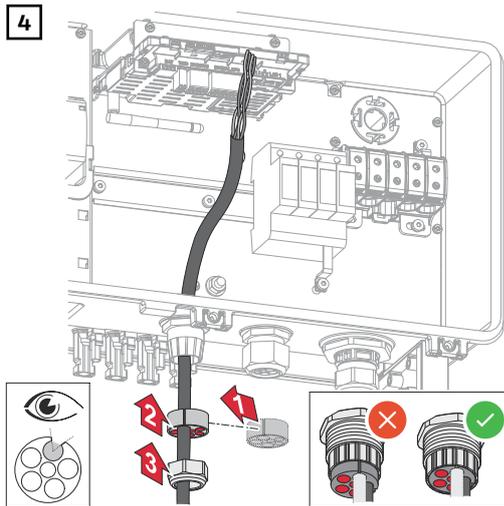


Insert the sealing ring between the union nut and the housing opening. Press the data cables into the seal's cable guide. Then press in the seal until it reaches the underside of the cable gland.

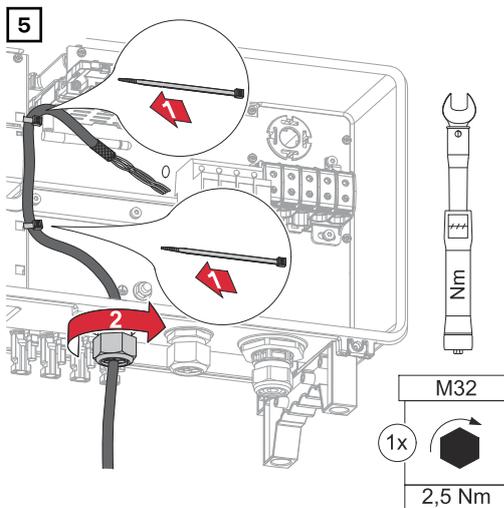

Using a cable tie, attach the data cables to the protective cover of the DC surge protection device (SPD). Fasten the union nut of the cable gland with a torque of min. 2.5 - max. 4 Nm.

### Installing the WSD (wired shutdown)

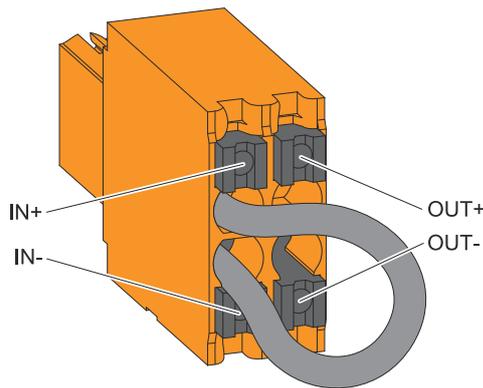


### IMPORTANT!

The push-in WSD terminal in the inverter's connection area is delivered with a bypass ex works as standard. The bypass must be removed when installing a trigger device or a WSD chain.

The WSD switch of the first inverter with connected trigger device in the WSD chain must be in position 1 (master). The WSD switch of all other inverters should be in position 0 (secondary device).


Max. distance between 2 devices: 100 m  
Max. Number of devices: 28

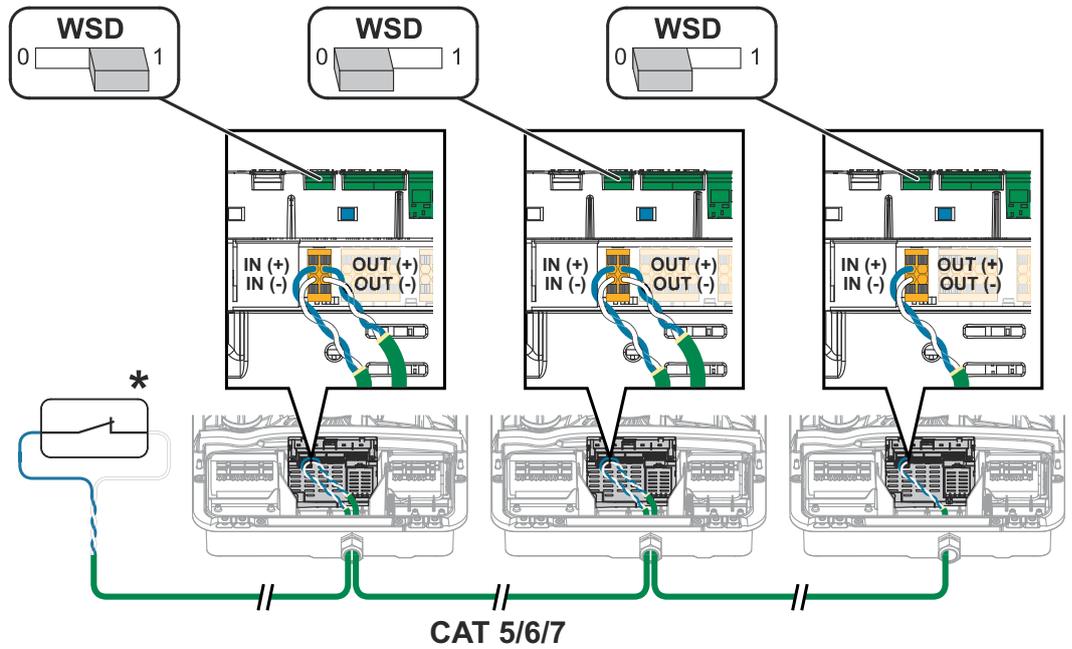


\* Floating contact of the trigger device (e.g., central grid and system protection). If several floating contacts are used in a WSD chain, these must be connected in series.

# Closing and commissioning the inverter


## Closing the inverter's connection area/housing cover, and commissioning

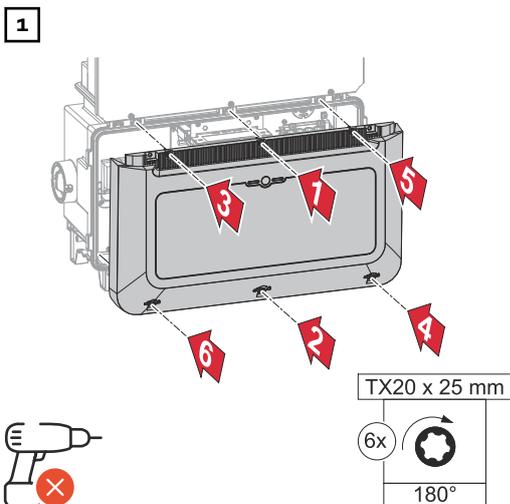

Place the cover on the connection area. Tighten six screws by rotating them 180° to the right using a screwdriver (TX20).

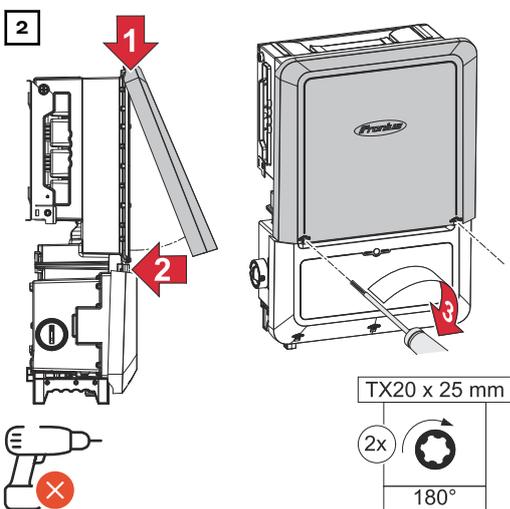

Clip the housing cover into the inverter from above. Press on the lower part of the housing cover and tighten the two screws by rotating them 180° to the right using a screwdriver (TX20).

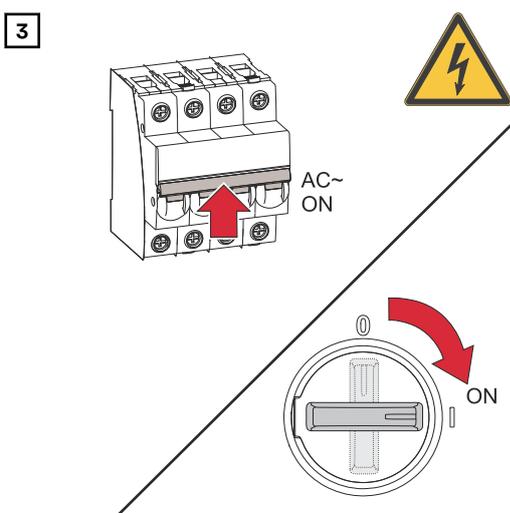

Turn the DC disconnecter to the "on" switch setting. Turn on the automatic circuit breaker.

**IMPORTANT!** Open the WLAN access point with the optical sensor; refer to the chapter headed [Button functions and LED status indicator](#) on page 25

## Starting the inverter for the first time


When starting the inverter for the first time, various setup settings must be configured.

If the setup is canceled before completion, the input data is not saved and the start screen with the installation wizard is shown once again. The data is saved in the event of an interruption, e.g., a power failure. Commissioning is continued at the point at which the interruption occurred after the power supply is restored. If the setup was interrupted, the inverter feeds energy into the grid at maximum 500 W and the operating status LED flashes yellow.

The country setup can only be set when starting the inverter for the first time. If the country setup needs to be changed at a later date, contact your installer/ technical support.

### Installation with the app

The Fronius Solar.start app is required for installation. Depending on the mobile device used to perform the installation, the app is available on the relevant platform.

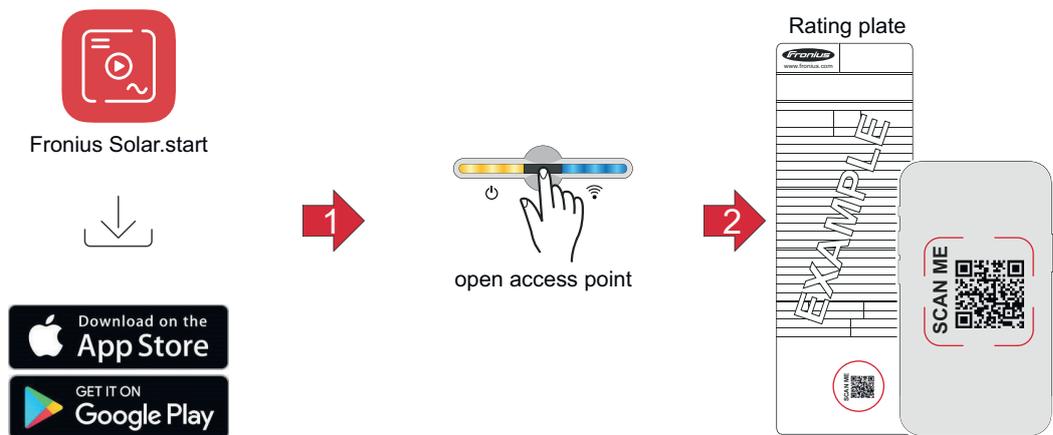


- 1 Download and install the Fronius Solar.start app.
- 2 Open the access point by touching the sensor .
  - ✓ *Communications LED flashes blue.*
- 3 Open the Fronius Solar.start app and follow the installation wizard. Scan the QR code on the rating plate with a smartphone or tablet to connect to the inverter.
- 4 Add system components in Fronius Solar.web and commission the PV system.

The network wizard and product setup can be performed independently. A network connection is required for the Fronius Solar.web installation wizard.

### Installation with the browser

#### WLAN:

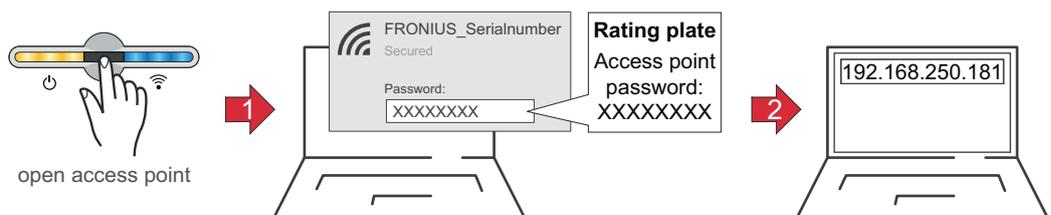


- 1 Open the access point by touching the sensor .
  - ✓ *Communications LED flashes blue.*

- 2 Establish the connection to the inverter in the network settings (the inverter is displayed with the name "FRONIUS\_" and the serial number of the device).
- 3 Enter the password from the rating plate and confirm.  
**IMPORTANT!**  
To enter the password in Windows 10, first select the **Connect using a security key instead** link to be able to establish the connection with the password.
- 4 Enter the IP address 192.168.250.181 in the address bar of the browser and confirm. The installation wizard opens.
- 5 Follow the installation wizard and complete the installation in the individual areas.
- 6 Add the system components in Fronius Solar.web and commission the PV system.

The network wizard and product setup can be performed independently. A network connection is required for the Fronius Solar.web installation wizard.

#### Ethernet:

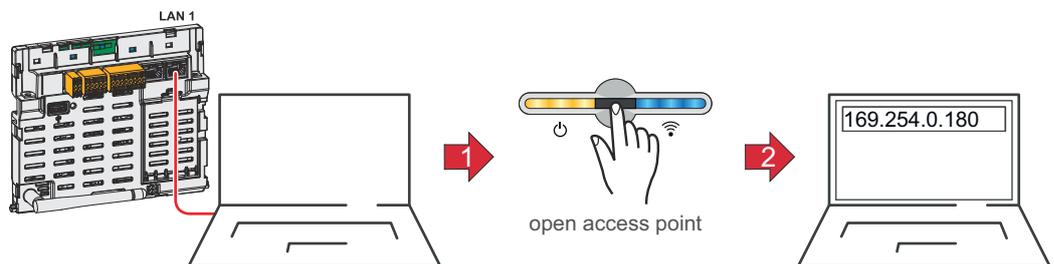

- 1 Establish a connection to the inverter (LAN1) using a network cable (min. CAT5 STP).
- 2 Open the access point by touching the sensor once   
✓ *Communications LED flashes blue.*
- 3 Enter the IP address 169.254.0.180 in the address bar of the browser and confirm. The installation wizard opens.
- 4 Follow the installation wizard and complete the installation in the individual areas.
- 5 Add the system components in Fronius Solar.web and commission the PV system.

The network wizard and product setup can be performed independently. A network connection is required for the Fronius Solar.web installation wizard.

# De-energizing the inverter and switching it back on

## Risk of rupture





### WARNING!

In the case of electrical devices with a high housing protection class, there is a risk of explosion in the event of a fault. Possible causes are defective components that release gases, improperly installed or commissioned devices, or the penetration of gas via lines (conduits).

This may result in serious personal injury and damage to property.

- ▶ Turn off the automatic circuit breaker
- ▶ If possible, switch off the DC line in front of the inverter (additional external DC disconnecter)
- ▶ Turn the DC disconnecter to the "OFF" switch setting
- ▶ Remove the connection area cover
- ▶ Allow the capacitors of the inverter to discharge (2 minutes)

## De-energizing the inverter and switching it back on

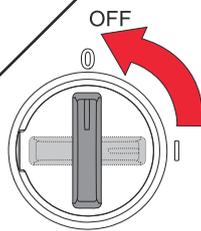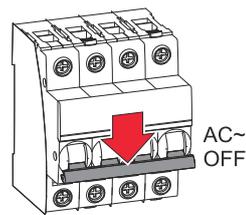

### Disconnecting the inverter from the power supply:

- 1 Turn off the automatic circuit breaker.
- 2 Turn the DC disconnecter to the "off" switch setting.

### IMPORTANT!

Wait for the capacitors of the inverter to discharge!

### Switching on the inverter:

If the inverter has not been in operation for six months or more after installation, it must be tested before commissioning.

- 1 Turn the DC disconnecter to the "on" switch setting.
- 2 Turn on the automatic circuit breaker.

# **Settings – User interface of the in- verter**



# User settings

---

## User login

- 1 Open the user interface of the inverter in the browser.
- 2 In the **Login** menu area, log in with username and password, or, in the **User > User Login** menu area, log in with username and password.

### **IMPORTANT!**

Depending on the authorization of the user, settings can be made in the individual menu areas.

---

## Selecting languages

- 1 In the **User > Language** menu area, select the desired language.

# Device configuration

---

## Components

All available components of the system can be added via **Add component+**.

---

### PV Generator

Activate the MPP tracker and enter the connected PV output in the relevant field.

---

### Primary meter

For problem-free operation with further energy producers, it is important to install the Fronius Smart Meter at the feed-in point. The inverter and further producers must be connected to the public grid via the Fronius Smart Meter. This setting also has an effect on the behavior of the inverter during the night. If the function is deactivated, the inverter switches to standby mode as soon as there is no more PV power available. The inverter starts again as soon as sufficient PV power is available.

If the function is activated, the inverter remains permanently connected to the grid in order to draw energy from other producers at any time.

After connecting the meter, the position must be configured.

- **Modbus RTU**
- **Modbus TCP**
- **MQTT** (available **MQTT device** is displayed automatically)

#### NOTE!

For communication via MQTT, the inverter and Smart Meter must be in the same sub-network.

The following parameters must also be defined for the Smart Meter:

- **Application (Production meter or Secondary meter)**
- **Name**
- **Category** (e.g., **inverter**)
- **IP Address** (for Modbus TCP)
- **Port** (for Modbus TCP)
- **Modbus Address** (for Modbus RTU and TCP)

The Watt value for the production meter is the sum of all production meters. The Watt value for the secondary meter is the sum of all secondary meters.

---

### Ohmpilot

All the Ohmpilots available in the system are displayed. Select the desired Ohmpilot and add to the system via "Add."

---

## Functions and I/Os

### Load Management

Up to four pins for the load management can be selected here. Further settings for the load management are available in the **Load Management** menu item. Default: Pin 1

---

### Australia - Demand Response Modes (DRM)

The pins for control via DRM can be set here:

Mode	Description	Information	DRM Pin	I/O Pin
DRM0	Inverter disconnects from the grid	DRM0 occurs in the event of an interruption or short circuit on the REF GEN or COM LOAD lines, or in the event of invalid combinations of DRM1 - DRM8. The grid relays open.	REF GEN COM LOAD	IO4 IO5
DRM1	Import $P_{nom} \leq 0\%$ without disconnection from grid	currently not supported	DRM 1/5	IN6
DRM2	Import $P_{nom} \leq 50\%$	currently not supported	DRM 2/6	IN7
DRM3	Import $P_{nom} \leq 75\%$ & $+Q_{rel}^* \geq 0\%$	currently not supported	DRM 3/7	IN8
DRM4	Import $P_{nom} \leq 100\%$	currently not supported	DRM 4/8	IN9
DRM5	Export $P_{nom} \leq 0\%$ without disconnection from grid	currently not supported	DRM 1/5	IN6
DRM6	Export $P_{nom} \leq 50\%$	currently not supported	DRM 2/6	IN7
DRM7	Export $P_{nom} \leq 75\%$ & $-Q_{rel}^* \geq 0\%$	currently not supported	DRM 3/7	IN8
DRM8	Export $P_{nom} \leq 100\%$	currently not supported	DRM 4/8	IN9

The percentage specifications always relate to the rated device power.

### IMPORTANT!

If the Demand Response Mode (DRM) function is activated and no DRM control is connected, the inverter switches into standby mode.

### Demand Response Modes (DRM)

Here you can enter a value for the apparent power input and the apparent power output for the Australia country setup.

### Inverter

#### Force standby

When this function is activated, the supply of energy from the inverter into the grid is interrupted. This makes it possible to shut down the inverter without power and protect its components. The standby function is automatically deactivated when the inverter is restarted.

#### Fan test

### IMPORTANT!

For settings in this menu item, select the **Technician** user, enter the password for the **Technician** user, and confirm. Settings may only be made by trained and qualified personnel!

This function can be used to check whether the fans of the inverter are working correctly based on acoustics, for example after replacing a fan.

**1** Click **Start fan test**

- ✓ *The inverter successively activates all fans that are running at partial load during the test phase to avoid unnecessary noise. The inverter is in standby during this time.*
- ✓ *The test takes around 30 seconds per fan. The inverter then switches back to normal operation. The test can be stopped manually using the **Stop fan test** function.*

**AC network**

Parameter	Value range	Description
<b>Neutral conductor status</b>	Not connected	The neutral conductor is not required in the system configuration and is therefore not connected.
	Connected	The neutral conductor is connected.

**PV 1 to PV 4**

Parameter	Value range	Description
<b>Mode</b>	Off	The MPP tracker is deactivated.
	Auto	The inverter uses the voltage at which the max. possible output of the MPP tracker is possible.
	Fixed	The MPP tracker uses the voltage defined in <b>UDC fixed</b> .
<b>UDC fixed</b>	150-870 V	The inverter uses the fixed voltage that is used on the MPP tracker.
<b>Dynamic Peak Manager</b>	Off	Function is deactivated.
	On	The entire solar module string is checked for optimization potential and determines the best possible voltage for the supply of energy from the inverter into the grid.

**Ripple control signal**

Ripple control signals are signals that are sent by the energy company in order to switch controllable loads on and off. Depending on the installation situation, ripple control signals can be dampened or amplified by the inverter. This can be counteracted if necessary by applying the following settings.

Parameter	Value range	Description
<b>Reduction of influence</b>	Off	Function is deactivated.
	On	Function is activated.
<b>Frequency of the ripple control signal</b>	100-3,000 Hz	The frequency specified by the energy company must be entered here.
<b>Grid inductance</b>	0.00001-0.005 H	The value measured at the infeed point must be entered here.

**Measures to prevent FI/RCMU false alarms**  
(when using a 30 mA residual current circuit breaker)

**NOTE!**

**A residual current circuit breaker for the AC connecting cable may be required depending on national regulations, the grid operator, and other conditions.**

A type A residual current circuit breaker is generally sufficient in this case. Nevertheless, false alarms can be triggered for the type A residual current circuit breaker in individual cases and depending on local conditions. For this reason, Fronius recommends using a residual current circuit breaker suitable for frequency inverters with a release current of least 100 mA, taking into account national provisions.

Parameter	Value range	Description
<b>Leakage current factor to reduce RCMU/FI false tripping</b>	0-0.25 (default: 0.16)	By reducing the setting value, the leakage current is reduced and the intermediate circuit voltage is increased, which slightly lowers the efficiency. - A setting value of 0.16 ensures optimum efficiency. - A setting value of 0 enables minimum leakage currents.
<b>Shutdown before 30 mA FI triggers</b>	Off	The function for reducing false tripping of the residual current circuit breaker is deactivated.
	On	The function for reducing false tripping of the residual current circuit breaker is activated.
<b>Rated non-tripping fault current limit value</b>	0.015-0.3	Value of the non-tripping residual current specified by the manufacturer for the residual current circuit breaker at which the residual current circuit breaker does not switch off under specified conditions.

**Insulation warning**

Parameter	Value range	Description
<b>Insulation warning</b>	Off	The insulation warning is deactivated.
	On	The insulation warning is activated. A warning is output in the event of an insulation fault.
<b>Insulation measurement mode</b>	Exact	Insulation monitoring takes place with the highest degree of accuracy and the measured insulation resistance is displayed on the user interface of the inverter.
	Fast	Insulation monitoring takes place with a lesser degree of accuracy, whereby the time to take the insulation measurement is shortened and the insulation value is not displayed on the user interface of the inverter.

Parameter	Value range	Description
<b>Threshold for the insulation warning</b>	100 10,000 kΩ	If the value drops below the threshold, status code 1083 is displayed on the user interface of the inverter.

# System

---

## General

- 1 Enter the name of the system in the input field **PV System Name** (max. 30 characters).
  - 2 Select the **Timezone Region** and **Timezone Location** in the drop-down lists.
  - 3 Click **Save**.
- ✓ *System name, time zone, and time zone location are saved.*
- 

## Update

All available updates for inverters and other Fronius devices are provided on the product pages and in the "Fronius Download Search" area at [www.fronius.com](http://www.fronius.com).

### Update

- 1 Drag the firmware file into the **Drag & drop file here** field, or select via **Browse file**.
- ✓ *Update is started.*
- 

## Setup wizard

The guided setup wizard can be accessed here.

---

## Restoring factory settings

### All settings

Resets all configuration data, apart from the country setup. Changes to the country setup may only be made by authorized personnel.

### All settings without network

Resets all configuration data, apart from the country setup and the network settings. Changes to the country setup may only be made by authorized personnel.

---

## Event log

**Current messages** All current events of the linked system components are displayed here.

### IMPORTANT!

Depending on the type of event, this must be confirmed via the "tick" button so that it can be further processed.

### History

All events of the linked system components that are no longer present are displayed here.

---

## Information

All the information regarding the system and the current settings is displayed and provided for download in this menu area.

---

## License Manager

The power data and functional scope of the inverter are stored in the license file. If the inverter, DC power stage set PC board, or data communication area is replaced, the license file must also be replaced.

---

## Licensing

### Licensing - online (recommended)

This requires an Internet connection and a completed Fronius Solar.web configuration.

- 1 Finish all installation work (refer to the chapter headed [Closing the inverter's connection area/housing cover, and commissioning](#) on page 53).
- 2 Establish a connection to the user interface of the inverter.
- 3 Enter the serial number and verification code (VCode) of the defective and replacement device. The serial number and VCode can be found on the rating plate of the inverter (refer to the chapter headed [Information on the device](#) on page 14).
- 4 Click the **Start online licensing** button.
- 5 Skip past the Terms and conditions of use and Network settings menu items by clicking **Next**.

✓ *License activation is started.*

### Licensing - offline

There must be no Internet connection in this case. If offline licensing is carried out while there is an active Internet connection, the license file is automatically loaded onto the inverter, resulting in the following error when the license file is uploaded: "The license has already been installed and the wizard can be closed".

- 1 Finish all installation work (refer to the chapter headed [Closing the inverter's connection area/housing cover, and commissioning](#) on page 53).
- 2 Establish a connection to the user interface of the inverter.
- 3 Enter the serial number and verification code (VCode) of the defective and replacement device. The serial number and VCode can be found on the rating plate of the inverter (refer to the chapter headed [Information on the device](#) on page 14).
- 4 Click the **Start offline licensing** button.
- 5 Download the service file onto the mobile device by clicking the **Download service file** button.
- 6 Open [licensemanager.solarweb.com](http://licensemanager.solarweb.com) and log in with username and password.
- 7 Drag the service file into the **Drag service file here or click to upload** field or click to upload it.
- 8 Download the newly generated license file onto the mobile device by clicking the **Download license file** button.
- 9 Switch to the user interface of the inverter and drag the license file into the **Drag & drop license file here** field or select via **Choose license file**.

✓ *License activation is started.*

---

## Support

### Activating the support user

- 1 Click the **Enable Support User Account** button.

✓ *The support user is activated.*

### IMPORTANT!

The support user exclusively enables Fronius Technical Support to configure settings on the inverter via a secure connection. Access is deactivated by clicking the **Terminate Support User Session** button.

---

### Generating support info (for Fronius Support)

- 1 Click the **Generate support info** button.

**2** The sdp.cry file is downloaded automatically. For manual download, click the **Download support info** button.

✓ *The sdp.cry file is saved in the downloads.*

---

### **Activating remote access**

**1** Click the **Activate Remote Access** button.

✓ *Remote access is activated for Fronius Support.*

### **IMPORTANT!**

The remote access exclusively enables Fronius Technical Support to access the inverter via a secure connection. In this case, diagnostics data are transmitted, which are used for troubleshooting. The remote access can be activated only upon request by Fronius Support.

# Communication

---

## Network

### Server addresses for data transfer

If a firewall is used for outgoing connections, the below protocols, server addresses, and ports must be allowed for successful data transfer, see:

[https://www.fronius.com/~/.downloads/Solar%20Energy/Firmware/SE\\_FW\\_Changelog\\_Firewall\\_Rules\\_EN.pdf](https://www.fronius.com/~/.downloads/Solar%20Energy/Firmware/SE_FW_Changelog_Firewall_Rules_EN.pdf)

When using FRITZ!Box products, Internet access must be configured without any restrictions or limitations. The DHCP Lease Time (validity) must not be set to 0 (=infinite).

---

### LAN:



### Establishing a connection:

- 1 Enter the host name.
- 2 Select the connection type: **Automatic** or **Static**.
- 3 For the **Static** connection type, enter the IP address, subnet mask, DNS, and gateway.
- 4 Click the **Connect** button.

✓ *The connection is established.*

After connecting, the status of the connection should be checked.

---

### WiFi:



### Establishing a connection via WPS:

- The access point of the inverter must be active. This is opened by touching the sensor  > Communications LED flashes blue
- 1 Establish the connection to the inverter in the network settings (the inverter is displayed with the name "FRONIUS\_" and the serial number of the device).
  - 2 Enter the password from the rating plate and confirm.  
**IMPORTANT!**  
To enter the password in Windows 10, first select the **Connect using a security key instead** link to be able to establish the connection with the password.
  - 3 Enter the IP address 192.168.250.181 in the address bar of the browser and confirm.
  - 4 In the **Communication > Network > WLAN > WPS** menu area, click the **Activate** button.
  - 5 Activate WPS on the WiFi router (see WiFi router documentation).
  - 6 Click on the **Start** button. The connection is established automatically.
  - 7 Log in to the user interface of the inverter.
  - 8 Check the network details and connection to Fronius Solar.web.

After connecting, the status of the connection should be checked.

**Selecting and connecting to a WiFi network:**The networks found are displayed in the list. Clicking on the Refresh button will ↻ perform a new search for available WiFi networks. The selection list can be limited further via the **Search network** input field.

- 1 Select network from the list.
  - 2 Select the connection type: **Automatic** or **Static**.
  - 3 For the **Automatic** connection type, enter the WiFi password and host name.
  - 4 For the **Static** connection type, enter the IP address, subnet mask, DNS, and gateway.
  - 5 Click the **Connect** button.
- ✓ *The connection is established.*

After connecting, the status of the connection should be checked.

---

#### Access point:



The inverter serves as the access point. A PC or mobile device connects directly to the inverter. Connecting to the Internet is not possible. Assign a **Network Name (SSID)** and **Network Key (PSK)** to establish a connection. Assign a **Network Key (PSK)** with at least 20 characters, consisting of upper and lower case letters, special characters, and numbers, to protect the device from unauthorized access.

It is possible to operate a connection via WiFi and via the access point at the same time.

---

## Modbus

The inverter communicates with system components (e.g., Fronius Smart Meter) and other inverters via Modbus. The primary device (Modbus Client) sends control commands to the secondary device (Modbus Server). The control commands are executed by the secondary device.

### RTU Server

The following input fields and functions are available for communication via Modbus RTU:

---

#### Meter address offset

The value entered (1-247) is the identification number (unit ID) assigned to the meter.

Factory setting: 200

---

#### Inverter address

The value entered (1-247) is the identification number (unit ID) assigned to the inverter.

Factory setting: 1

---

#### SunSpec Model Type

There are two different settings, depending on the SunSpec model.

**float:** SunSpec Inverter Model 111, 112, 113 or 211, 212, 213.

**int + SF:** SunSpec Inverter Model 101, 102, 103 or 201, 202, 203.

---

---

**Interface**

Select one of the two interfaces **Modbus 0 (M0) RTU** or **Modbus 1 (M1) RTU**.

---

**Baud Rate**

The baud rate influences the speed of the transmission between the individual components connected in the system. When selecting the baud rate, it should be ensured that this is the same on the transmit and receive side.

---

**Parity**

The parity bit can be used for parity checks. This is used to identify transmission errors. In this case, a parity bit can ensure a specified number of bits. The value (0 or 1) of the parity bit must be calculated at the transmitter, and is checked at the receiver using the same calculation. The calculation of the parity bit can be carried out for even or odd parity.

---

**Allow Control**

If this option is activated, the inverter is controlled via Modbus.

Inverter control includes the following functions:

- On/off
  - Power reduction
  - Setting a constant power factor (cos phi)
  - Setting a constant reactive power
  - Battery control settings with battery
- 

**TCP Server**

The following input fields and functions are available for communication via Modbus TCP:

---

**Meter address offset**

The value entered (1-247) is the identification number (unit ID) assigned to the meter.

Factory setting: 200

---

**SunSpec Model Type**

There are two different settings, depending on the SunSpec model.

**float:** SunSpec Inverter Model 111, 112, 113 or 211, 212, 213.

**int + SF:** SunSpec Inverter Model 101, 102, 103 or 201, 202, 203.

---

**Modbus port**

Number of the TCP port (502 or 1502) to be used for Modbus communication.

---

**Meter Address**

The value entered is the identification number (unit ID) assigned to the meter, which can be found on the user interface of the inverter in the **Communication > Modbus** menu area.

Factory setting: 200

---

**Allow Control**

If this option is activated, the inverter is controlled via Modbus.

Inverter control includes the following functions:

- On/off
  - Power reduction
  - Setting a constant power factor (cos phi)
  - Setting a constant reactive power
  - Battery control settings with battery
-

---

**Restrict Control**

Restrict the control of the inverter to a device with a fixed IP address.

---

**Cloud control**

The utility/energy supplier can influence the output power of the inverter with **Cloud control**. This requires the inverter to have an active Internet connection.

Parameter	Display	Description
<b>Cloud control</b>	Off	Cloud control of the inverter is deactivated.
	On	Cloud control of the inverter is activated.

Profile	Value range	Description
<b>Allow cloud control for regulatory purposes (Technician)</b>	Deactivated/ Activated	The function may be mandatory for proper operation of the system.*
<b>Allow cloud control for Virtual Power Plants (Customer)</b>	Deactivated/ Activated	If the <b>Allow remote control for regulatory purposes (technician)</b> function is activated (technician access required), the <b>Allow remote control for virtual power plants</b> function is automatically activated and cannot be deactivated.*

**\* Cloud control**

A virtual power plant is an interconnection of multiple generators. This virtual power plant can be controlled by means of the cloud control via the Internet. An active inverter Internet connection is a prerequisite for this. System data are transferred.

---

**Solar API**

The **Solar API** is an IP-based, open JSON interface. If enabled, IOT devices in the local network may access inverter information without authentication. For security reasons, the interface is disabled in the factory. Activate the interface manually if it is required for a third-party application (e.g., EV charger, smart home solutions, etc.). If there is a Fronius Wattpilot in the network, the inverter automatically activates the **Solar API**.

Fronius recommends using Fronius Solar.web for monitoring and analyzing the inverter and connected system components.

In the event of a firmware update to version 1.14.x, the Solar API setting is applied. In systems with a version below 1.14.x, the Solar API is activated; with higher versions, it is deactivated but can be switched on and off via the menu.

**Manually activating the Fronius Solar API**

On the user interface of the inverter in the **Communication > Solar API** menu area, activate the function **Activate communication via Solar API**.

---

**Fronius Solar.web**

In this menu, you can agree to the technically necessary data processing or reject it.

In addition, the transfer of analysis data and remote configuration via Fronius Solar.web can be enabled or disabled.

# Safety and grid requirements

---

## Country setup

### **WARNING!**

#### **Danger from unauthorized fault analyses and repair work.**

This can result in serious injury and damage to property.

- ▶ Fault analyses and repair work on the PV system may only be carried out by installers/service technicians from authorized specialist companies in accordance with national standards and regulations.

### **NOTE!**

#### **Risk due to unauthorized access.**

Incorrectly set parameters can have a negative effect on the public grid and/or the grid power feed operation of the inverter and result in the loss of standard conformity.

- ▶ Parameters may only be adjusted by installers/service technicians from authorized specialist companies.
- ▶ Do not give the access code to third parties and/or unauthorized persons.

### **NOTE!**

#### **Risk due to incorrectly set parameters.**

Incorrectly set parameters can have a negative effect on the public grid and/or cause inverter malfunctions and failures and result in the loss of standard conformity.

- ▶ Parameters may only be adjusted by installers/service technicians from authorized specialist companies.
- ▶ Parameters may only be adjusted if this has been approved or requested by the utility.
- ▶ Any parameter adjustments must be made in compliance with nationally applicable standards and/or directives as well as the specifications of the utility.

The **Country Setup** menu area is intended exclusively for installers/service technicians from authorized specialist companies. To apply for the access code required for this menu area, see chapter [Requesting inverter codes in Solar.SOS](#).

The selected country setup for the country in question contains preset parameters in accordance with nationally applicable standards and requirements. Changes may need to be made to the selected country setup depending on local grid conditions and the specifications of the utility.

---

## Requesting inverter codes in Solar.SOS

The **Country Setup** menu area is intended exclusively for installers/service technicians from authorized specialist companies. The inverter access code required for this menu area can be requested in the Fronius Solar.SOS portal.

Requesting inverter codes in Fronius Solar.SOS:

- 1 Open [solar-sos.fronius.com](https://solar-sos.fronius.com) in the browser
- 2 Log in with your Fronius account
- 3 At the top right, click on the drop-down menu 

- 4 Select the **Show inverter codes** menu item
  - ✓ A contract page appears on which the request for the access code to change the grid parameters for Fronius inverters is located
- 5 Accept the terms and conditions of use by checking **Yes, I have read and agree to the terms of use** and click **Confirm & Save**
- 6 After that, the codes can be retrieved in the drop-down menu at the top right under **Show inverter codes**



#### CAUTION!

##### **Risk due to unauthorized access.**

Incorrectly set parameters can have a negative effect on the public grid and/or the grid power feed operation of the inverter and result in the loss of standard conformity.

- ▶ Parameters may only be adjusted by installers/service technicians from authorized specialist companies.
- ▶ Do not give the access code to third parties and/or unauthorized persons.

#### **Absolute Generation Limit**

Activating this function limits the output power of the inverter to the specified value in watts.

#### **Import limitation**

Energy companies or grid operators can prescribe import limitations for inverters. The amperage is limited to the set value.

- 1 Under **Limit** select **Current Limitation**.
- 2 Enter the **limit value** in amperes.
- 3 Click on **Save**.

#### **Export limitation**

Energy companies or grid operators can prescribe feed-in limits for inverters (e.g., max. 70% of the kWp or max. 5 kW). The effective power at the grid connection point (installation location of the Fronius Smart Meter or primary meter) is limited to the set value.

The feed-in limit takes account of self-consumption in the household before the power of an inverter is reduced. An individual limit can be set.

In order to minimize the yield losses due to the power of feeding in limitation, the power available from the module array can be:

- Used for (controllable) loads such as Fronius Ohmpilot, Fronius Wattpilot, I/O-controlled loads
- Stored in a battery

If these possibilities have been exhausted, the power drawn from the module array is reduced to such an extent that the feed-in limit is not exceeded.

##### **Total DC power of the system**

Input field for the total DC power of the entire system in Wp.

This value is used if the **Maximum grid feed-in power** is specified in %.

##### **Power Control** deactivated

The inverter converts all available PV energy.

### **Power Control** activated

Feeding in limited with the following selection options:

- **Total Power Limit**  
The entire photovoltaic system is limited to a fixed feed-in limit. A value must be set for the permissible total power of feeding in.
- **Limit per phase – asymmetric generation**  
The optimum per phase is determined. The inverter regulates the individual phases in such a way that none of the phases exceeds the set value.
- **Limit per phase – weakest phase**  
Each individual phase is measured. If the permissible feed-in limit is exceeded on one phase, the inverter symmetrically reduces the total power for all phases until the limit is reached.

### **IMPORTANT!**

The settings for **Limit per phase** need to be made if national standards and regulations require a limitation of the single-phase power. A value must be set for the permissible power of feeding in for each phase.

### **IMPORTANT!**

**Power Control** settings are automatically applied for the dynamic feed-in limit of I/O power management. **Total Power Limit** is the default configuration.

### **Export Limit Control (Soft Limit)**

If this value is exceeded, the inverter readjusts down to the set value.

### **Export Limit Protection (Hard Limit Trip)**

### **IMPORTANT!**

This function is only available if **Export Limit Control (Soft Limit)** is activated.

If this value is exceeded, the inverter switches off within max. 5 seconds. This value must be higher than the value set for **Export Limit Control (Soft Limit)**.

### **Maximum grid feed-in power**

Input field for the **Maximum grid feed-in power** in W or % (setting range: -10 to 100%).

If there is no meter in the system or if the primary meter has failed, the inverter limits its output power to the set value.

Activate the function **Reduce inverter power to 0% if meter connection has been lost** for control in the event of a fail-safe.


The use of WiFi for communication between the Fronius Smart Meter and the inverter is not recommended for the fail-safe function. Even short-term disconnections can cause the inverter to shut down. This problem is particularly common with weak WiFi signal strengths, a slow or overloaded WiFi connection, and automatic channel selection of the router.

### **Limit multiple inverters (only Soft Limit)**

Control of the dynamic feed-in limit for several inverters, for details on configuration, see chapter [Dynamic feed-in limit with multiple inverters](#) on page 77.

**Feed-in limit – examples**

**"Total Power Limit"**  
(feed-in limit 0 kW)

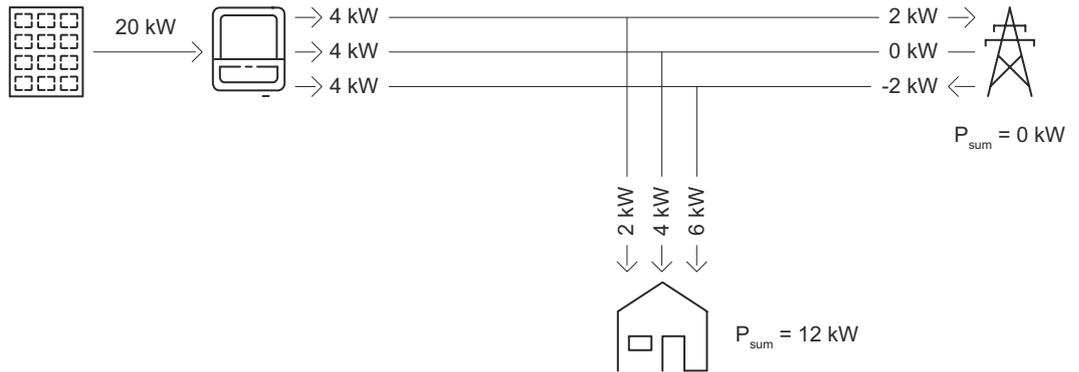


**Explanation**

No power (0 kW) may be fed into the public grid at the grid feed-in point. The load requirement in the home network (12 kW) is supplied by the power generated by the inverter.

**"Limit per phase – asymmetric generation"**

(feed-in limit 0 kW per phase) – asymmetric

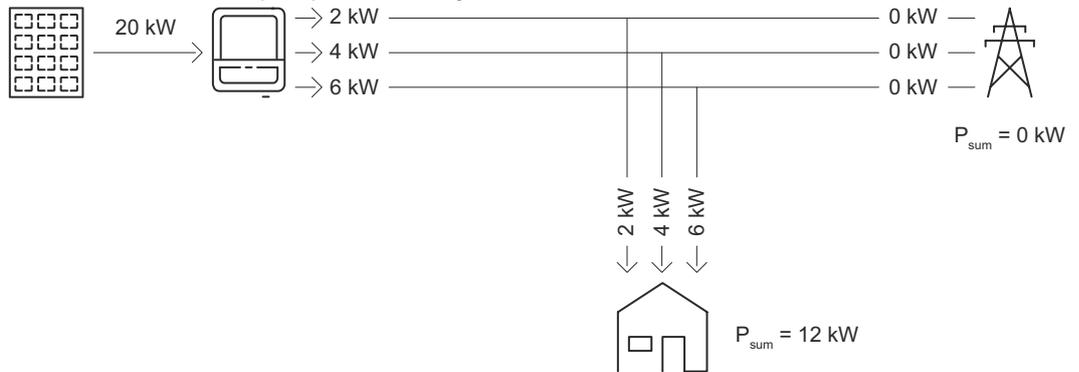


**Explanation**

The load requirement in the home network per phase is determined and supplied.

**"Limit per phase – asymmetric generation"**

(feed-in limit 1 kW per phase) – asymmetric

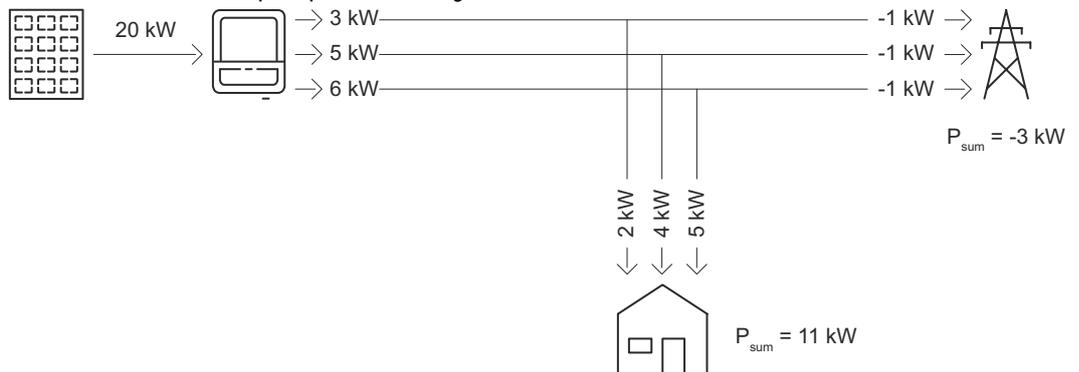


**Explanation**

The load requirement in the home network per phase is determined and supplied. In addition, the excess production (1 kW per phase) is fed into the public grid in accordance with the maximum permitted feed-in limit.

### "Limit per phase – weakest phase"

(feed-in limit 0 kW per phase) – symmetrical

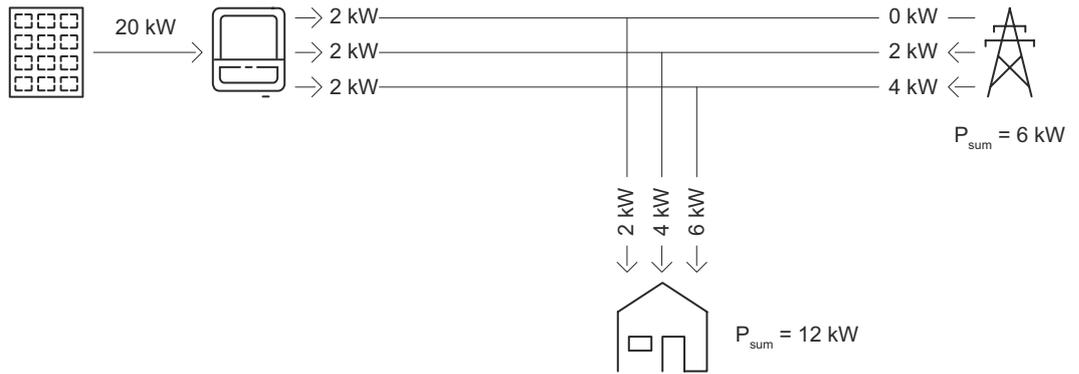


### Explanation

The weakest phase in the load requirement in the home network is determined (phase 1 = 2 kW). The result of the weakest phase (2 kW) is applied to all phases. Phase 1 (2 kW) can be supplied. Phase 2 (4 kW) and phase 3 (6 kW) cannot be supplied, power from the public grid is required (phase 2 = 2 kW, phase 3 = 4 kW).

### "Limit per phase – weakest phase"

(feed-in limit 1 kW per phase) – symmetrical

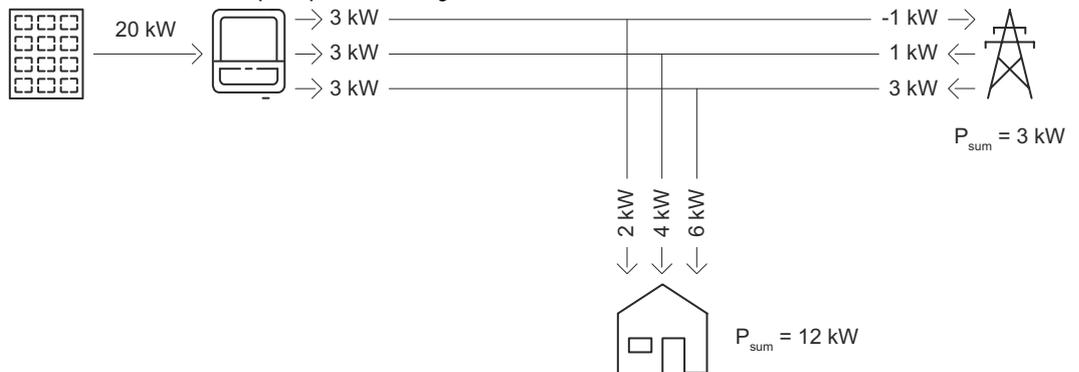

### Explanation

The weakest phase in the load requirement in the home network is determined (phase 1 = 2 kW) and the max. permitted feed-in limit (1 kW) is added. The result of the weakest phase (2 kW) is applied to all phases. Phase 1 (2 kW) can be supplied. Phase 2 (4 kW) and phase 3 (6 kW) cannot be supplied, power from the public grid is required (phase 2 = 1 kW, phase 3 = 3 kW).

### Dynamic feed-in limit with multiple inverters

### IMPORTANT!

To view and change settings in this menu item, select the user **Technician**, and enter and confirm the password for the user **Technician**. Settings in this menu area may only be made by trained and qualified personnel.

The inverter can be used as a primary device to control dynamic feed-in limits for additional Fronius inverters (secondary devices) so that feed-in limits prescribed by energy companies or utilities can be centrally managed. This control refers to the **Soft Limit** feed-in limit (see [Export limitation](#)). The following requirements must be met:


- Power Control and the **Limit multiple inverters (only Soft Limit and I/O Power Management)** function are activated and configured on the user interface of the primary device.
- Primary device and secondary device(s) are physically connected to the same network router via LAN.
- Inverter Control via Modbus TCP is activated and configured for all secondary devices.
- The Fronius Smart Meter is configured as a primary meter and connected to the primary device.

**IMPORTANT!**

Only one primary meter is required for the primary device.

**IMPORTANT!**

If an inverter with a battery is connected, it must be used as the primary device for dynamic feed-in limits.

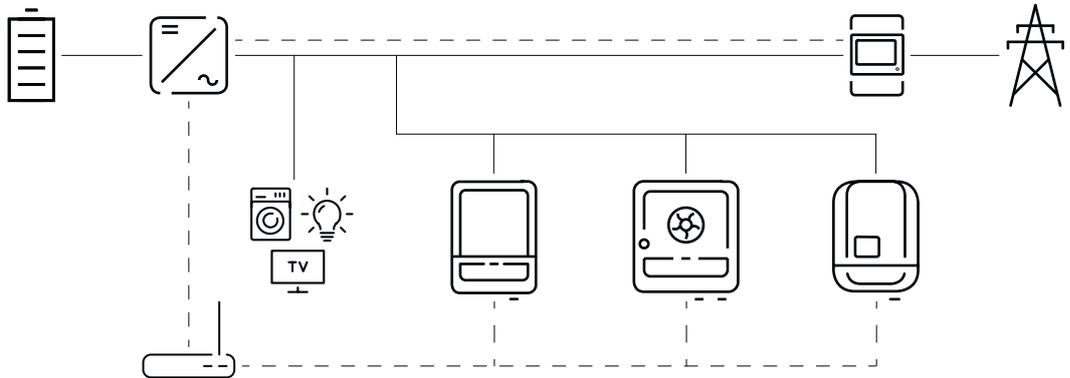

Example connection diagram for dynamic feed-in limit with multiple inverters

**System limits**

- Systems with a maximum of 20 inverters (1 primary device + 19 secondary devices) are supported.
- The control is designed for photovoltaic systems with a total output of up to 300 kW.
- In the case of larger system capacities, the control times in the system are extended.
- For systems >300 kW, the use of a plant controller is recommended.

The dynamic feed-in limit is available for the following device combinations:

Primary device	Secondary devices
Fronius GEN24	Fronius GEN24, Fronius Verto, Fronius Tauro, Fronius Argeno, Fronius SnapINverter with Fronius Datamanager 2.0*
Fronius Verto	Fronius GEN24, Fronius Verto, Fronius Tauro, Fronius Argeno, Fronius SnapINverter with Fronius Datamanager 2.0*
Fronius Tauro	Fronius GEN24, Fronius Verto, Fronius Tauro, Fronius Argeno, Fronius SnapINverter with Fronius Datamanager 2.0*

\* Up to four additional Fronius SnapINverters can be connected to each Fronius SnapINverter with Fronius Datamanager 2.0.

**Primary meter**

The Fronius Smart Meter acts as the only primary meter and is connected directly to the primary device. The Smart Meter measures the total output power of all inverters into the grid and passes this information to the primary device.

## Primary device

The export limitation is configured on the user interface of the inverter:

- 1 In the **Safety and Grid Regulations > Export Limitation** menu area, activate the **Power Control** function and select **Total Power Limit**.
- 2 Configure the country-specific settings.
- 3 In the **Safety and Grid Regulations > Export Limitation** menu area, activate the **Limit multiple inverters (only Soft Limit and I/O Power Limit)** function.

The primary device automatically scans the network for available secondary devices. A list of the inverters found is displayed. Click the refresh button  to perform the search again.

DETECTED INVERTERS		ADDITIONAL INVERTERS				
26 Inverters were found 						<a href="#">Use all Inverters</a>
Status	Name	Device Type	Serial Number	Hostname	Ip Address	Use Inverter
INACTIVE	jf-rop	S10RW	33302856	jf-rop.local	10.5.48.141	
INACTIVE	Symo-Gen24-12SC7	S12RW	34590379	Symo-Gen24-12-SC7.J...	10.5.48.29	
INACTIVE	pilot2v-haas1	V30RW	45454545	pilot2v-haas1.local	10.5.48.165	

- 4 Activate **Use Inverter** against all secondary devices to which an export limitation applies. Click **Use all inverters** to enable the function for the primary device and all secondary devices.

The status of the inverters listed is displayed as follows:

- **Inactive:** Secondary device is not configured for the power control.
- **Disconnected:** Secondary device is configured, network connection not possible.
- **Connected:** Secondary device is configured and accessible via the network of the primary device.

- 5 In the **Safety and Grid Regulations > I/O Power Management** menu area, set the controlling priorities as follows:
  1. **I/O Power Limit**
  2. **Export Limitation**
  3. **Modbus**

## Adding Fronius Argento and other inverters manually

- 1 Select the **Additional inverters** menu area.
- 2 Enter the name, hostname or IP address, and the Modbus address of the secondary device.
- 3 Click **Add inverter +**.

## Secondary device

A secondary device takes over the export limitation of the primary device. No data are sent to the primary device for the export limitation. The following configurations must be set for the power control:

### User interface secondary device GEN24 / Verto / Tauro

- 1 Select the user **Technician** and enter the password for the user **Technician**.
- 2 In the **Modbus** menu area, activate the **TCP Server** mode and the **Allow Control** function.

- 3 For a fail-safe scenario, in the **Safety and Grid Regulations > I/O Power Management** menu area, set the controlling priorities as follows:
  1. **Modbus**
  2. **Export Limitation**
  3. **I/O Power Limit**
- 4 In the **Safety and Grid Regulations > Export Limitation** menu area, select and edit the following settings:
  - Activate the **Power Control** function
  - Select **Total Power Limit** and specify the total DC power of the entire system in W
  - Enable **Export Limit Control (Soft Limit)** and enter a value of 0 W for the **Maximum grid feed-in power**.
  - Enable the **Reduce inverter power to 0% if meter connection has been lost** function

## I/O Power Management

### General

Settings relevant to the grid operator are defined as rules under this menu item. This relates to an effective power limit in % or watts and/or a power factor specification.

### IMPORTANT!

To view and change settings in this menu item, select the user **Technician**, and enter and confirm the password for the user **Technician**. Only technical specialists may make settings in this menu area.

Under **Rules**, expand a menu area (e.g., **Rule 1**). Configure the following settings:

### Limitation

### IMPORTANT!

A dynamic feed-in limit for several inverters can be configured under [Export limitation](#). I/O power management rules are transferred from the inverter (primary device) to connected inverters in the system (secondary devices).

Select the following rules for power management:

- **I/O Generation Limit (%)**: The total output power of the connected inverter is statically limited to the defined value of the absolute rated power.
- **Export Limit Control (W)**: The effective power fed in at the grid connection point is limited to the set value (e.g., 5000 watts). The output powers of the inverters (primary and secondary devices) are dynamically adjusted depending on their self-consumption.
- **Shutdown single device**: The inverter stops grid power feed operation and switches to standby mode.

### IMPORTANT!

The rules for shutdown apply to this device and cannot be applied to other inverters in the system.

### Input pattern (assignment of individual I/Os)

- 1 click = white, contact open
- 2 clicks = blue, contact closed
- 3 clicks = gray, not used

### Power Factor (cos $\varphi$ ) (define value)

### Impedance response

- **Capacitive**
- **Inductive**

### DNO Feedback

If the rule is activated, always configure the **DNO Feedback** output, e.g., for operating a signal device.

The **Import** and **Export** of defined rules can be carried out in the data format \*.fpc.

If there is an active rule for the control of the inverter, the device indicates this in the **overview** of the user interface under **Device State**.

---

### Controlling Priorities

Used to set controlling priorities for I/O Power Management (DRM or ripple control receiver), the feed-in limit, and control via Modbus.

1 = highest priority, 3 = lowest priority

Local priorities of the I/O Power Management, the feed-in limit, and the Modbus interface are deactivated by cloud control commands (regulatory purposes and virtual power plants) – see [Cloud control](#) on page 71 – and by backup power.

In terms of control priorities, the device differentiates between **power control** and **inverter shutdown**. Inverter shutdown always takes precedence over power control. An inverter shutdown command is always executed and does not need to be prioritized.

### Power control

- I/O Power Management (DRM/ripple control receiver signal)—according to command
- Export Limitation (Soft Limit)—always active
- Modbus (generation limit)—according to command


### Inverter shutdown

- Shutdown single device
- Export Limitation (Hard Limit)
- Modbus (shutdown command) – according to command

---

### Connection diagram - 4 relays

Connect the ripple control signal receiver and the I/O terminals of the inverter to one another as shown in the connection diagram. For distances greater than 10 m between the inverter and the ripple control signal receiver, use a shielded data communication cable (CAT 5 or higher) with twisted cable pairs. Connect the shielding on one side to the push-in terminal of the data communication area (SHIELD).

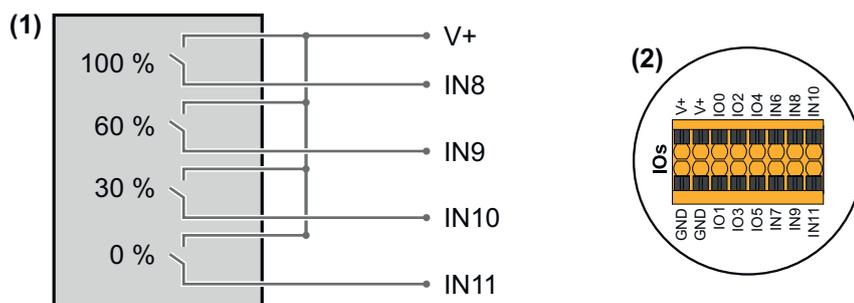

- (1) Ripple control signal receiver with 4 relays for effective power limitation.
- (2) I/O connection terminals of the data communication area.


**Use pre-configured file for 4-relay operation:**

- 1** Download the file (.fpc) under [4-relay operation](#) to the mobile device.
- 2** Upload the file (.fpc) in the **I/O Power Management** menu area by clicking the **Import** button.
- 3** Click **Save**.

✓ *The settings for 4-relay operation are saved.*

## I/O power management settings - 4 relays

### I/O Power Management



DNO feedback pin  
Not used

Rules + Add

**Rule 1**

0 2 4 6 8 10  
1 3 5 7 9 11

Limitation  
I/O Generation Limit (%)

Active Power \* 100 %

Power Factor (cos φ) \* 1 Impedance response Capacitive

DNO Feedback

**Rule 2**

0 2 4 6 8 10  
1 3 5 7 9 11

Limitation  
I/O Generation Limit (%)

Active Power \* 60 %

Power Factor (cos φ) \* 1 Impedance response Capacitive

DNO Feedback

**Rule 3**

0 2 4 6 8 10  
1 3 5 7 9 11

Limitation  
I/O Generation Limit (%)

Active Power \* 30 %

Power Factor (cos φ) \* 1 Impedance response Capacitive

DNO Feedback

**Rule 4**

0 2 4 6 8 10  
1 3 5 7 9 11

Limitation  
I/O Generation Limit (%)

Active Power \* 0 %

Power Factor (cos φ) \* 1 Impedance response Capacitive


DNO Feedback

Import Export

- 0 Activate Backup interlock
- 1 Rule 1
- 2 None
- 3 None
- 4 None
- 5 None
- 6 Open grid relais feedback
- 7 Backup interlock feedback
- 8 I/O control
- 9 I/O control
- 10 I/O control
- 11 I/O control

## Connection diagram - 3 relays

Connect the ripple control signal receiver and the I/O terminals of the inverter to one another as shown in the connection diagram. For distances greater than 10 m between the inverter and the ripple control signal receiver, use a shielded data communication cable (CAT 5 or higher) with twisted cable pairs. Connect the shielding on one side to the push-in terminal of the data communication area (SHIELD).

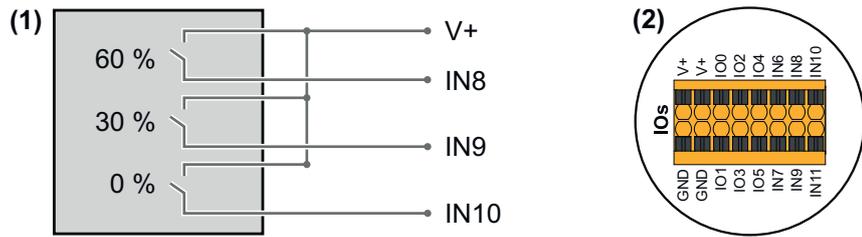

- (1) Ripple control signal receiver with 3 relays for effective power limitation.
- (2) I/O connection terminals of the data communication area.

**Use pre-configured file for 3-relay operation:**

- 1** Download the file (.fpc) under [3-relay operation](#) to the mobile device.
- 2** Upload the file (.fpc) in the **I/O Power Management** menu area by clicking the **Import** button.
- 3** Click **Save**.

✓ *The settings for 3-relay operation are saved.*

## I/O power management settings - 3 relays

### I/O Power Management

The interface shows a terminal block at the top with columns for V+/GND, I/O, and I. Below it, a dropdown menu for 'DNO feedback pin' is set to 'Not used'. A 'Rules' section contains four rule cards, each with a terminal selection grid, a limitation dropdown, and several adjustable parameters.

Rule	Active Power Limit (%)	Power Factor (cos φ)	Impedance response	DNO Feedback
Rule 1	100	1	Capacitive	On
Rule 2	60	1	Capacitive	On
Rule 3	30	1	Capacitive	On
Rule 4	0	1	Capacitive	On


At the bottom of the interface are 'Import' and 'Export' buttons.

- 0 Activate Backup interlock
- 1 Rule 1
- 2 None
- 3 None
- 4 None
- 5 None
- 6 Open grid relais feedback
- 7 Backup interlock feedback
- 8 I/O control
- 9 I/O control
- 10 I/O control
- 11 None

## Connection diagram - 2 relays

Connect the ripple control signal receiver and the I/O terminals of the inverter to one another as shown in the connection diagram. For distances greater than 10 m between the inverter and the ripple control sig-

nal receiver, use a shielded data communication cable (CAT 5 or higher) with twisted cable pairs. Connect the shielding on one side to the push-in terminal of the data communication area (SHIELD).

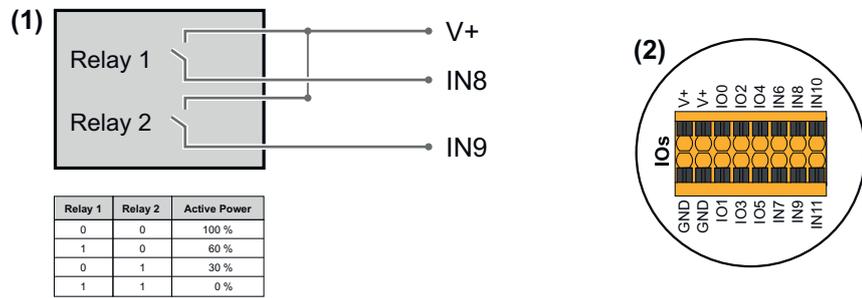


- (1) Ripple control signal receiver with 2 relays for effective power limitation.
- (2) I/O connection terminals of the data communication area.

**Use pre-configured file for 2-relay operation:**

- 1** Download the file (.fpc) under [2-relay operation](#) to the mobile device.
  - 2** Upload the file (.fpc) in the **I/O Power Management** menu area by clicking the **Import** button.
  - 3** Click **Save**.
- ✓ *The settings for 2-relay operation are saved.*

## I/O power management settings - 2 relays

### I/O Power Management



DNO feedback pin  
Not used

Rules + Add

**Rule 1** 🗑️ 🟢 ^

0 2 4 6 8 10
1 3 5 7 9 11

Limitation  
I/O Generation Limit (%) v

Active Power \* %  
 100

Power Factor (cos φ) \* Impedance response  
 1 Capacitive v

DNO Feedback

**Rule 2** 🗑️ 🟢 ^

0 2 4 6 8 10
1 3 5 7 9 11

Limitation  
I/O Generation Limit (%) v

Active Power \* %  
 60

Power Factor (cos φ) \* Impedance response  
 1 Capacitive v

DNO Feedback

**Rule 3** 🗑️ 🟢 ^

0 2 4 6 8 10
1 3 5 7 9 11

Limitation  
I/O Generation Limit (%) v

Active Power \* %  
 30

Power Factor (cos φ) \* Impedance response  
 1 Capacitive v

DNO Feedback

**Rule 4** 🗑️ 🟢 ^

0 2 4 6 8 10
1 3 5 7 9 11

Limitation  
I/O Generation Limit (%) v

Active Power \* %  
 0

Power Factor (cos φ) \* Impedance response  
 1 Capacitive v


DNO Feedback

📄 Import 📄 Export

- 0 Activate Backup interlock
- 1 Rule 1
- 2 None
- 3 None
- 4 None
- 5 None
- 6 Open grid relais feedback
- 7 Backup interlock feedback
- 8 I/O control
- 9 I/O control
- 10 None
- 11 None

## Connection diagram - 1 relay

The ripple control signal receivers and the I/O terminals of the inverter can be connected to one another as shown in the connection diagram. For distances of over 10 m between the inverter and the ripple control signal receiver, a CAT 5 STP cable is recommended as a minimum and the shielding must be connected on one side at the push-in terminal of the data communication area (SHIELD).

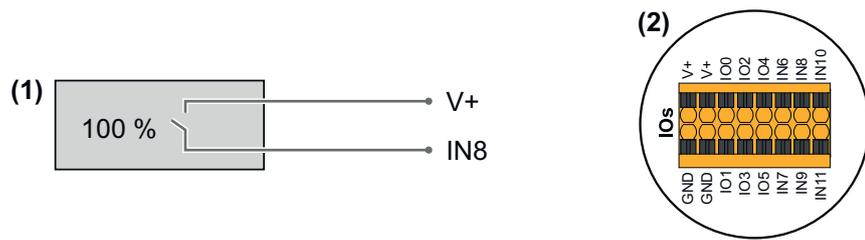

- (1) Ripple control signal receiver with 1 relay for effective power limitation.
- (2) I/O connection terminals of the data communication area.

**Use pre-configured file for 1-relay operation:**

- 1** Download the file (.fpc) under [1-relay operation](#) to the mobile device.
  - 2** Upload the file (.fpc) in the **I/O Power Management** menu area by clicking the **Import** button.
  - 3** Click **Save**.
- ✓ *The settings for 1-relay operation are saved.*

## I/O power management settings - 1 relay

## I/O Power Management

V+ /GND

I/O

I

V+	V+	0	2	4	6	8	10
GND	GND	1	3	5	7	9	11

DNO feedback pin  
Not used ▼

**Rules**
+ Add

Rule 1

🗑️
🟢
^

0	2	4	6	8	10
1	3	5	7	9	11

Limitation

I/O Generation Limit (%) ▼

🟢
Active Power \*

%

🔴
Power Factor (cos φ) \*

Impedance response
Capacitive
▼

🟢
DNO Feedback
🟢

Rule 2

🗑️
🟢
^

0	2	4	6	8	10
1	3	5	7	9	11

Limitation

I/O Generation Limit (%) ▼

🟢
Active Power \*

%

🔴
Power Factor (cos φ) \*

Impedance response
Capacitive
▼

🟢
DNO Feedback
🟢


📄 Import
📄 Export

- 0 Activate Backup interlock
- 1 Rule 1
- 2 None
- 3 None
- 4 None
- 5 None
- 6 Open grid relais feedback
- 7 Backup interlock feedback
- 8 I/O control
- 9 None
- 10 None
- 11 None

## Connecting the ripple control receiver with several inverters

The grid operator may request the connection of one or more inverters to a ripple control receiver in order to limit the effective power and/or the power factor of the photovoltaic system.

89

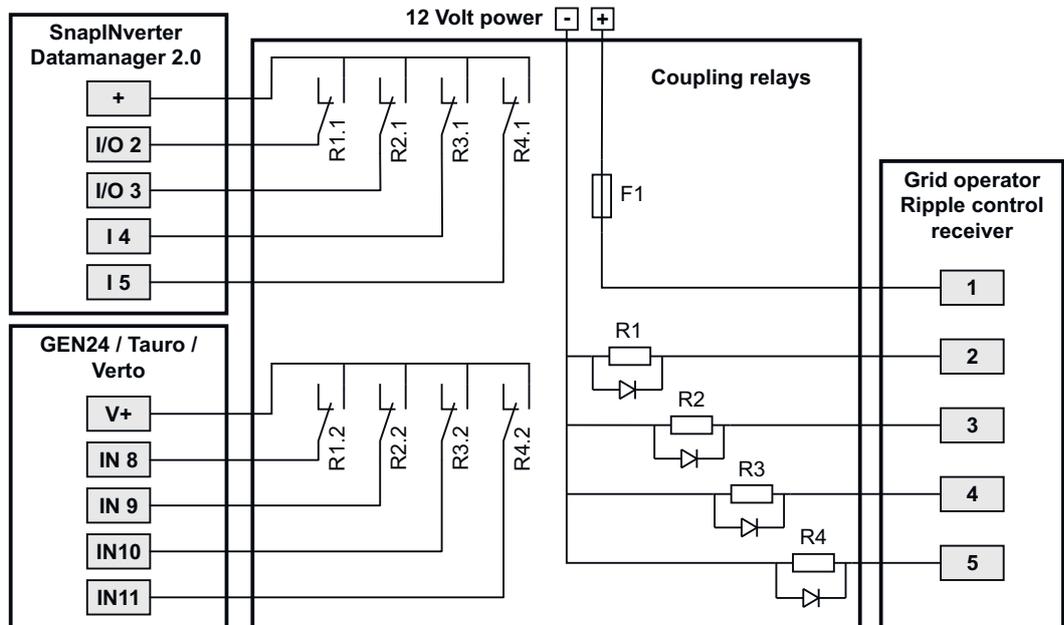

Connection diagram for ripple control receiver with several inverters

The following Fronius inverters can be connected to the ripple control receiver via a distributor (coupling relay):

- Symo GEN24
- Primo GEN24
- Tauro
- Verto
- SnapINverter (only devices with Fronius Datamanager 2.0)

**IMPORTANT!**

On the user interface of each inverter connected to the ripple control receiver, the **4-relay mode** setting (see [Connection diagram - 4 relays](#) and [I/O power management settings - 4 relays](#)) must be activated.

# Appendix



# Service, maintenance and disposal

## General

The inverter is designed so that it does not require additional maintenance work. Nevertheless, a few points must be considered during operation to ensure that the inverter works perfectly.

## Maintenance

Maintenance and service work may only be carried out by a trained technician.

## Cleaning

Wipe the inverter, if necessary, with a damp cloth. Do not use cleaning agents, scouring agents, solvents, or similar products to clean the inverter.

## Operation in dusty environments


### NOTE!

**If the inverter is operated in dusty environments, dirt may build up on the heat sink and fan.**


This may result in a loss of power due to insufficient cooling of the inverter.

- ▶ Make sure that the ambient air can always flow through the inverter's ventilation slots unimpeded.
- ▶ Remove any build-ups of dirt from the heat sink and the fan.

1

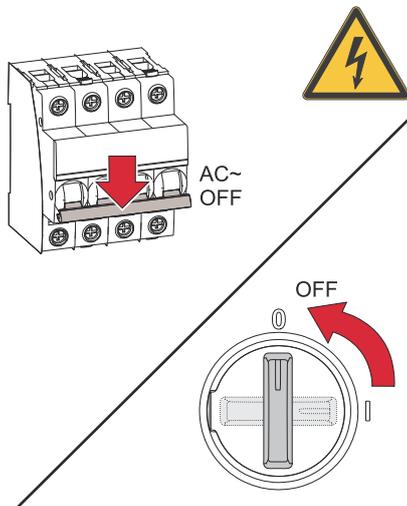

Switch off power to the inverter and wait for the capacitors to discharge (2 minutes) and the fan to shut down. Turn the DC disconnector to the "off" switch setting.

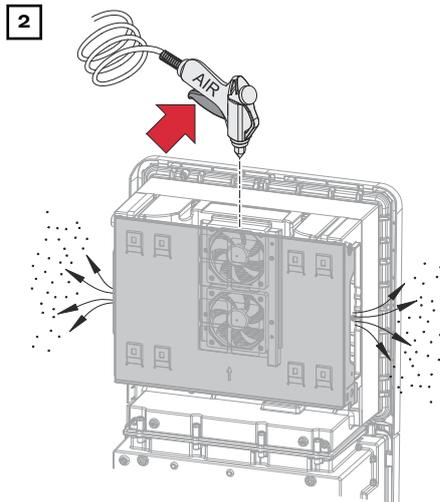

Remove any build-up of dirt on the heat sink and fan using compressed air, a cloth, or a brush.

**NOTE!**

**Risk due to damage to the fan bearing in the event of incorrect cleaning.**

Excessive speeds and the application of pressure to the fan bearing can cause damage.

- ▶ Block the fan and clean with compressed air.
- ▶ When using a cloth or brush, clean the fan without applying any pressure.

To start up the inverter again, follow the steps listed above in reverse order.

**Safety**

**⚠ WARNING!**

**Danger from mains voltage and DC voltage from PV modules.**

This can result in serious injury and damage to property.

- ▶ The connection area must only be opened by an authorized electrician.
- ▶ The separate power stage set area must only be opened by Fronius-trained service technicians.
- ▶ Prior to any connection work, disconnect the inverter on the AC side and the DC side.

**⚠ WARNING!**

**Danger due to residual voltage from capacitors.**

This can result in serious injury and damage to property.

- ▶ Allow the capacitors of the inverter to discharge (2 minutes).

**Disposal**

Waste electrical and electronic equipment must be collected separately and recycled in an environmentally sound manner in accordance with the European Directive and national law. Used equipment must be returned to the distributor or through a local authorized collection and disposal system. Proper disposal of the used device promotes sustainable recycling of resources and prevents negative effects on health and the environment.

**Packaging materials**

- Collect separately
- Observe local regulations
- Crush cardboard boxes

# Warranty provisions

---

## **Fronius manufacturer's warranty**

Detailed warranty conditions specific to your country can be found at [www.fronius.com/solar/garantie](http://www.fronius.com/solar/garantie).

To secure the full warranty period for the newly installed Fronius product, it is necessary to register at [www.solarweb.com](http://www.solarweb.com).

# Status codes and remedy

---

## Display

Status codes are displayed on the user interface of the inverter in the **System > Event Log** menu area or in the user menu under **Notifications** and in Fronius Solar.web\*.

\* If configured accordingly, see chapter [Fronius Solar.web](#) on page 18.

---

## Status codes

### 1030 – WSD Open (operating LED: flashes red)

**Cause:** A device that is connected in the WSD chain has interrupted the signal line (e.g., surge protection device) or the bypass installed ex works as standard has been removed and no trigger device has been installed.

**Remedy:** If the SPD surge protection device has tripped, the inverter must be repaired by an authorized specialist.

**OR:** Install the bypass installed ex works as standard or a trigger device.

**OR:** Turn the WSD (wired shutdown) switch to position 1 (WSD primary device).



#### **WARNING!**

##### **Danger from work that is not carried out properly.**

This can result in serious injury and damage to property.

- ▶ The installation and connection of an SPD surge protection device may only be carried out by Fronius-trained service personnel in accordance with the technical specifications.
  - ▶ Observe safety rules.
-

# Technical data

## Verto 15.0 208-240

Input data	
Maximum input voltage (at 1 000 W/m <sup>2</sup> / -10 °C in an open circuit)	1 000 V <sub>DC</sub>
Start-up input voltage	150 V <sub>DC</sub>
MPP voltage range	180 - 870 V <sub>DC</sub>
Number MPP-controller	4
Maximum input current (I <sub>DC</sub> max) PV1 / PV2 / PV3 / PV4 per string	28 / 28 / 28 / 28 A 28 A
Max. short circuit current <sup>8)</sup> Total PV1 / PV2 / PV3 / PV4 per string	120 A 40 / 40 / 40 / 40 A 40 A
I <sub>SC</sub> PV <sup>8)</sup> Total PV1 / PV2 / PV3 / PV4	150 A 50 A / 50 A / 50 A / 50 A
Maximum PV field power (P <sub>PV</sub> max) Total PV1 / PV2 / PV3 / PV4	22.5 kWp 20 / 20 / 20 / 20 kWp
DC overvoltage category	2
Max. inverter backfeed current to the array <sup>3)</sup>	50 A <sup>4)</sup>
Max. capacity of the PV Generator against ground	3 000 nF
Limit value of the insulation resistance test between PV Generator and ground (on delivery) <sup>7)</sup>	34 kΩ
Adjustable range of insulation resistance test between PV Generator and ground <sup>6)</sup>	34 - 10 000 kΩ
Limit value and trip time of sudden residual fault current monitoring (on delivery)	30 / 300 mA / ms 60 / 150 mA / ms 90 / 40 mA / ms
Limit value and trip time of continuous residual fault current monitoring (on delivery)	300 / 300 mA / ms
Adjustable range of continuous residual current monitoring <sup>6)</sup>	30 - 1 000 mA
Cyclic repetition of the insulation resistance test (on delivery)	24 h
Adjustable range for cyclic repetition of the insulation resistance test	-

Output data	
Grid voltage range	176 - 528 V <sub>AC</sub>
Rated grid voltage	120   127   139 V <sub>AC</sub> <sup>1)</sup>
Rated power	15 kW
Rated apparent power	15 kVA
Rated frequency	50 / 60 Hz <sup>1)</sup>
Maximum output current / phase	53.7 A
Initial symmetrical short-circuit current / phase I <sub>K</sub> "	53.7 A
Power factor (cos phi)	0 - 1 ind./cap. <sup>2)</sup>

Output data	
Grid connection	3~ (N)PE 208 / 120 V <sub>AC</sub> 3~ (N)PE 220 / 127 V <sub>AC</sub> 3~ (N)PE 240 / 139 V <sub>AC</sub>
Maximum output power	15 kW
Nominal output power	15 kW
Rated output current / phase	41.7 / 39.4 / 36 A
Total harmonic distortion	< 3%
AC overvoltage category	3
Current (inrush) 5)	24.72 A peak / 6.82 A rms over 1.99 ms 4)
Max. output fault current / duration	42.2 A / 29.4 ms

General data	
Night-time power loss = standby consumption	16 W
European Efficiency (180 / 525 / 870 V <sub>DC</sub> )	96.04 / 96.87 / 96.68 %
Maximum efficiency	97.50%
Safety class	1
EMC emission class	B
Pollution degree	3
Permitted ambient temperature	- 40 °C - +60 °C
Permitted storage temperature	- 40 °C - +70 °C
Relative humidity	0 - 100%
Sound pressure level	54.6 dB(A) (ref. 20 µPA)
Protection class	IP66
Dimensions (height x width x depth)	865 x 574 x 279 mm
Weight	43 kg
Inverter topology	Non-insulated, no transformer

## Verto 18.0 208-240

Input data	
Maximum input voltage (at 1 000 W/m <sup>2</sup> / -10 °C in an open circuit)	1 000 V <sub>DC</sub>
Start-up input voltage	150 V <sub>DC</sub>
MPP voltage range	220 - 870 V <sub>DC</sub>
Number MPP-controller	4
Maximum input current (I <sub>DC max</sub> ) PV1 / PV2 / PV3 / PV4 per string	28 / 28 / 28 / 28 A 28 A
Max. short circuit current 8) Total PV1 / PV2 / PV3 / PV4 per string	120 A 40 / 40 / 40 / 40 A 40 A
I <sub>SC PV</sub> 8) Total PV1 / PV2 / PV3 / PV4	150 A 50 A / 50 A / 50 A / 50 A
Maximum PV field power (P <sub>PV max</sub> ) Total PV1 / PV2 / PV3 / PV4	27 kW <sub>p</sub> 20 / 20 / 20 / 20 kW <sub>p</sub>

Input data	
DC overvoltage category	2
Max. inverter backfeed current to the array <sup>3)</sup>	50 A <sup>4)</sup>
Max. capacity of the PV Generator against ground	3 600 nF
Limit value of the insulation resistance test between PV Generator and ground (on delivery) <sup>7)</sup>	34 kΩ
Adjustable range of insulation resistance test between PV Generator and ground <sup>6)</sup>	34 - 10 000 kΩ
Limit value and trip time of sudden residual fault current monitoring (on delivery)	30 / 300 mA / ms 60 / 150 mA / ms 90 / 40 mA / ms
Limit value and trip time of continuous residual fault current monitoring (on delivery)	300 / 300 mA / ms
Adjustable range of continuous residual current monitoring <sup>6)</sup>	30 - 1 000 mA
Cyclic repetition of the insulation resistance test (on delivery)	24 h
Adjustable range for cyclic repetition of the insulation resistance test	-

Output data	
Grid voltage range	176 - 528 V <sub>AC</sub>
Rated grid voltage	120   127   139 V <sub>AC</sub> <sup>1)</sup>
Rated power	18 kW
Rated apparent power	18 kVA
Rated frequency	50 / 60 Hz <sup>1)</sup>
Maximum output current / phase	53.7 A
Initial symmetrical short-circuit current / phase I <sub>K</sub> "	53.7 A
Power factor (cos phi)	0 - 1 ind./cap. <sup>2)</sup>
Grid connection	3~ (N)PE 208 / 120 V <sub>AC</sub> 3~ (N)PE 220 / 127 V <sub>AC</sub> 3~ (N)PE 240 / 139 V <sub>AC</sub>
Maximum output power	18 kW
Nominal output power	18 kW
Rated output current / phase	50 / 47.2 / 43.2 A
Total harmonic distortion	< 3%
AC overvoltage category	3
Current (inrush) <sup>5)</sup>	24.72 A peak / 6.82 A rms over 1.99 ms <sup>4)</sup>
Max. output fault current / duration	42.2 A / 29.4 ms

General data	
Night-time power loss = standby consumption	16 W
European Efficiency (220 / 545 / 870 V <sub>DC</sub> )	95.68 / 96.14 / 95.57 %
Maximum efficiency	96.49%
Safety class	1
EMC emission class	B
Pollution degree	3

General data	
Permitted ambient temperature	- 40 °C - +60 °C
Permitted storage temperature	- 40 °C - +70 °C
Relative humidity	0 - 100%
Sound pressure level	54.6 dB(A) (ref. 20 µPA)
Protection class	IP66
Dimensions (height x width x depth)	865 x 574 x 279 mm
Weight	43 kg
Inverter topology	Non-insulated, no transformer

## Verto 25.0

Input data	
Maximum input voltage (at 1 000 W/m <sup>2</sup> / -10 °C in an open circuit)	1 000 V <sub>DC</sub>
Start-up input voltage	150 V <sub>DC</sub>
MPP voltage range	300 - 870 V <sub>DC</sub>
Number MPP-controller	4
Maximum input current (I <sub>DC max</sub> ) PV1 / PV2 / PV3 / PV4 per string	28 / 28 / 28 / 28 A 28 A
Max. short circuit current <sup>8)</sup> Total PV1 / PV2 / PV3 / PV4 per string	120 A 40 / 40 / 40 / 40 A 40 A
I <sub>SC PV</sub> <sup>8)</sup> Total PV1 / PV2 / PV3 / PV4	150 A 50 A / 50 A / 50 A / 50 A
Maximum PV field power (P <sub>PV max</sub> ) Total PV1 / PV2 / PV3 / PV4	37.5 kWp 20 / 20 / 20 / 20 kWp
DC overvoltage category	2
Max. inverter backfeed current to the array <sup>3)</sup>	50 A <sup>4)</sup>
Max. capacity of the PV Generator against ground	5 000 nF
Limit value of the insulation resistance test between PV Gen- erator and ground (on delivery) <sup>7)</sup>	34 kΩ
Adjustable range of insulation resistance test between PV Generator and ground <sup>6)</sup>	34 - 10 000 kΩ
Limit value and trip time of sudden residual fault current mon- itoring (on delivery)	30 / 300 mA / ms 60 / 150 mA / ms 90 / 40 mA / ms
Limit value and trip time of continuous residual fault current monitoring (on delivery)	300 / 300 mA / ms
Adjustable range of continuous residual current monitoring <sup>6)</sup>	30 - 1 000 mA
Cyclic repetition of the insulation resistance test (on delivery)	24 h
Adjustable range for cyclic repetition of the insulation resist- ance test	-

Output data	
Grid voltage range	176 - 528 V <sub>AC</sub>
Rated grid voltage	220   230   254   277 V <sub>AC</sub> <sup>1)</sup>

Output data	
Rated power	25 kW
Rated apparent power	25 kVA
Rated frequency	50 / 60 Hz <sup>1)</sup>
Rated output current / phase	53.7 A
Initial symmetrical short-circuit current / phase $I_{K}''$	53.7 A
Power factor (cos phi)	0 - 1 ind./cap. <sup>2)</sup>
Grid connection	3~ (N)PE 380 / 220 V <sub>AC</sub> 3~ (N)PE 400 / 230 V <sub>AC</sub> 3~ (N)PE 440 / 254 V <sub>AC</sub> 3~ (N)PE 480 / 277 V <sub>AC</sub>
Maximum output power	25 kW
Nominal output power	25 kW
Rated output current / phase	37.9 / 36.2 / 32.8 / 30.1 A
Total harmonic distortion	< 3%
AC overvoltage category	3
Current (inrush) <sup>5)</sup>	24,72 A peak / 6,82 A rms over 1,99 ms <sup>4)</sup>
Max. output fault current / duration	42.2 A / 29.4 ms

General data	
Night-time power loss = standby consumption	16 W
European Efficiency (300 / 585 / 870 V <sub>DC</sub> )	97.04 / 97.35 / 97.36 %
Maximum efficiency	97.74%
Safety class	1
EMC emission class	B
Pollution degree	3
Permitted ambient temperature	- 40 °C - +60 °C
Permitted storage temperature	- 40 °C - +70 °C
Relative humidity	0 - 100%
Sound pressure level	54.6 dB(A) (ref. 20 µPA)
Protection class	IP66
Dimensions (height x width x depth)	865 x 574 x 279 mm
Weight	43 kg
Inverter topology	Non-insulated, no transformer

Protection devices	
DC disconnecter	Integrated
Cooling principle	Controlled forced-air ventilation
RCMU <sup>9)</sup>	Integrated
RCMU classification	The software class of the safety platform(s) is defined as a class B control function (single-channel with periodic self-test) in accordance with IEC 60730 Annex H.
DC isolation measurement <sup>9)</sup>	integrated <sup>2)</sup>

Protection devices	
Overload performance	Operating point shift power limitation
Active anti-islanding method	Frequency shift method
AFCI	Integrated
AFPE (AFCI) classification (according to IEC 63027) 9)	F-I-AFPE-1-4/4-2 Full coverage Integrated AFPE 1 monitored string per input port 4/4 input ports per channel (AFPE1 for MPP1 & MPP2: 4, AFPE2 for MPP3 & MPP4: 4) 2 monitored channels

## Verto 27.0

Input data	
Maximum input voltage (at 1 000 W/m <sup>2</sup> / -10 °C in an open circuit)	1 000 V <sub>DC</sub>
Start-up input voltage	150 V <sub>DC</sub>
MPP voltage range	330 - 870 V <sub>DC</sub>
Number MPP-controller	4
Maximum input current (I <sub>DC max</sub> ) PV1 / PV2 / PV3 / PV4 per string	28 / 28 / 28 / 28 A 28 A
Max. short circuit current 8) Total PV1 / PV2 / PV3 / PV4 per string	120 A 40 / 40 / 40 / 40 A 40 A
I <sub>SC PV</sub> 8) Total PV1 / PV2 / PV3 / PV4	150 A 50 A / 50 A / 50 A / 50 A
Maximum PV field power (P <sub>PV max</sub> ) Total PV1 / PV2 / PV3 / PV4	40.5 kW <sub>p</sub> 20 / 20 / 20 / 20 kW <sub>p</sub>
DC overvoltage category	2
Max. inverter backfeed current to the array 3)	50 A <sup>4)</sup>
Max. capacity of the PV Generator against ground	5 400 nF
Limit value of the insulation resistance test between PV Gen-erator and ground (on delivery) 7)	34 kΩ
Adjustable range of insulation resistance test between PV Generator and ground 6)	34 - 10 000 kΩ
Limit value and trip time of sudden residual fault current mon-itoring (on delivery)	30 / 300 mA / ms 60 / 150 mA / ms 90 / 40 mA / ms
Limit value and trip time of continuous residual fault current monitoring (on delivery)	300 / 300 mA / ms
Adjustable range of continuous residual current monitoring 6)	30 - 1 000 mA
Cyclic repetition of the insulation resistance test (on delivery)	24 h
Adjustable range for cyclic repetition of the insulation resist-ance test	-

Output data	
Grid voltage range	176 - 528 V <sub>AC</sub>
Rated grid voltage	220   230   254   277 V <sub>AC</sub> <sup>1)</sup>
Rated power	27 kW
Rated apparent power	27 kVA
Rated frequency	50 / 60 Hz <sup>1)</sup>
Maximum output current / phase	53.7 A
Initial symmetrical short-circuit current / phase I <sub>K</sub> "	53.7 A
Power factor (cos phi)	0 - 1 ind./cap. <sup>2)</sup>
Grid connection	3~ (N)PE 380 / 220 V <sub>AC</sub> 3~ (N)PE 400 / 230 V <sub>AC</sub> 3~ (N)PE 440 / 254 V <sub>AC</sub> 3~ (N)PE 480 / 277 V <sub>AC</sub>
Maximum output power	27 kW
Nominal output power	27 kW
Rated output current / phase	40.9 A / 39.1 / 35.4 / 32.5 A
Total harmonic distortion	< 3%
AC overvoltage category	3
Current (inrush) <sup>5)</sup>	24.72 A peak / 6.82 A rms over 1.99 ms <sup>4)</sup>
Max. output fault current / duration	42.2 A / 29.4 ms

General data	
Night-time power loss = standby consumption	16 W
European Efficiency (330 / 600 / 870 V <sub>DC</sub> )	97.09 / 97.79 / 97.40 %
Maximum efficiency	98.03%
Safety class	1
EMC emission class	B
Pollution degree	3
Permitted ambient temperature	- 40 °C - +60 °C
Permitted storage temperature	- 40 °C - +70 °C
Relative humidity	0 - 100%
Sound pressure level	54.6 dB(A) (ref. 20 µPA)
Protection class	IP66
Dimensions (height x width x depth)	865 x 574 x 279 mm
Weight	43 kg
Inverter topology	Non-insulated, no transformer

## Verto 30.0

Input data	
Maximum input voltage (at 1 000 W/m <sup>2</sup> / -10 °C in an open circuit)	1 000 V <sub>DC</sub>
Start-up input voltage	150 V <sub>DC</sub>
MPP voltage range	360 - 870 V <sub>DC</sub>

Input data	
Number MPP-controller	4
Maximum input current (I <sub>DC max</sub> ) PV1 / PV2 / PV3 / PV4 per string	28 / 28 / 28 / 28 A 28 A
Max. short circuit current <sup>8)</sup> Total PV1 / PV2 / PV3 / PV4 per string	120 A 40 / 40 / 40 / 40 A 40 A
I <sub>SC PV</sub> <sup>8)</sup> Total PV1 / PV2 / PV3 / PV4	150 A 50 A / 50 A / 50 A / 50 A
Maximum PV field power (P <sub>PV max</sub> ) Total PV1 / PV2 / PV3 / PV4	45 kWp 20 / 20 / 20 / 20 kWp
DC overvoltage category	2
Max. inverter backfeed current to the array <sup>3)</sup>	50 A <sup>4)</sup>
Max. capacity of the PV Generator against ground	6 000 nF
Limit value of the insulation resistance test between PV Generator and ground (on delivery) <sup>7)</sup>	34 kΩ
Adjustable range of insulation resistance test between PV Generator and ground <sup>6)</sup>	34 - 10 000 kΩ
Limit value and trip time of sudden residual fault current monitoring (on delivery)	30 / 300 mA / ms 60 / 150 mA / ms 90 / 40 mA / ms
Limit value and trip time of continuous residual fault current monitoring (on delivery)	300 / 300 mA / ms
Adjustable range of continuous residual current monitoring <sup>6)</sup>	30 - 1 000 mA
Cyclic repetition of the insulation resistance test (on delivery)	24 h
Adjustable range for cyclic repetition of the insulation resistance test	-

Output data	
Grid voltage range	176 - 528 V <sub>AC</sub>
Rated grid voltage	220   230   254   277 V <sub>AC</sub> <sup>1)</sup>
Rated power	29.99 kW
Rated apparent power	29.99 kVA
Rated frequency	50 / 60 Hz <sup>1)</sup>
Maximum output current / phase	53.7 A
Initial symmetrical short-circuit current / phase I <sub>K"</sub>	53.7 A
Power factor (cos phi)	0 - 1 ind./cap. <sup>2)</sup>
Grid connection	3~ (N)PE 380 / 220 V <sub>AC</sub> 3~ (N)PE 400 / 230 V <sub>AC</sub> 3~ (N)PE 440 / 254 V <sub>AC</sub> 3~ (N)PE 480 / 270 V <sub>AC</sub>
Maximum output power	29.99 kW
Nominal output power	29.99 kW
Rated output current / phase	45.5 / 43.5 / 39.4 / 36.1 A
Total harmonic distortion	< 3%
AC overvoltage category	3

Output data	
Current (inrush) 5)	24.72 A peak / 6.82 A rms over 1.99 ms 4)
Max. output fault current / duration	42.2 A / 29.4 ms

General data	
Night-time power loss = standby consumption	16 W
European Efficiency (360 / 615 / 870 V <sub>DC</sub> )	97.25 / 97.80 / 97.45 %
Maximum efficiency	98.02%
Safety class	1
EMC emission class	B
Pollution degree	3
Permitted ambient temperature	- 40 °C - +60 °C
Permitted storage temperature	- 40 °C - +70 °C
Relative humidity	0 - 100%
Sound pressure level	54.6 dB(A) (ref. 20 µPA)
Protection class	IP66
Dimensions (height x width x depth)	865 x 574 x 279 mm
Weight	43 kg
Inverter topology	Non-insulated, no transformer

### Verto 33.3

Input data	
Maximum input voltage (at 1 000 W/m <sup>2</sup> / -10 °C in an open circuit)	1 000 V <sub>DC</sub>
Start-up input voltage	150 V <sub>DC</sub>
MPP voltage range	400 - 870 V <sub>DC</sub>
Number MPP-controller	4
Maximum input current (I <sub>DC max</sub> ) PV1 / PV2 / PV3 / PV4 per string	28 / 28 / 28 / 28 A 28 A
Max. short circuit current 8) Total PV1 / PV2 / PV3 / PV4 per string	120 A 40 / 40 / 40 / 40 A 40 A
I <sub>SC PV</sub> 8) Total PV1 / PV2 / PV3 / PV4	150 A 50 A / 50 A / 50 A / 50 A
Maximum PV field power (P <sub>PV max</sub> ) Total PV1 / PV2 / PV3 / PV4	50 kWp 20 / 20 / 20 / 20 kWp
DC overvoltage category	2
Max. inverter backfeed current to the array 3)	50 A 4)
Max. capacity of the PV Generator against ground	6 660 nF
Limit value of the insulation resistance test between PV Gen- erator and ground (on delivery) 7)	34 kΩ
Adjustable range of insulation resistance test between PV Generator and ground 6)	34 - 10 000 kΩ

Input data	
Limit value and trip time of sudden residual fault current monitoring (on delivery)	30 / 300 mA / ms 60 / 150 mA / ms 90 / 40 mA / ms
Limit value and trip time of continuous residual fault current monitoring (on delivery)	300 / 300 mA / ms
Adjustable range of continuous residual current monitoring <sup>6)</sup>	30 - 1 000 mA
Cyclic repetition of the insulation resistance test (on delivery)	24 h
Adjustable range for cyclic repetition of the insulation resistance test	-

Output data	
Grid voltage range	176 - 528 V <sub>AC</sub>
Rated grid voltage	220   230   254   277 V <sub>AC</sub> <sup>1)</sup>
Rated power	33.3 kW
Rated apparent power	33.3 kVA
Rated frequency	50 / 60 Hz <sup>1)</sup>
Maximum output current / phase	53.7 A
Initial symmetrical short-circuit current / phase I <sub>K</sub> "	53.7 A
Power factor (cos phi)	0 - 1 ind./cap. <sup>2)</sup>
Grid connection	3~ (N)PE 380 / 220 V <sub>AC</sub> 3~ (N)PE 400 / 230 V <sub>AC</sub> 3~ (N)PE 440 / 254 V <sub>AC</sub> 3~ (N)PE 480 / 277 V <sub>AC</sub>
Maximum output power	33.3 kW
Nominal output power	33.3 kW
Rated output current / phase	50.5 / 48.3 / 43.7 / 40.1 A
Total harmonic distortion	< 3%
AC overvoltage category	3
Current (inrush) <sup>5)</sup>	24.72 A peak / 6.82 A rms over 1.99 ms <sup>4)</sup>
Max. output fault current / duration	42.2 A / 29.4 ms

General data	
Night-time power loss = standby consumption	16 W
European Efficiency (400 / 635 / 870 V <sub>DC</sub> )	97.23 / 97.76 / 97.47 %
Maximum efficiency	97.98%
Safety class	1
EMC emission class	B
Pollution degree	3
Permitted ambient temperature	- 40 °C - +60 °C
Permitted storage temperature	- 40 °C - +70 °C
Relative humidity	0 - 100%
Sound pressure level	54.6 dB(A) (ref. 20 µPA)
Protection class	IP66
Dimensions (height x width x depth)	865 x 574 x 279 mm

General data	
Weight	43 kg
Inverter topology	Non-insulated, no transformer

## Verto 36.0 480

Input data	
Maximum input voltage (at 1 000 W/m <sup>2</sup> / -10 °C in an open circuit)	1 000 V <sub>DC</sub>
Start-up input voltage	150 V <sub>DC</sub>
MPP voltage range	440 - 870 V <sub>DC</sub>
Number MPP-controller	4
Maximum input current (I <sub>DC max</sub> ) PV1 / PV2 / PV3 / PV4 per string	28 / 28 / 28 / 28 A 28 A
Max. short circuit current <sup>8)</sup> Total PV1 / PV2 / PV3 / PV4 per string	120 A 40 / 40 / 40 / 40 A 40 A
I <sub>SC PV</sub> <sup>8)</sup> Total PV1 / PV2 / PV3 / PV4	150 A 50 A / 50 A / 50 A / 50 A
Maximum PV field power (P <sub>PV max</sub> ) Total PV1 / PV2 / PV3 / PV4	50 kWp 20 / 20 / 20 / 20 kWp
DC overvoltage category	2
Max. inverter backfeed current to the array <sup>3)</sup>	50 A <sup>4)</sup>
Max. capacity of the PV Generator against ground	7 200 nF
Limit value of the insulation resistance test between PV Generator and ground (on delivery) <sup>7)</sup>	34 kΩ
Adjustable range of insulation resistance test between PV Generator and ground <sup>6)</sup>	34 - 10 000 kΩ
Limit value and trip time of sudden residual fault current monitoring (on delivery)	30 / 300 mA / ms 60 / 150 mA / ms 90 / 40 mA / ms
Limit value and trip time of continuous residual fault current monitoring (on delivery)	300 / 300 mA / ms
Adjustable range of continuous residual current monitoring <sup>6)</sup>	30 - 1 000 mA
Cyclic repetition of the insulation resistance test (on delivery)	24 h
Adjustable range for cyclic repetition of the insulation resistance test	-

Output data	
Grid voltage range	176 - 528 V <sub>AC</sub>
Rated grid voltage	254 V <sub>AC</sub>   277 V <sub>AC</sub> <sup>1)</sup>
Rated power	36 kW
Rated apparent power	36 kVA
Rated frequency	50 / 60 Hz <sup>1)</sup>
Maximum output current / phase	53.7 A
Initial symmetrical short-circuit current / phase I <sub>K</sub> "	53.7 A

Output data	
Power factor (cos phi)	0 - 1 ind./cap. <sup>2)</sup>
Grid connection	3~ (N)PE 440 / 254 V <sub>AC</sub> 3~ (N)PE 480 / 277 V <sub>AC</sub>
Maximum output power	36 kW
Nominal output power	36 kW
Rated output current / phase	47.2 A / 43.3 A
Total harmonic distortion	< 3%
AC overvoltage category	3
Current (inrush) <sup>5)</sup>	24.72 A peak / 6.82 A rms over 1.99 ms <sup>4)</sup>
Max. output fault current / duration	42.2 A / 29.4 ms

General data	
Night-time power loss = standby consumption	16 W
European Efficiency (440 / 655 / 870 V <sub>DC</sub> )	97.47 / 97.72 / 97.85 %
Maximum efficiency	98.13%
Safety class	1
EMC emission class	B
Pollution degree	3
Permitted ambient temperature	- 40 °C - +60 °C
Permitted storage temperature	- 40 °C - +70 °C
Relative humidity	0 - 100%
Sound pressure level	54.6 dB(A) (ref. 20 µPA)
Protection class	IP66
Dimensions (height x width x depth)	865 x 574 x 279 mm
Weight	43 kg
Inverter topology	Non-insulated, no transformer

## Protection devices

DC disconnecter	Integrated
Cooling principle	Controlled forced-air ventilation
RCMU <sup>9)</sup>	Integrated
RCMU classification	The software class of the safety platform(s) is defined as a class B control function (single-channel with periodic self-test) in accordance with IEC 60730 Annex H.
DC isolation measurement <sup>9)</sup>	integrated <sup>2)</sup>
Overload performance	Operating point shift Power limitation
Active anti-islanding method	Frequency point shift method
AFCI	optional

AFPE (AFCI) classification (according to IEC 63027) 9)	F-I-AFPE-1-4/4-2 Full coverage Integrated AFPE 1 monitored string per input port 4/4 input ports per channel (AFPE1 for MPP1 & MPP2: 4, AFPE2 for MPP3 & MPP4: 4) 2 monitored channels
--	---

## WLAN

Frequency range	2412 - 2462 MHz
Channels / power used	Channel: 1-11 b,g,n HT20 Channel: 3-9 HT40 <18 dBm
Modulation	802.11b: DSSS (1Mbps DBPSK, 2Mbps DQPSK, 5.5/11Mbps CCK) 802.11g: OFDM (6/9Mbps BPSK, 12/18Mbps QPSK, 24/36Mbps 16-QAM, 48/54Mbps 64-QAM) 802.11n: OFDM (6.5 BPSK, QPSK, 16-QAM, 64-QAM)

## Surge protection device DC Verto 25.0–27.0 SPD type 1+2

General data	
Continuous operating current ( $I_{CPV}$ )	< 0.1 mA
Nominal discharge current ( $I_N$ ) - 15 x 8/20 $\mu$ s pulses	20 kA
Lightning surge current ( $I_{imp}$ ) Max. Conductivity @ 10/350 $\mu$ s	5 kA
Protection level ( $U_p$ ) (star configuration)	3.6 kV
Short circuit resistance PV ( $I_{SCPV}$ )	15 kA

Disconnecter	
Thermal disconnecter	Integrated
External fuse	None

Mechanical properties	
Disconnection indicator	Mechanical indicator (red)
Remote indication of disconnection	Output at the changeover contact
Housing material	Thermoplastic UL-94-V0
Test standards	IEC 61643-31 / EN 61643-31

## Surge protection device DC Verto 25.0 - 27.0 SPD type 2

General data	
Continuous operating current ( $I_{CPV}$ )	< 0.1 mA

General data	
Rated discharge current ( $I_N$ ) - 15 x 8/20 $\mu$ s pulses	20 kA
Protection level ( $U_p$ ) (star-shaped mounting)	3.6 kV
Short circuit strength PV ( $I_{scpv}$ )	15 kA

Disconnecter	
Thermal disconnecter	Integrated
External fuse	None

Mechanical properties	
Disconnection indicator	Mechanical indicator (red)
Remote communication of the connection interruption	Output on the changeover contact
Housing material	Thermoplastic UL-94-V0
Test standards	IEC 61643-31 / EN 61643-31

**Surge protection device DC Verto 30.0 - 33.3 SPD type 1+2**

General data	
Rated discharge current ( $I_N$ ) - 15 x 8/20 $\mu$ s pulses	20 kA
Protection level ( $U_p$ ) (star-shaped mounting)	4 kV
Short circuit strength PV ( $I_{scpv}$ )	9 kA

Disconnecter	
Thermal disconnecter	Integrated
External fuse	None

Mechanical properties	
Disconnection indicator	Mechanical indicator (not green)
Remote communication of the connection interruption	Output on the changeover contact
Housing material	Thermoplastic UL-94-V0
Test standards	IEC 61643-31 / EN 61643-31

**Surge protection device DC Verto 30.0 - 33.3 SPD type 2**

General data	
Rated discharge current ( $I_N$ ) - 15 x 8/20 $\mu$ s pulses	20 kA
Lightning surge current ( $I_{imp}$ ) Max. discharge capacity @ 10/350 $\mu$ s	5 kA
Protection level ( $U_p$ ) (star-shaped mounting)	4,000 kV

General data	
Short circuit strength PV ( $I_{SCPV}$ )	9 kA

Disconnecter	
Thermal disconnecter	Integrated
External fuse	None

Mechanical properties	
Disconnection indicator	Mechanical indicator (not green)
Remote communication of the connection interruption	Output on the changeover contact
Housing material	Thermoplastic UL-94-V0
Test standards	IEC 61643-31 / EN 61643-31

### Explanation of footnotes

- 1) The values provided are standard values. If required, the inverter is customized for a specific country.
- 2) Depending on the country setup or device-specific settings (ind. = inductive; cap. = capacitive)
- 3) Maximum current from a defective PV module to all other PV modules. From the inverter itself to the PV side of the inverter, this is 0 amperes.
- 4) Assured by the electrical design of the inverter
- 5) Peak current when turning on the inverter
- 6) The values provided are standard values. These values must be adjusted according to requirements and PV output.
- 7) The value provided is a maximum value. If this value is exceeded, this may impair the function.
- 8)  $I_{SC PV} = I_{SC max} \geq I_{SC (STC)} \times 1.25$  acc. to e.g.: IEC 60364-7-712, NEC 2020, AS/NZS 5033:2021
- 9) Software class B (single-channel with periodic self-test) according to IEC 60730-1 Appendix H.
- 10) Max. power that can be used in parallel for the output power (AC) and the battery charging power (DC).

### Integrated DC disconnecter

General data	
Product name	Benedict LS32 E 7905
Rated insulation voltage	1000 V <sub>DC</sub>
Rated impulse withstand voltage	8 kV
Suitability for insulation	Yes, DC only
Utilization category and/or PV utilization category	according to IEC/EN 60947-3 utilization category DC-PV2
Rated short-time withstand current ( $I_{CW}$ )	Rated short-time withstand current ( $I_{CW}$ ): 1000 A
Rated short-circuit capacity ( $I_{CM}$ )	Rated short-circuit capacity ( $I_{CM}$ ): 1000 A

Rated operating current and rated breaking capacity				
Rated operating voltage (U <sub>e</sub> )	Rated operating current (I <sub>e</sub> )	I <sub>(make)</sub> / I <sub>(break)</sub>	Rated operating current (I <sub>e</sub> )	I <sub>(make)</sub> / I <sub>(break)</sub>
≤ 500 V <sub>DC</sub>	14 A	56 A	36 A	144 A
600 V <sub>DC</sub>	8 A	32 A	30 A	120 A
700 V <sub>DC</sub>	3 A	12 A	26 A	88 A
800 V <sub>DC</sub>	3 A	12 A	17 A	68 A
900 V <sub>DC</sub>	2 A	8 A	12 A	48 A
1000 V <sub>DC</sub>	2 A	8 A	6 A	24 A
Number of pins	1	1	2	2









[fronius.com/en/solar-energy/installers-partners/products-solutions/monitoring-digital-tools](https://fronius.com/en/solar-energy/installers-partners/products-solutions/monitoring-digital-tools)

**MONITORING &  
DIGITAL TOOLS**

**Fronius International GmbH**

Froniusstraße 1  
4643 Pettenbach  
Austria  
[contact@fronius.com](mailto:contact@fronius.com)  
[www.fronius.com](http://www.fronius.com)

At [www.fronius.com/contact](http://www.fronius.com/contact) you will find the contact details of all Fronius subsidiaries and Sales & Service Partners.