

Sigen PV Max (3.0–6.0) SP

Sigen Hybrid (3.0–6.0) SP

SigenStor EC 3.0/5.0/6.0 SP

User Manual

Version: 01

Release date: 2023-10-24



Copyright Notice

Copyright© 2023 Sigenergy Technology Co., Ltd. All Rights Reserved.

Description in this document may contain predictive statements regarding financial and operating results, product portfolio, new technology, configurations and features of product. Several factors could cause difference between actual results and those expressed or implied in the predictive statements. Therefore, description in this document is provided for reference purpose only and constitutes neither an offer nor an acceptance. Sigenergy Technology Co., Ltd. may change the information at any time without notice.



SIGENERGY and other Sigenergy trademarks are owned by Sigenergy Technology Co., Ltd.

All trademarks and registered trademarks in this document belong to their owners.



Website



LinkedIn



YouTube

www.sigenergy.com

Contents

Revision History	4
Overview	5
Chapter 1 Safety Precautions	6
Chapter 2 Product Introduction	8
2.1 Product Model No.	8
2.2 Appearance Introduction.....	9
2.3 Label Description	10
2.4 Supported Power Supply Methods for the Power Grid	11
2.5 Introduction to Typical Networking.....	12
Chapter 3 Site Selection Requirements.....	13
Chapter 4 Equipment Installation and Wiring	16
Chapter 5 System Operation.....	17
5.1 LED Indicator State	17
5.2 mySigen App Query	18
Chapter 6 System Maintenance	19
6.1 Routine Maintenance	19
6.2 Equipment Powering-on/Power-off	20
6.3 Emergency Treatment	21
Chapter 7 Appendix	22
7.1 Technical Parameter	22

Revision History

Version	Date	Description
01	2023.10.24	First official release.

Overview

Introduction

The focus of this document is to provide an overview of the Sigen PV Max (3.0–6.0) SP and Sigen Hybrid (3.0–6.0) SP inverter, including product features, networking, system operation, maintenance, etc.

Readers

This document is suitable for product users and professionals

Sign Definition

The following signs may be used in the document to indicate security precautions or key information. Before installation and operation, familiarize yourself with signs and their definitions.

Signs	Definition
 Danger	Danger. Failure to comply may result in death or serious personal injury.
 Warning	Danger. Failure to comply may result in serious personal injury or property damage.
 Caution	Caution. Failure to comply will result in property damage.
Tips	Important or key information, and supplementary operation tips.

Chapter 1 Safety Precautions

Basic Information

Before installing, operating, and maintaining the equipment, familiarize yourself with this document.

The "Danger ", "Warning", "Caution" items described in this manual are only supplementary to all precautions.

The Company shall not be liable for equipment damage or property loss caused by the following reasons:

- Failure to obtain approval from the national, regional power authority.
- The installation environment does not meet international, national, or regional standards.
- Failure to observe local laws, regulations and norms when operating and maintaining equipment.
- The installation area does not meet the requirements of the equipment.
- Failure to follow the instructions and precautions in this document.
- Failure to follow the warning labels on equipment or tools.
- Negligent, improper operation or intentional damage.
- Damage caused by your or a third party's replacement of our equipment.
- The equipment is damaged by your or the third-party company to use the accessories supplied with the package and purchase and use the accessories of the same specifications for installation.
- Equipment damage caused by improper operations such as disassembling, replacing, or modifying the software code without authorization.
- Equipment damage caused by force majeure (such as war, earthquake, fire, storm, lightning, flood, debris flow, etc.).
- Damage caused by the failure of the natural environment or external power parameters to meet the standard requirements of the equipment

during actual operation (for example, the actual operating temperature of the equipment is too high or too low).

- The equipment was stolen.
- The equipment is damaged after the warranty period.

Safety Requirements

Danger

- Do not expose the device to high temperature or heat sources (such as sunlight, fire, or heaters) around the equipment for a long time.
- Do not clean or soak the equipment with water, alcohol, or oil to avoid power leakage.
- Do not knock or impact the equipment. In case of an accident, please stop using the equipment immediately and contact your sales agent. The equipment shall be inspected and evaluated by professional personnel before continuing to use.

Warning

Do not touch the heat sink when the equipment is running.

Caution

- Do not use the equipment with faults. If the equipment appears abnormal (for example, appearance distortion), contact your sales agent.
- Carbon dioxide fire extinguishers and ABC dry powder fire extinguishers are recommended at home.

Do not use the equipment in the following situations:

- When connected to public infrastructure systems.
- When connected to emergency medical equipment.
- When connected to elevators and other control devices.
- Any other critical systems.


Chapter 2 Product Introduction

2.1 Product Model No.


Product code	Model No.	Name	Function specification
Sigen PV Max	Sigen PV Max 3.0 SP	Sigen PV Inverter Max 3.0 kW Single Phase	Single-phase string-type PV grid-connected inverters are designed to convert the DC electricity generated by PV strings into AC electricity for electric equipment or feeding into the grid.
	Sigen PV Max 3.6 SP	Sigen PV Inverter Max 3.6 kW Single Phase	
	Sigen PV Max 4.0 SP	Sigen PV Inverter Max 4.0 kW Single Phase	
	Sigen PV Max 4.6 SP	Sigen PV Inverter Max 4.6 kW Single Phase	
	Sigen PV Max 5.0 SP	Sigen PV Inverter Max 5.0 kW Single Phase	
	Sigen PV Max 6.0 SP	Sigen PV Inverter Max 6.0 kW Single Phase	
Sigen Hybrid	Sigen Hybrid 3.0 SP	Sigen Hybrid Inverter 3.0 kW Single Phase	Inverter; it can be used in conjunction with PV modules for pure PV applications or in combination with PV modules and SigenStor BAT for photovoltaic storage systems after the purchase and activation of a license.
	Sigen Hybrid 3.6 SP	Sigen Hybrid Inverter 3.6 kW Single Phase	
	Sigen Hybrid 4.0 SP	Sigen Hybrid Inverter 4.0 kW Single Phase	
	Sigen Hybrid 4.6 SP	Sigen Hybrid Inverter 4.6 kW Single Phase	
	Sigen Hybrid 5.0 SP	Sigen Hybrid Inverter 5.0 kW Single Phase	
	Sigen Hybrid 6.0 SP	Sigen Hybrid Inverter 6.0 kW Single Phase	
Sigen Hybrid	SigenStor EC 5.0 SP	Sigen Hybrid Inverter 5.0 kW Single Phase	Inverter; it can be used in conjunction with PV modules for pure PV applications or in combination with PV modules and SigenStor BAT for photovoltaic storage systems after the purchase and activation of a license.
	SigenStor EC 6.0 SP	Sigen Hybrid Inverter 6.0 kW Single Phase	

2.2 Appearance Introduction

Appearance and Dimensions

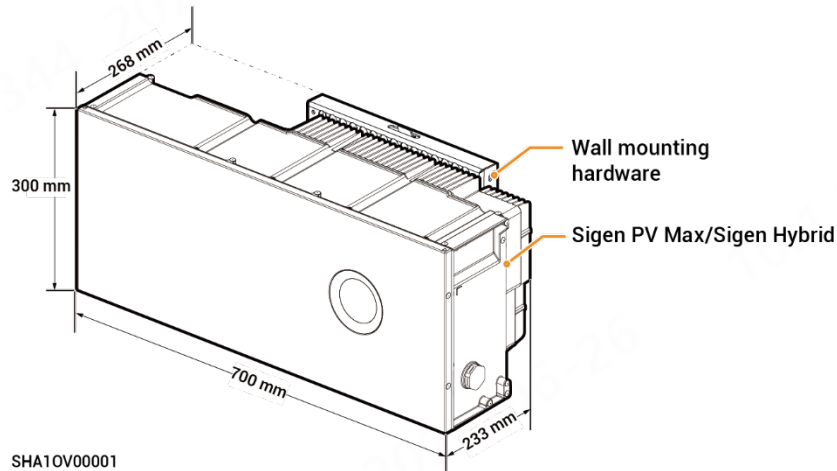

Port Introduction

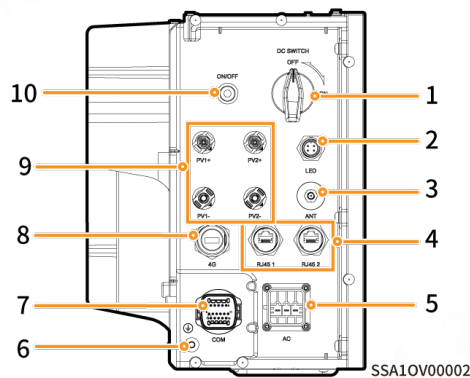


Serial No.	Name	Marking
1	Dc switch	DC SWITCH
2	Decorative cover light strip connector	LED
3	Antenna interface	ANT
4	Cable interface	RJ45 1/ RJ45 2
5	AC output interface	AC
6	Ground screw	-
7	Communication interface	COM
8	Sigen CommMod interface	4G
9	DC input interface	PV1+/PV2+/PV1-/PV2-
10	(Reserved) Switch button	ON/OFF

2.3 Label Description

Symbols	Definition
	Warning! Life at risk. The inverter has potential hazards after running. Take proper protection when operating the inverter.
	After the inverter is powered off, the discharge of internal components is delayed. Wait 10 minutes until the inverter is fully discharged according to the label time.
	Warning! Risk of burns. The inverter surface is hot. Do not touch the inverter when it is running. Doing so may result in burns.
	Please refer to the instructions to operate the equipment.
	Earthing mark

2.4 Supported Power Supply Methods for the Power Grid


The grid supply methods supported by Sigen PV Max or Sigen Hybrid include TN-S, TN-C, TN-C-S, and TT. When TT is used as the power supply technique for the power grid, the voltage between N and PE is required to be $< 30\text{ V}$.

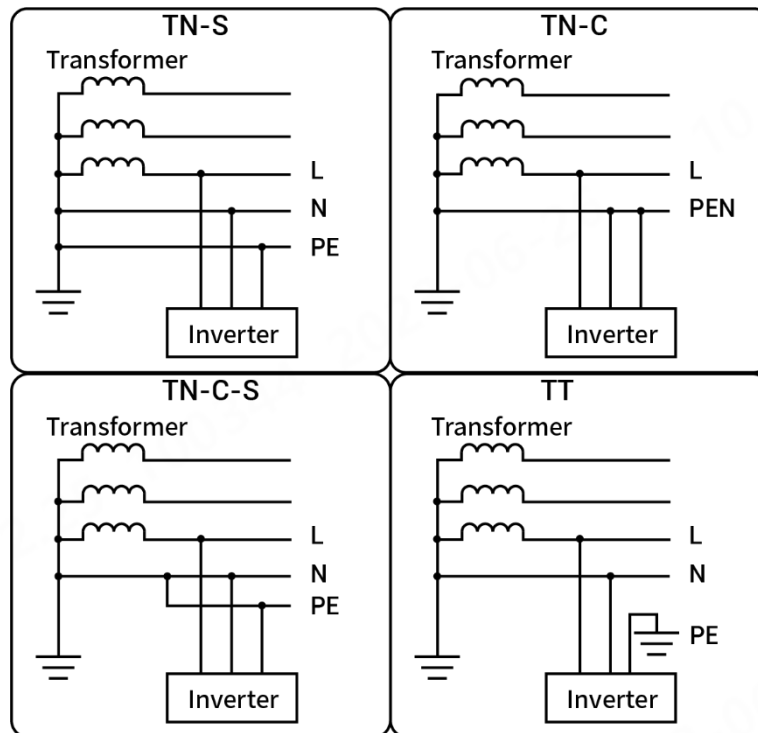

SVA10V00002

2.5 Introduction to Typical Networking

Sigen PV Max or Sigen Hybrid is designed for grid-connected photovoltaic systems on residential rooftops. The grid-connected system consists of photovoltaic strings, inverters, distribution panels, and other components.

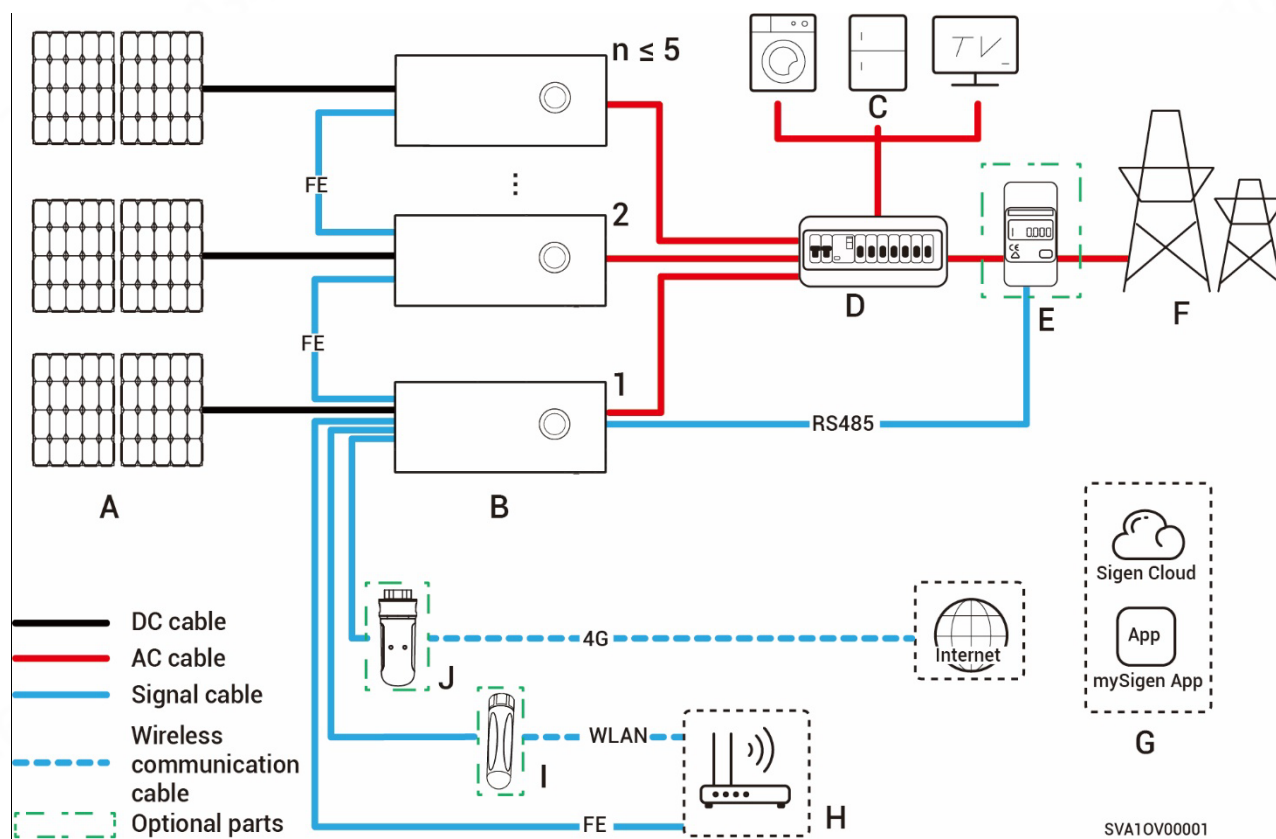

- | | | |
|---------------------------------|--|------------------------------|
| A. PV panel | B. Sigen PV Max or Sigen Hybrid | C. Electric equipment |
| D. AC distribution panel | E. Power sensor | F. Power grid |
| H. Router | I. Antenna | G. mySigen |
| | J. CommMod | |

Tips

- Sigen PV Max or Sigen Hybrid supports a maximum of 5 units in cascade connection.
- It is recommended to use FE and WLAN for communication with inverter. CommMod users must top up their own 4G data plan after a period of 2 years.
- The rated voltage of the AC switch connected to each inverter should be ≥ 240 V.a.c. and the rated current is recommended:
 - Sigen PV Max/Sigen Hybrid (3.0-4.0) SP: The rated current is 25 A
 - Sigen PV Max/Sigen Hybrid (4.6-6.0) SP: The rated current is 40 A.

Chapter 3 Site Selection

Requirements

Installation Environment Requirements

- Do not install the equipment in smoky, flammable, explosive, or corrosive environments.
- Do not install the equipment outdoors in areas prone to salt damage area, which are located less than 500 meters from the coastline or affected by sea wind.
- Do not install the equipment in environments exposed to direct sunlight, rain, standing water, snow accumulation, sand, and dust. It is recommended to install in a sheltered location. If the area is susceptible to natural disasters such as floods, landslides, earthquakes, or typhoons, take preventive measures during equipment installation.
- Do not install the equipment in an environment with strong electromagnetic interference.
- Ensure that the temperature and humidity of the installation environment comply with the equipment's requirements.


Installation Position Requirements

- Do not tilt or overturn the equipment to ensure that it is installed horizontally.
- Do not install the equipment in a place where children can easily reach it.
- Do not install the equipment in areas subject to fire or moisture (including but not limited to kitchen, tea room, toilet, shower room, laundry room, etc.).
- Please keep away from daily working and living areas (including but not limited to living room, bedroom, studio, lounge, study, etc.).
- Do not install the equipment in areas that are difficult to access (including but not limited to attic, basement, etc.).

- Do not install the equipment in mobile scenarios such as RVS, cruise ships, and trains.
- You are advised to install the equipment in a position that is easy to operate, maintain, and view indicator status.
- When installing the equipment in the garage, do not install the equipment in the position where the vehicle passes through to avoid collision.

Mounting Surface Requirements

- Do not install the equipment on a flammable carrier.
- The installation carrier must meet load-bearing requirements. Solid brick-concrete structure, concrete walls, and ground are recommended.
- The surface of the installation carrier must be smooth and the installation area must meet the installation space requirements.
- No water or electricity is routed inside the carrier to prevent drilling hazards during equipment installation.

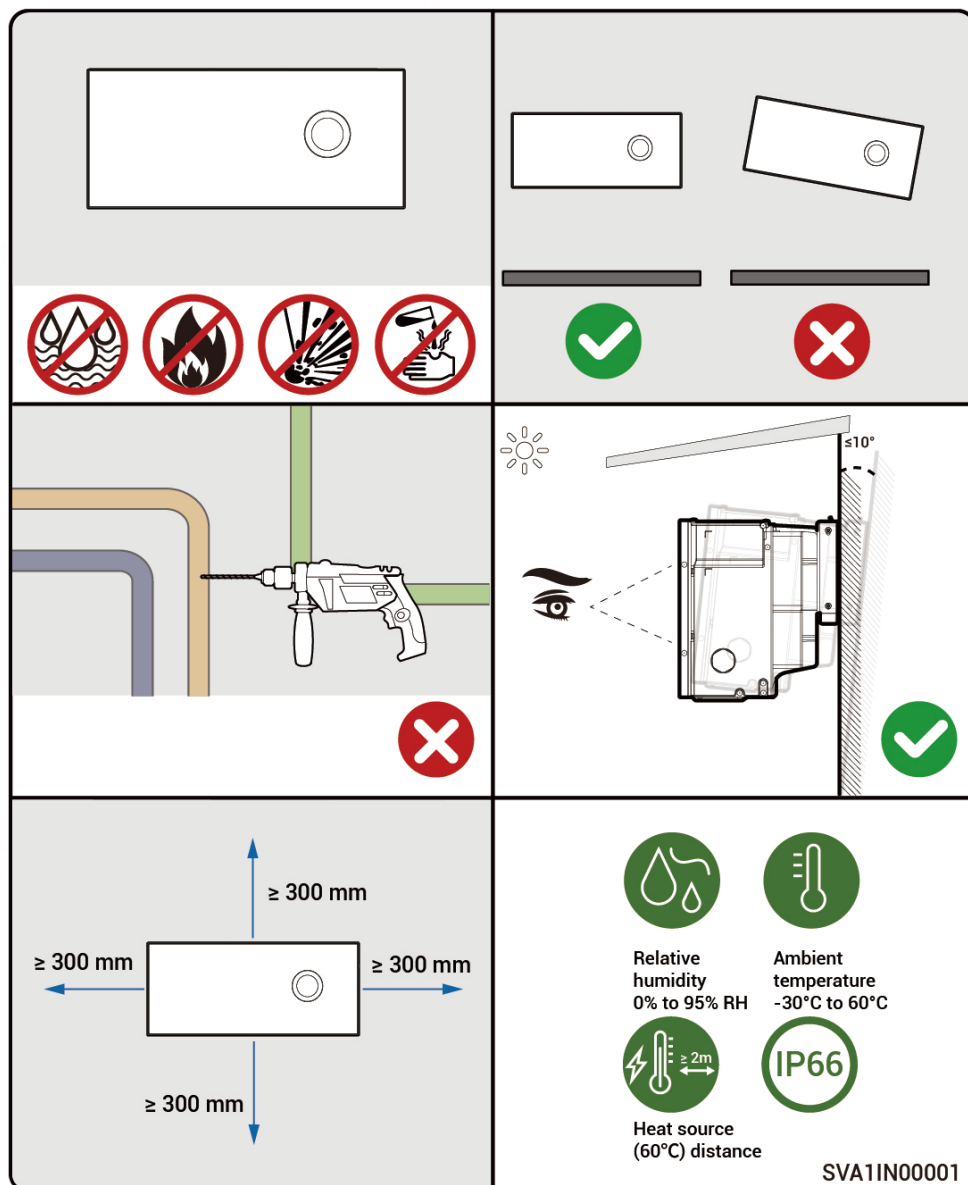


Chapter 4 Equipment

Installation and Wiring

Only company authorized personnel should install and connect the equipment.
For details, see ***Sigen PV Max (3.0–6.0) SP, Sigen Hybrid (3.0–6.0) SP Installation Guide***.

Chapter 5 System Operation

5.1 LED Indicator State

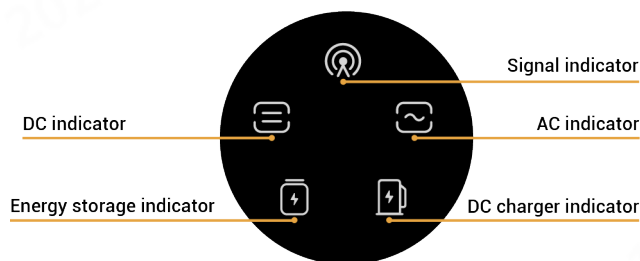


SSA1IN00027

Indicator	Color	State	Description
		Always on	The DC side is connected but not running.
		Always on	The DC side is running.
		-	The DC side is not connected.
		Flash	The DC side is faulty.
		Always on	The inverter is faulty.
		Always on	The AC side is connected but not running.
		Always on	Grid-connected operation.
		Always on	Off-grid operation.
		-	The AC side is not connected.
		Flash	Off-grid overload operation.
		Flash	The AC side is faulty.
		Always on	The inverter is faulty.
		-	The management system is not connected.
		Flash	Connected to local App.
		Always on	Connected to the management system using an FE or WLAN.
		Always on	Connected to the management system over 4G.

5.2 mySigen App Query

The App can be downloaded in the following two ways. For details, see **mySigen App User Manual**.

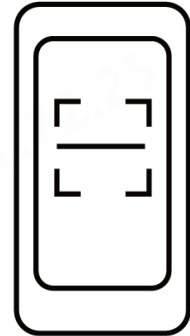

SSA1CM00014

Chapter 6 System Maintenance


6.1 Routine Maintenance

To ensure the long-term running of the equipment, you are advised to perform routine maintenance according to this section.

Inspection content	Inspection method	Power off or not	Maintenance cycle
System cleaning	Check the device regularly for shielding and dirt. If so, clean it up. Do not use tools that may cause electric shock or insulation damage, such as wire brushes and wet towels during the cleaning process.	Yes	Once every three months.
System running state	● Check whether the equipment is damaged or deformed. ● Listen for any abnormal noises during the operation of the equipment. ● When the equipment is running, check whether the equipment parameters are correctly set.	No	Once every six months.

6.2 Equipment Powering-on/Power-off

Tap "Setting" in mySigen App to turn on/off the device.

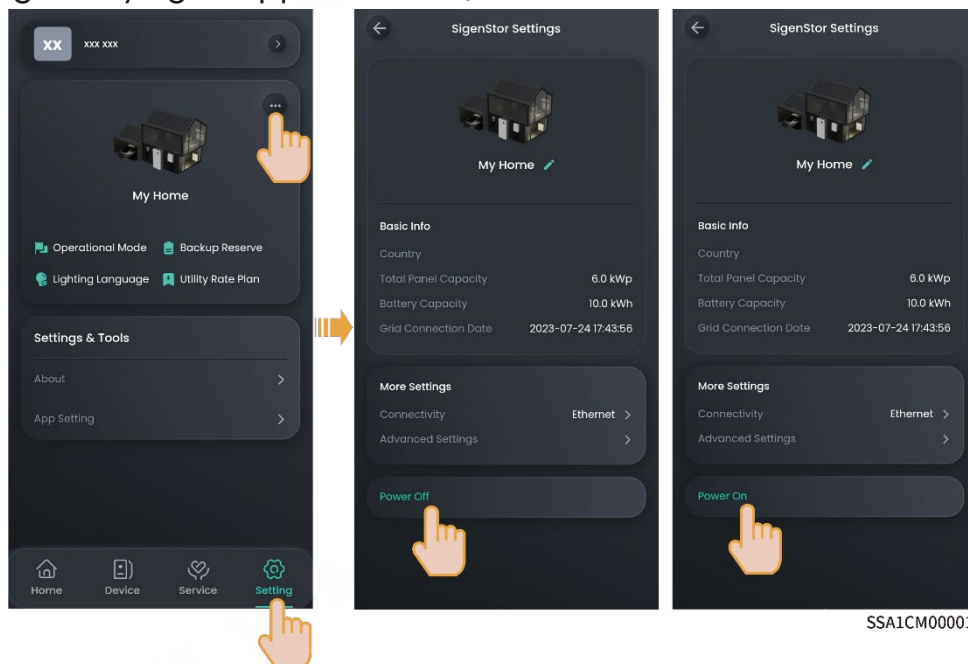

6.3 Emergency Treatment

Emergency Measures for Fire

Danger

- Please shut down the equipment or disconnect the main power switch when it is safe.
- If the fire is small, use carbon dioxide or ABC dry powder extinguisher to extinguish the fire.
- If the fire is spreading, evacuate the building or equipment area immediately and call the fire department. Re-entry to burning buildings is prohibited.
- Do not contact with high voltage components during fire fighting, otherwise it may lead to the risk of electric shock.
- After extinguishing the fire, do not use the equipment, please contact your sales agent.

Emergency Measures for Flood

Danger

- Please shut down the equipment or disconnect the main power switch when it is safe.
- After the flood waters recede, do not use the equipment. Please contact your sales agent.

Chapter 7 Appendix

7.1 Technical Parameter

For details about equipment parameters, see the Data sheets of the product.

Pollution degree: PD2, PD3;

The DVC class for the Communication Interface and RJ45 port 1&2 is DVC A, for DC&AC port is DVC C.

Environmental category: outdoor, indoor conditional, indoor unconditional;
backfeed current: 0A;

For SigenStor EC 3.0 SP or Sigen Hybrid 3.0 SP or Sigen PV Max 3.0 SP, the inrush current is 15.0 A, the Max. output overcurrent protection is 15.0 A, the Max. output fault current is 33.0 A;

Sigen Hybrid 3.6 SP or Sigen PV Max 3.6 SP, the inrush current is 16.0 A, the Max. output overcurrent protection is 16.0 A, the Max. output fault current is 35.2 A;
Sigen Hybrid 4.0 SP or Sigen PV Max 4.0 SP, the inrush current is 20.0 A, the Max. output overcurrent protection is 20.0 A, the Max. output fault current is 44.0 A;
Sigen Hybrid 4.6 SP or Sigen PV Max 4.6 SP, the inrush current is 21.7 A, the Max. output overcurrent protection is 21.7 A, the Max. output fault current is 50.0 A;

For SigenStor EC 5.0 SP or Sigen Hybrid 5.0 SP or Sigen PV Max 5.0 SP, the inrush current is 21.7 A, the Max. output overcurrent protection is 21.7 A, the Max. output fault current is 50.0 A;

For SigenStor EC 6.0 SP or Sigen Hybrid 6.0 SP or Sigen PV Max 6.0 SP, the inrush current is 30.0 A, the Max. output overcurrent protection is 30.0 A, the Max. output fault current is 66.0 A;